



GLOBAL


ZZ 1267


Extra heavy duty, drop feed zigOzag sewing
machine with top feed.

Spare parts manual


www.globalsew.com

info@globalsew.com

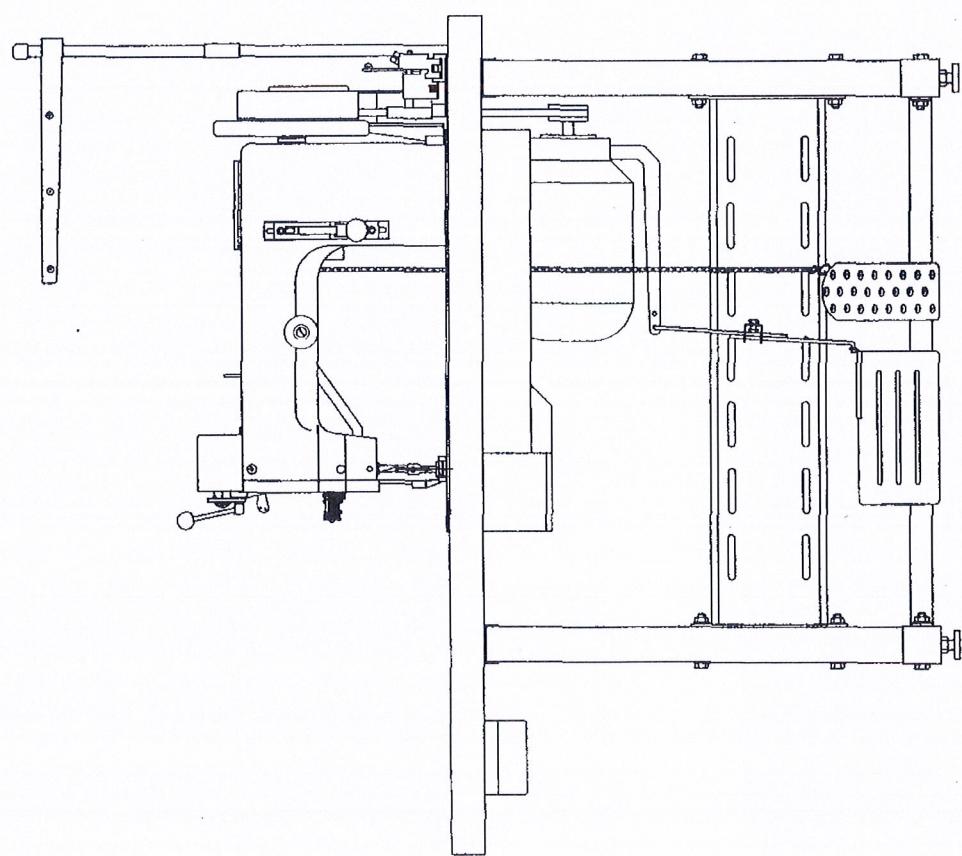


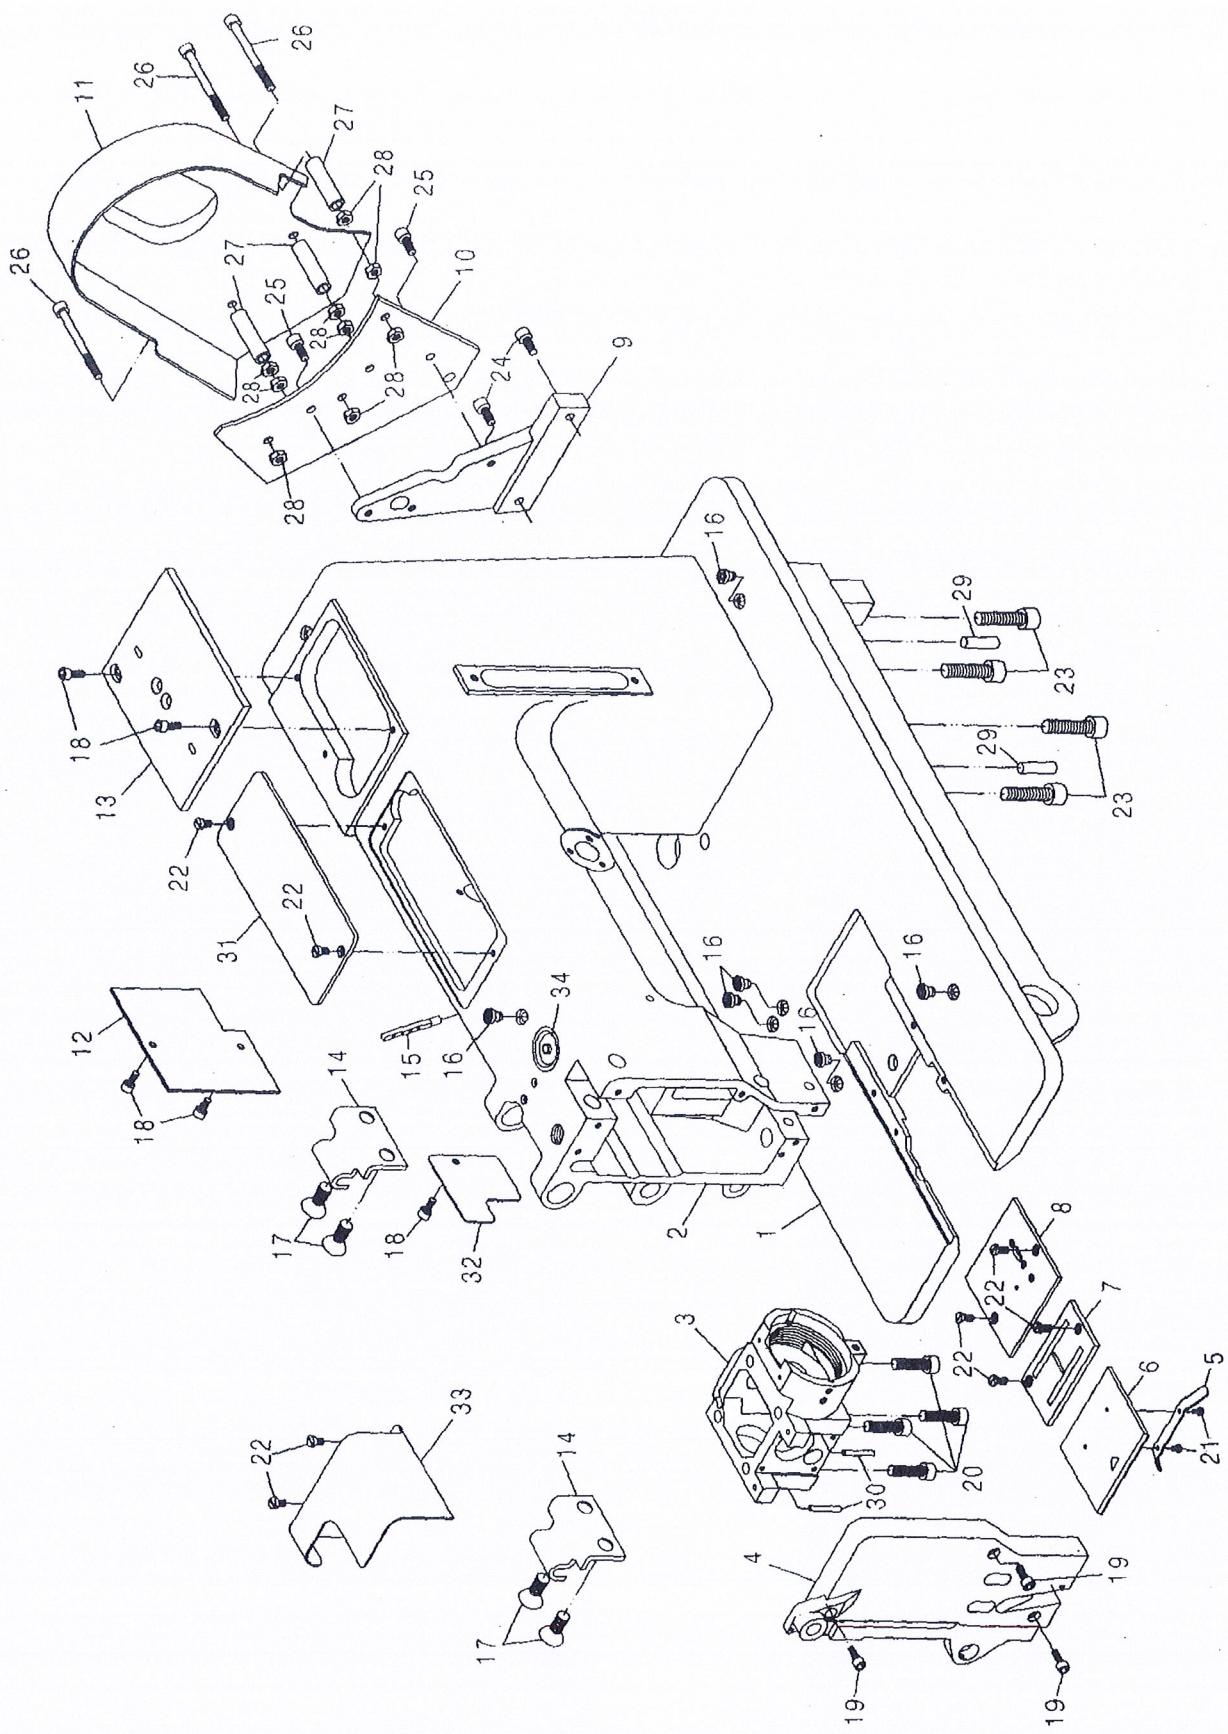


		Description
1	F0101	bottom plate — — —
2	SF0102	head case — — —
3	F0103	base of shuttle bed — — —
4	SF0104	face plate — — —
5	GW100	push pedal spring — — —
6	GK205	sliding plate (left) — — —
7	SF0107	needle plate — — —
8	GK206	connection board — — —
9	M0110	angle stand — — —
10	M0111	belt hood support — — —
11	M0112	belt hood — — —
12	SF0112	back cover — — —
13	GK201	upper cover plate — — —
14	GXR222	hinge 2 — — —
15	GX101	threading screw — — —
16	GK209A	small oil scal — — —
17	GS17520	screw — — —
18	GS13312	screw — — —
19	GS13316	screw — — —
20	GS13530	screw — — —
21	GS12104	screw — — —
22	GS172	screw — — —
23	GS13635	screw — — —
24	GS13420	screw — — —
25	GS13416	screw — — —
26	GS13480	screw — — —
27	GO100	belt hood screw saddle — — —
28	GL204	nut — — —
29	GS105	pin — — —
30	M0131	pin — — —
31	SF0131	upper cover plate — — —
32	SF0132	side plate (front) — — —
33	SF0133	hood — — —
34	GK208	big oil seal — — —

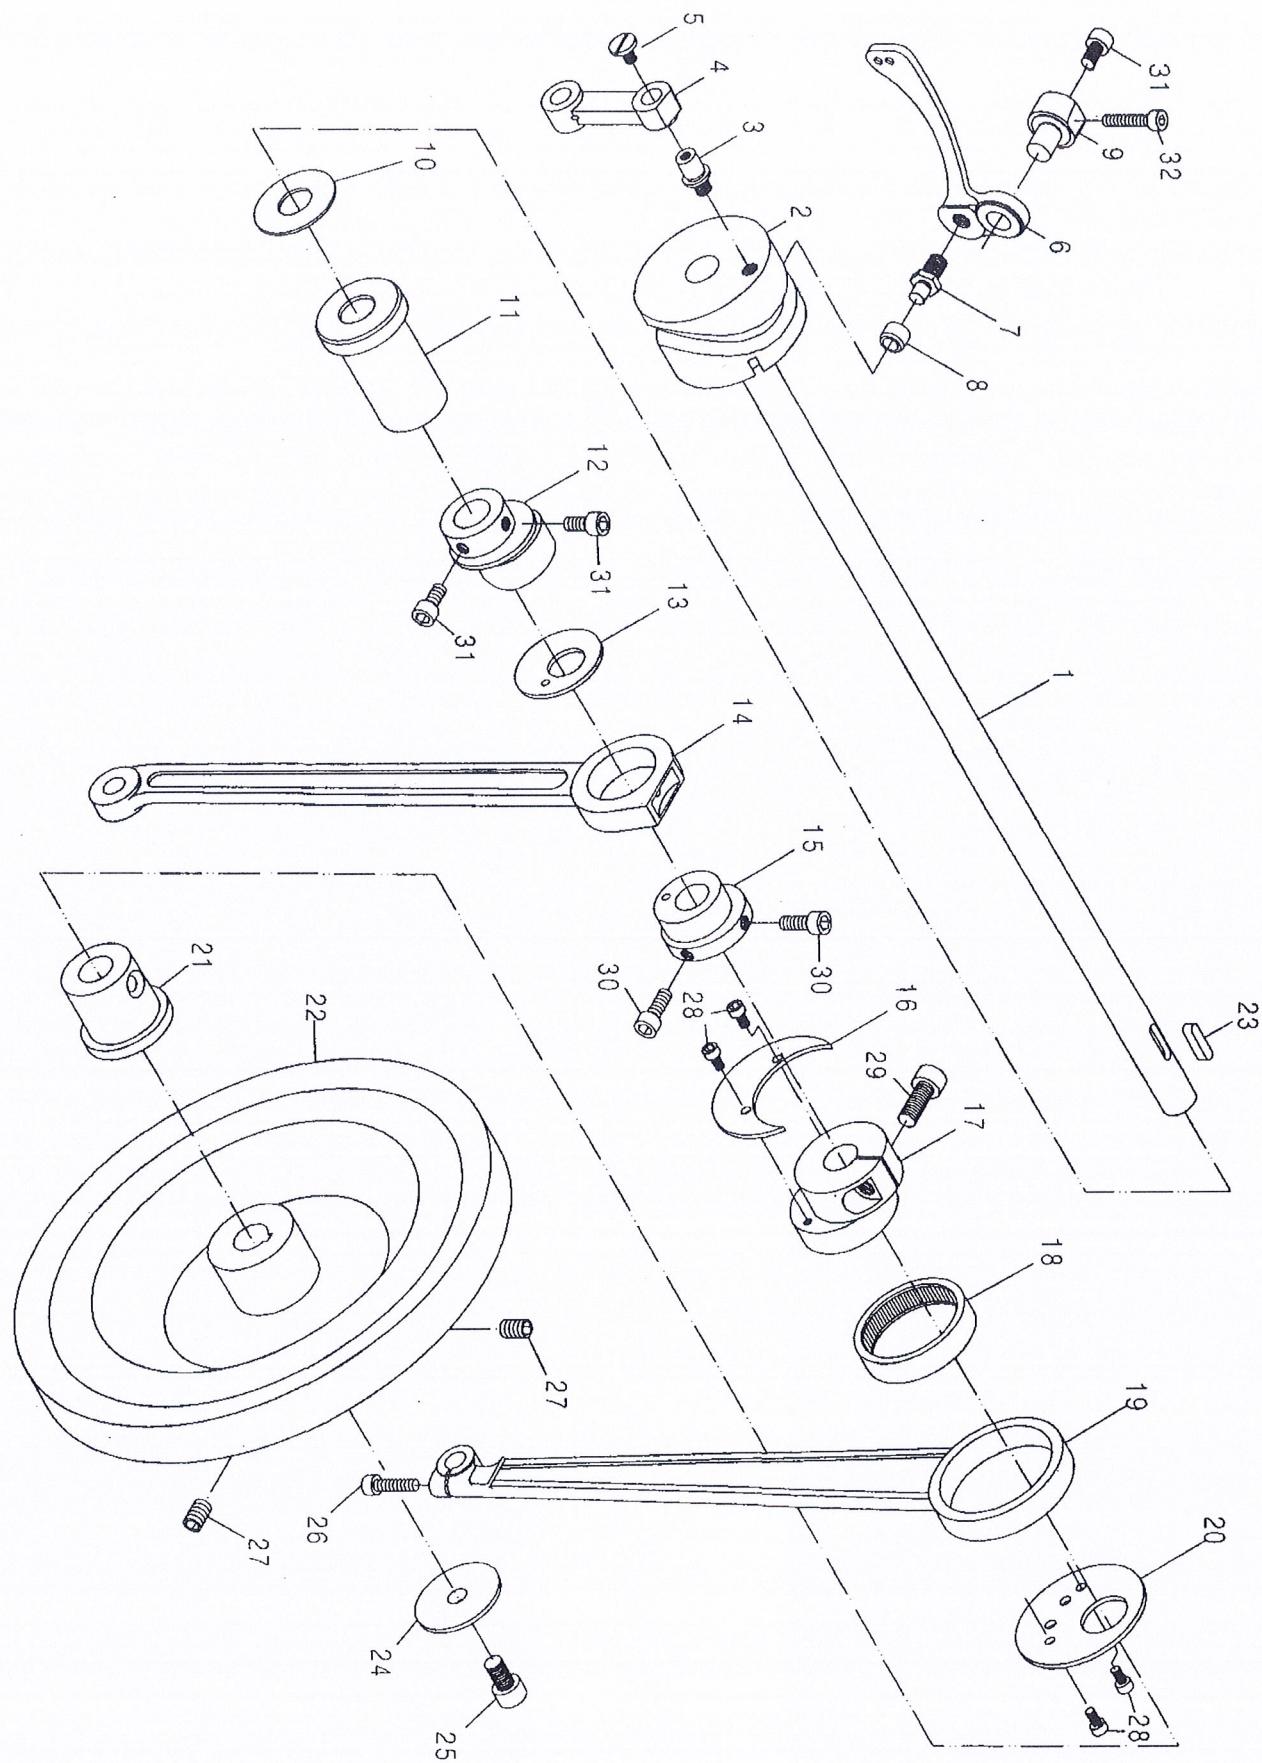


		Description
1	GZ107	upper shaft ---
2	F0202	thread take-up cam ---
3	F0203	screw ---
4	M0217	needle bar connecting rod ---
5	F0205	screw ---
6	M0212	thread take-up lever ---
7	GZ105	roller shaft ---
8	GU100	thread take-up roller ---
9	M0213	thread take-up shaft ---
10	GS215	washer ---
11	F0211	upper shaft (front) ---
12	M0218	cam ---
13	M0220	slide plate ---
14	M0221	feed dog lift connecting rod ---
15	M0222	feed dog lift eccentric ---
16	GK237	slide plate (B) ---
17	GO129	eccentric sleeve ---
18	HK4512	needle roller bearing ---
19	M0229	connecting rod ---
20	GK236	slide plate (A) ---
21	GO107	upper shaft (back) ---
22	M0207	pulley ---
23	GK216	upper shaft key ---
24	GK217	washer ---
25	GS13525	screw ---
26	GS13316	screw ---
27	GS11516	screw ---
28	GS13206	screw ---
29	GS13525	screw ---
30	GS13420	screw ---
31	GS13410	screw ---
32	GS13440	screw ---

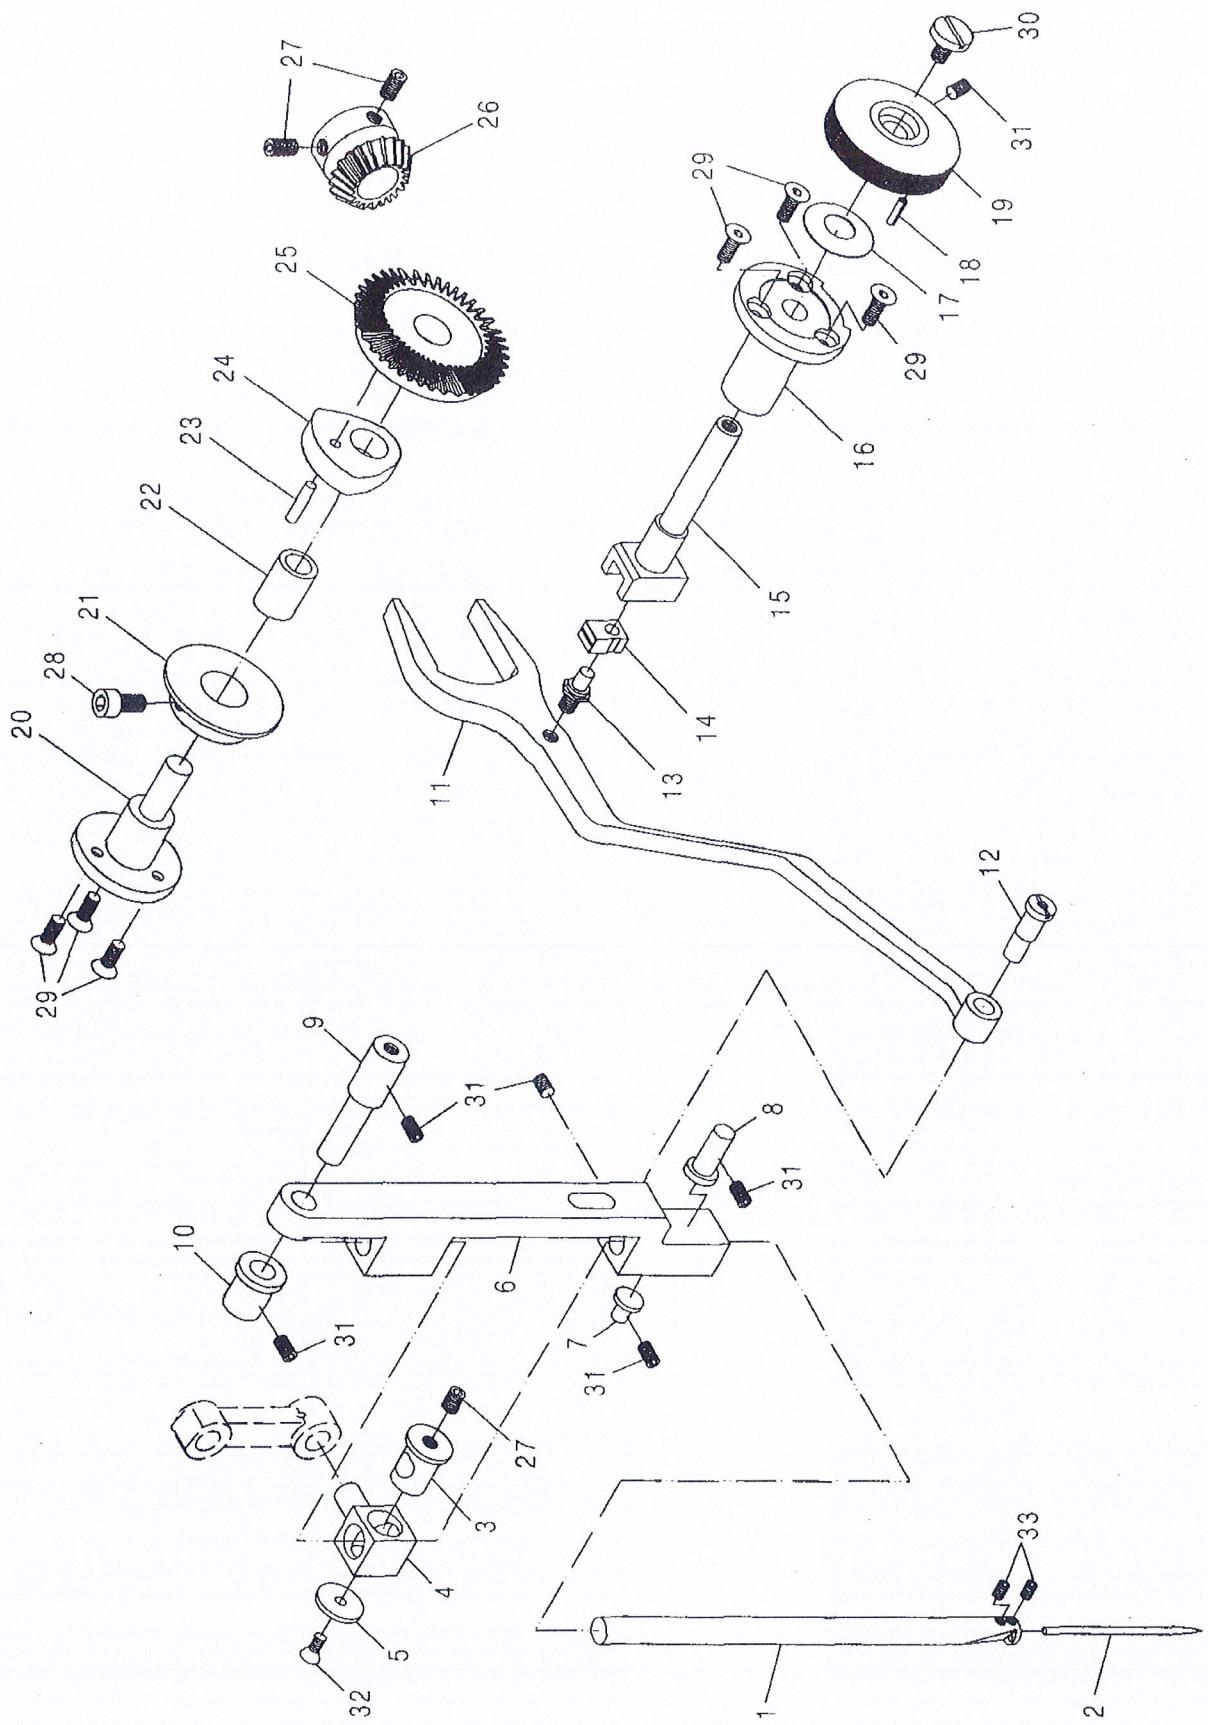

		Description	
1	F0301	needle bar	1
2	DYx3	needle	1
3	F0305	rotating bar link	1
4	F0304	needle bar connecting shaft	1
5	F0307	washer	1
6	F0309	pendulum stand	1
7	F0314	pin(left)	1
8	F0313	pin(right)	1
9	F0310	shaft of pendulum stand	1
10	F0311	bushing	1
11	104A07	fork	1
12	F0316	pin(1)	1
13	GZ136	pin	1
14	GU111	copper slider	1
15	104A09	block pin	1
16	104A10	block pin set	1
17	GR254	string slice	1
18	M0330	split pin	1
19	104A11	button	1
20	104A05	shaft	1
21	104A06	split stop ring	1
22	104A04	bushing	1
23	104A23	pin	1
24	104A03	cam	1
25	104A02	clear	1
26	104A01	clear	1
27	GS11410	screw	3
28	GS13416	screw	1
29	GS16212	screw	6
30	GS153	screw	1
31	GS11305	screw	6
32	GS16208	screw	1
33	GS11205	screw	2

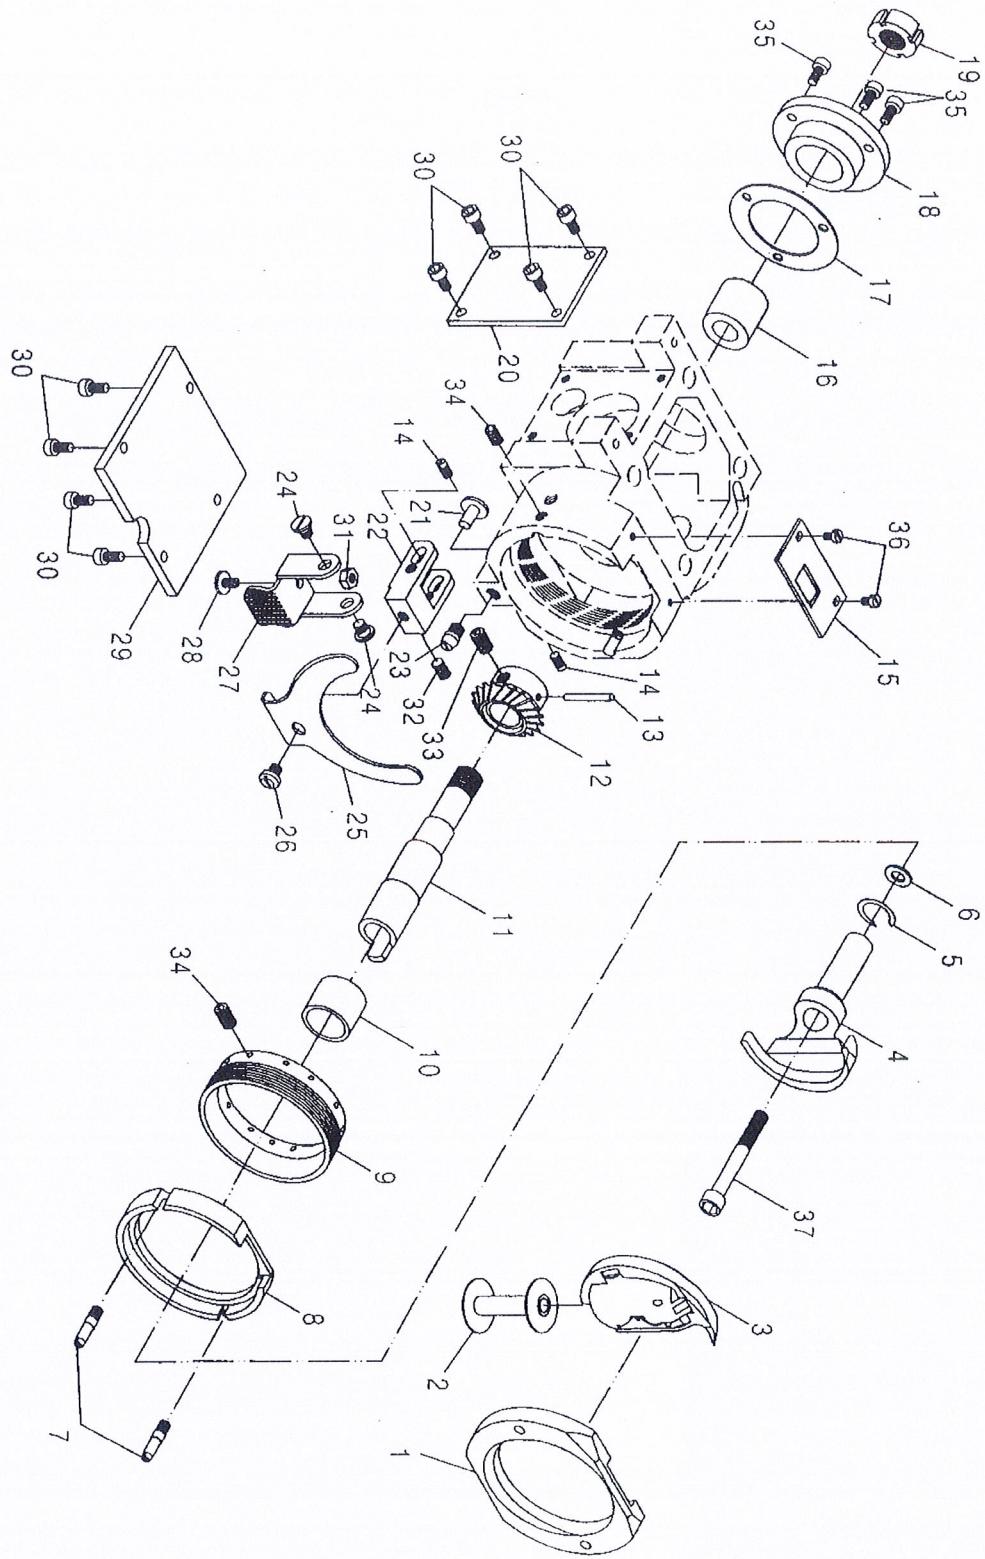


		Description
1	F0401	bobbin bed cover
2	GN116	bobbin
3	GN111/9	shuttle hook
4	M0405	shuttle support
5	M0406	washer
6	M0407	washer
7	M0408	screw
8	F0408	bobbin bed
9	M0410	shuttle set
10	M0412	front shaft bushing
11	M0413	shaft
12	M0414	right helix bevel gear
13	M0415	pin
14	GX110	screw
15	F0415	needle protecting board
16	M0419	back shaft bushing
17	M0420	washer
18	M0421	bushing
19	M0423	nut
20	M0424	side plate
21	GX108	pin
22	GK241	bobbin bed press stand
23	GX109	screw
24	GX112	screw
25	GW111	pressing spring
26	GX117	screw
27	GK243	press stand spanner
28	GX113	screw
29	M0437	cover
30	GS13210	screw
31	GL203	screw
32	GS102	nut
33	GS11406	screw
34	GS11306	screw
35	GS13216	screw
36	GS12104	screw
37	GS13460	screw
		0.2, 0.3, 0.5

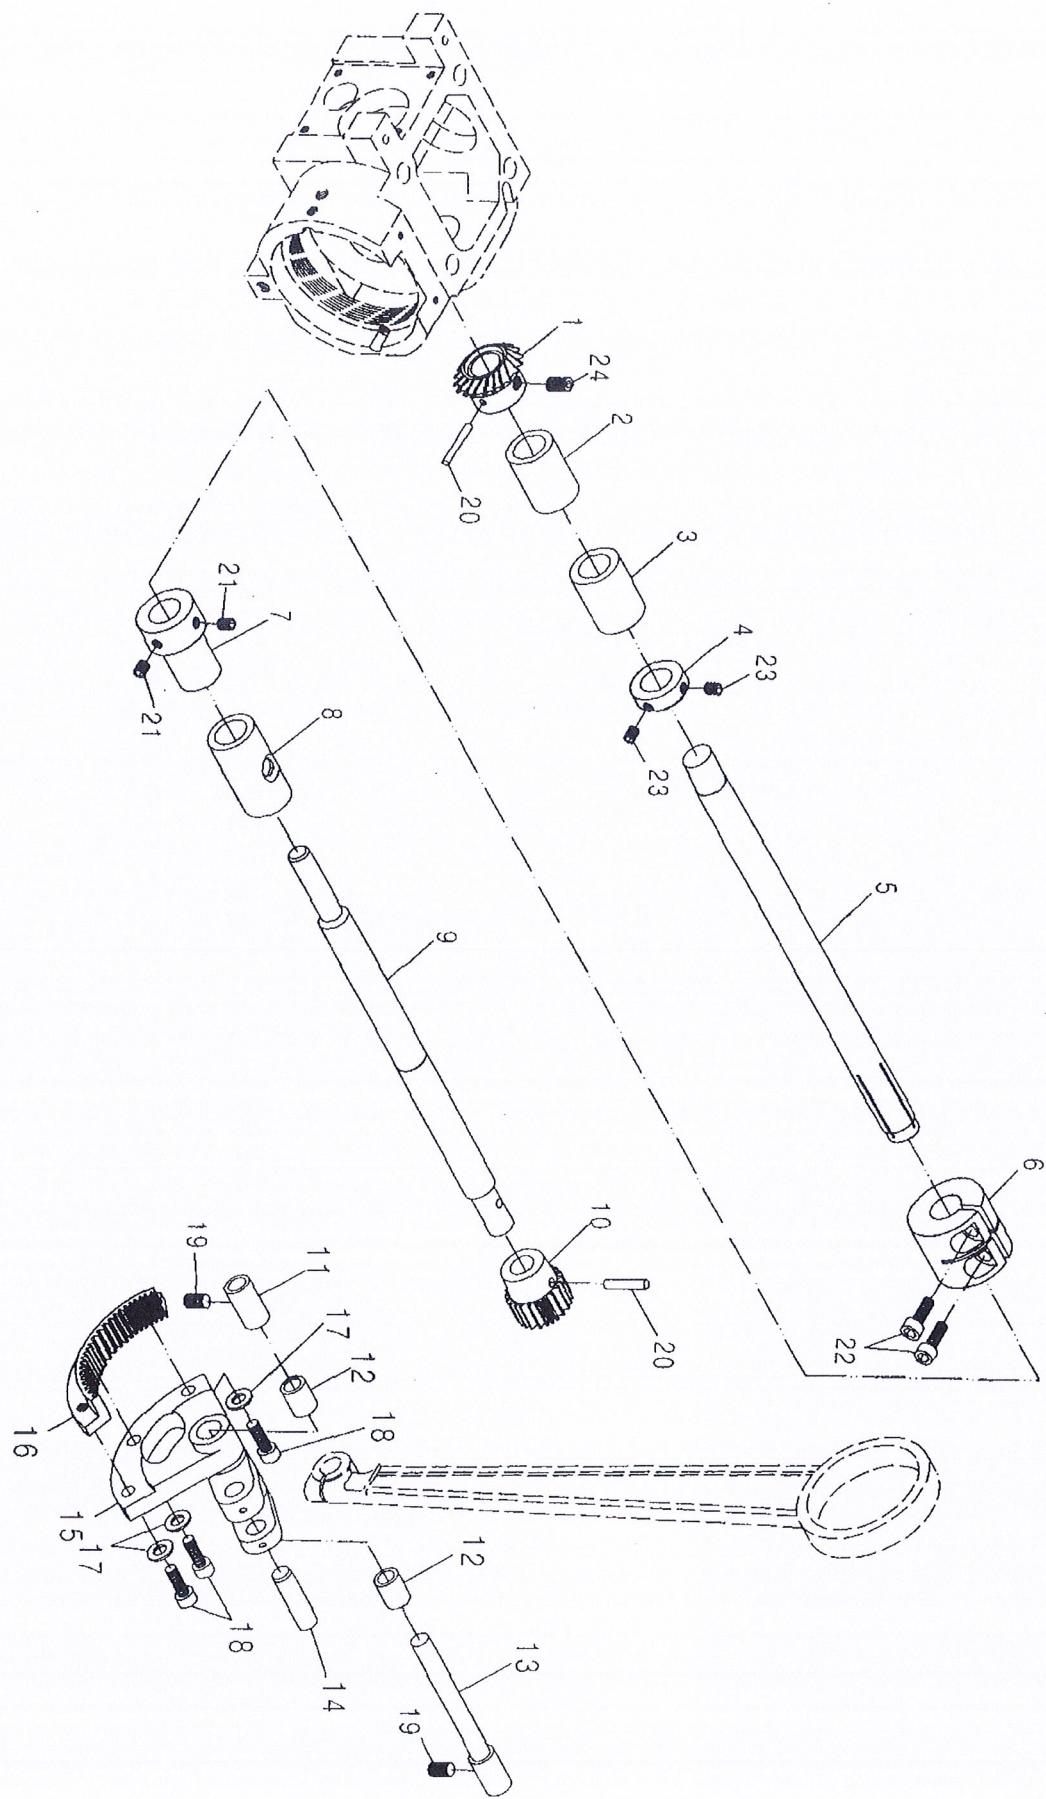


Description

1	M0501	---	left helix bevel gear	---	---	---	---	1
2	M0504	---	front shaft bushing	---	---	---	---	1
3	M0505	---	back shaft bushing	---	---	---	---	1
4	M0506	---	blocking ring of lower shaft	---	---	---	---	1
5	M0508	---	lower shaft	---	---	---	---	1
6	M0509	---	tight ring of lower shaft	---	---	---	---	1
7	M0512	---	blocking ring of lower shaft	---	---	---	---	1
8	M0513	---	back shaft bushing	---	---	---	---	1
9	GZ112	---	lower shaft (1)	---	---	---	---	1
10	GP107	---	small gear of lower shaft	---	---	---	---	1
11	GO130	---	bushing	---	---	---	---	1
12	GO132	---	bushing	---	---	---	---	2
13	M0522	---	swinging shaft	---	---	---	---	1
14	GZ128	---	shaft	---	---	---	---	1
15	M0524	---	pendulum axle stand	---	---	---	---	1
16	GP106	---	gear	---	---	---	---	1
17	M0519	---	washer	---	---	---	---	3
18	GS13318	---	screw	---	---	---	---	3
19	GS10414	---	screw	---	---	---	---	2
20	M0415	---	pin	---	---	---	---	2
21	GS11406	---	screw	---	---	---	---	2
22	GS13416	---	screw	---	---	---	---	2
23	GS11306	---	screw	---	---	---	---	2
24	GS11406	---	screw	---	---	---	---	1

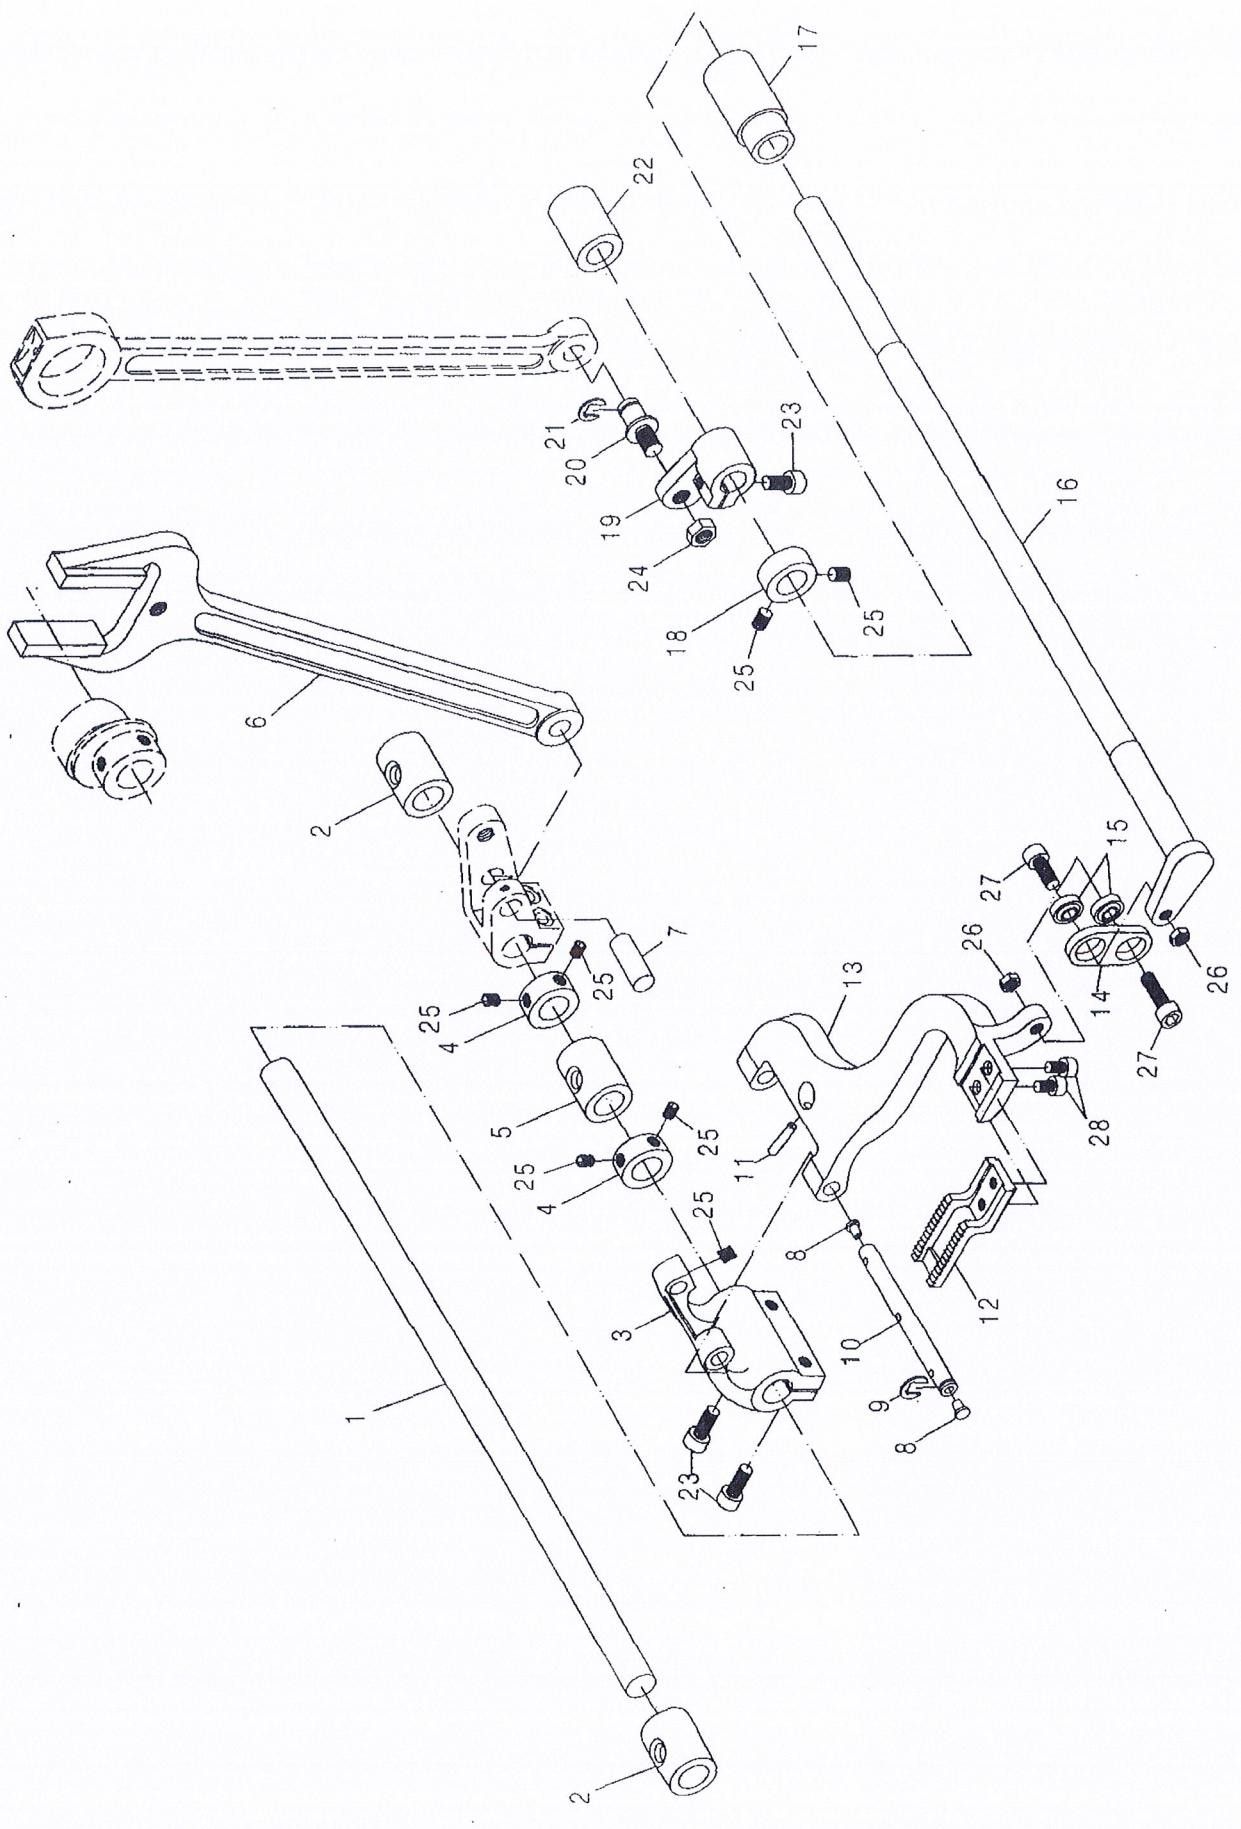


		Description
1	M0601	--- bottom feeding shaft --- --- --- --- --- 1
2	M0602	--- back bushing of feeding shaft --- --- --- --- --- 2
3	M0604	--- front feeding crank --- --- --- --- --- 1
4	M0605	--- blocking ring of feeding axle --- --- --- --- --- 2
5	M0607	--- front bushing of feeding shaft --- --- --- --- --- 1
6	GH125	--- teeth fork --- --- --- --- --- 1
7	GZ128	--- pin shaft --- --- --- --- --- 1
8	M0614	--- small oil seal --- --- --- --- --- 2
9	M0615	--- E-shaped snap spring --- --- --- --- --- 1
10	M0616	--- shaft of tooth-shelf --- --- --- --- --- 1
11	M0617	--- oil pipe joint --- --- --- --- --- 1
12	SF0612	--- feed dog --- --- --- --- --- 1
13	M0621	--- shelf --- --- --- --- --- 1
14	M0624	--- connection board --- --- --- --- --- 1
15	M0623	--- bearing --- --- --- --- --- 2
16	M0627	--- tooth-lifting axle --- --- --- --- --- 1
17	M0626	--- front shaft bushing --- --- --- --- --- 1
18	M0605	--- lifting tooth axle retaining ring --- --- --- --- --- 1
19	M0628	--- crank --- --- --- --- --- 1
20	M0631	--- pin shaft --- --- --- --- --- 1
21	M0632	--- E-shaped snap spring --- --- --- --- --- 1
22	M0625	--- back shaft bushing --- --- --- --- --- 1
23	GS13416	--- screw --- --- --- --- --- 3
24	M0630	--- nut --- --- --- --- --- 1
25	GS11406	--- screw --- --- --- --- --- 7
26	M0620	--- nut --- --- --- --- --- 2
27	GS13420	--- screw --- --- --- --- --- 2
28	GS13308	--- screw --- --- --- --- --- 2

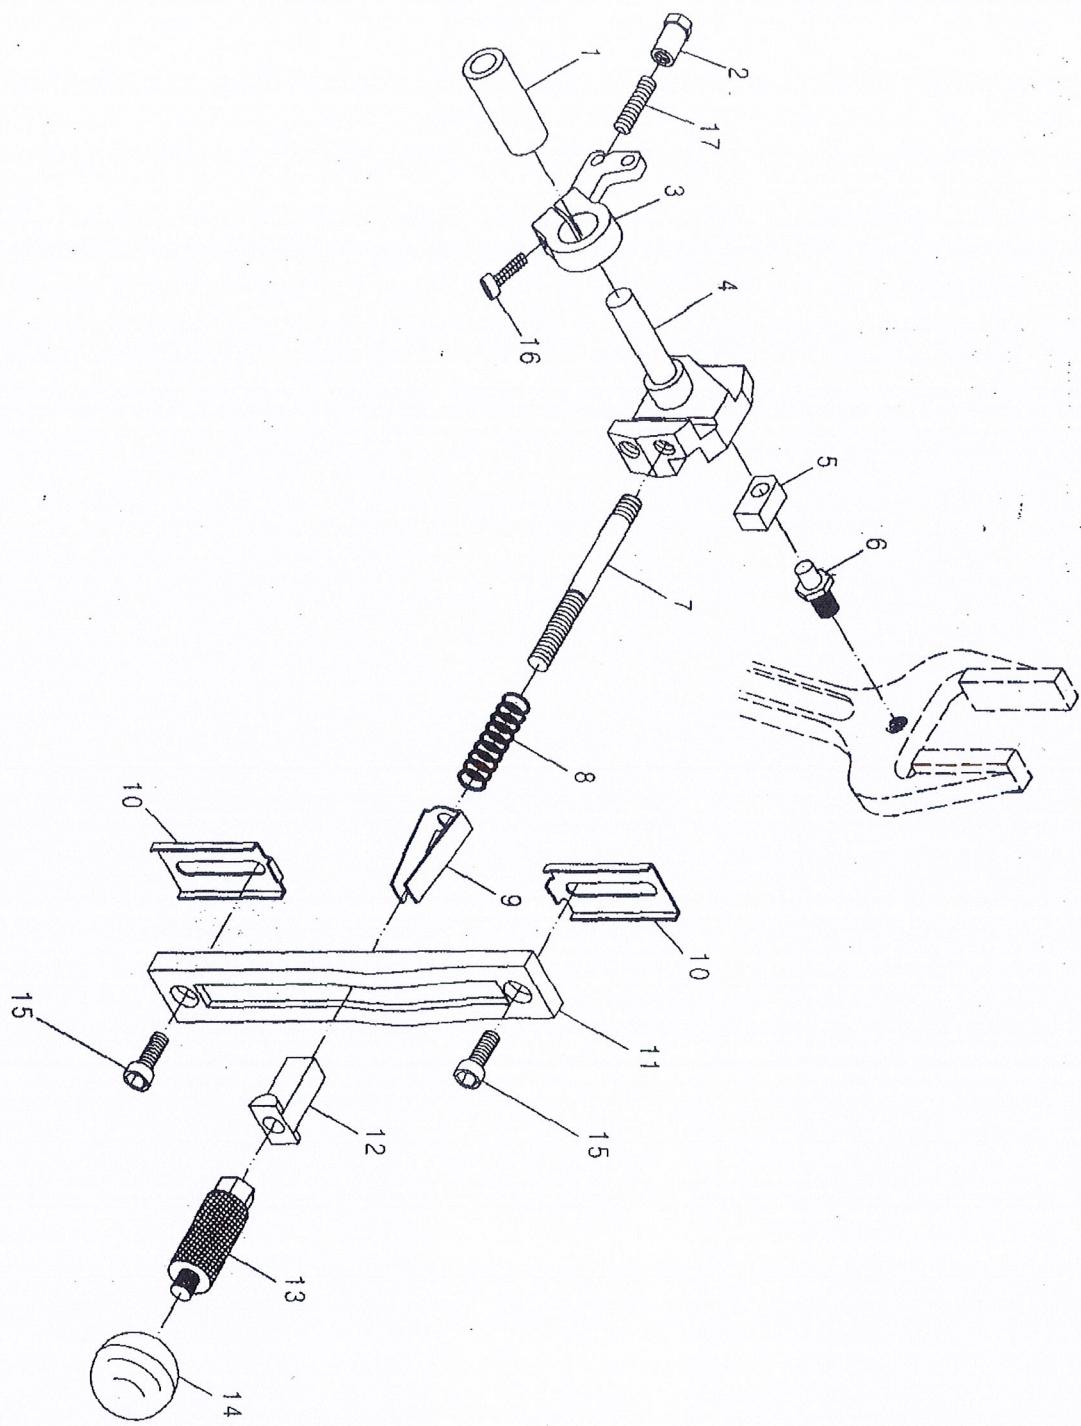


		Description
1	G01120	shaft bushing --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
2	GL204	nut --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
3	GK249	stitch seat fixed stand --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
4	GK246	stitch support --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
5	GK245	sliding block --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
6	GZ129	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
7	GZ130	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
8	GW210	spring --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
9	GW209	stitch screw sleeve levf --- --- --- --- --- --- --- --- --- --- --- --- --- ---
10	GK248	stitch spacing board --- --- --- --- --- --- --- --- --- --- --- --- ---
11	GKS105	stitch cover plate --- --- --- --- --- --- --- --- --- --- --- --- ---
12	GZ131	stitch spacing sleeve --- --- --- --- --- --- --- --- --- --- --- --- ---
13	GZ132	stitch regulation screw sleeve --- --- --- --- --- --- --- --- --- ---
14	GKS247	stitch handle ball --- --- --- --- --- --- --- --- --- --- --- --- ---
15	GS13416	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
16	GS13320	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---
17	GS11425	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- ---


16

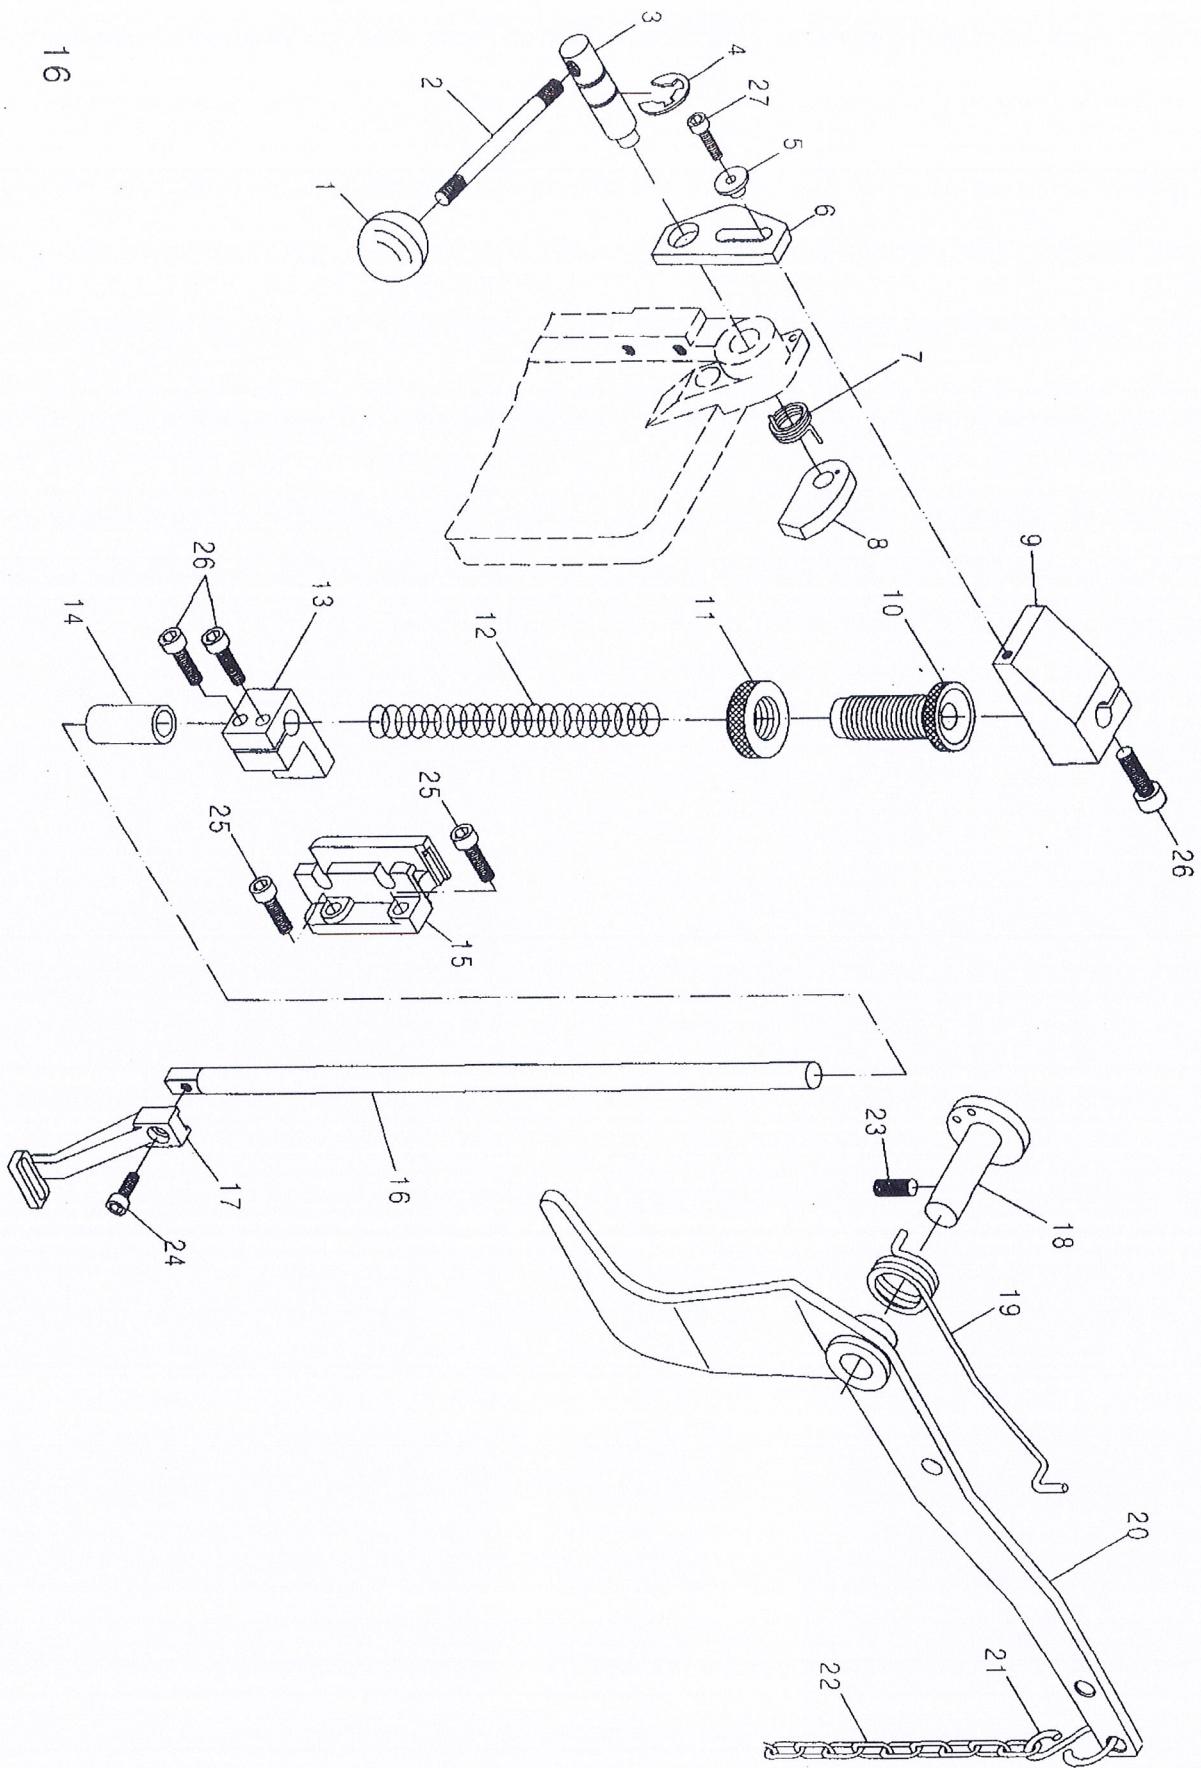


		Description
1	GZS139	uplifting presser handle ball ---
2	GZ138	uplifting handle bar --- --- ---
3	M0805	shaft --- --- --- --- ---
4	GW211	uplifting handle axle jump ring ---
5	M0804	thread loosing sleeve --- --- ---
6	F0822	thread releasing plate (2) --- ---
7	GW217	uplifting presser spring --- ---
8	M0802	eccentric slice --- --- ---
9	M0312	block --- --- --- --- ---
10	GZ125	pressure regulated screw --- ---
11	M0314	nut --- --- --- --- ---
12	GW201	presser bar spring --- ---
13	M0310	setting block of pressing rod ---
14	M0307	pressing rod lower bushing ---
15	GK226	presser lifting locating slideway ---
16	M0309	presser bar --- --- --- ---
17	SF0817	presser foot --- --- --- ---
18	SF0818	uplifting presser lever shaft ---
19	GW212	lever torsional storing --- ---
20	SF0820	uplifting presser lever --- ---
21	GD0911	lifting lever finger --- ---
22	GD0912	presser lifting bar --- ---
23	GS11410	screw --- --- --- ---
24	GS13210	screw --- --- --- ---
25	GS13325	screw --- --- --- ---
26	GS13420	screw --- --- --- ---
27	GS13216	screw --- --- --- ---

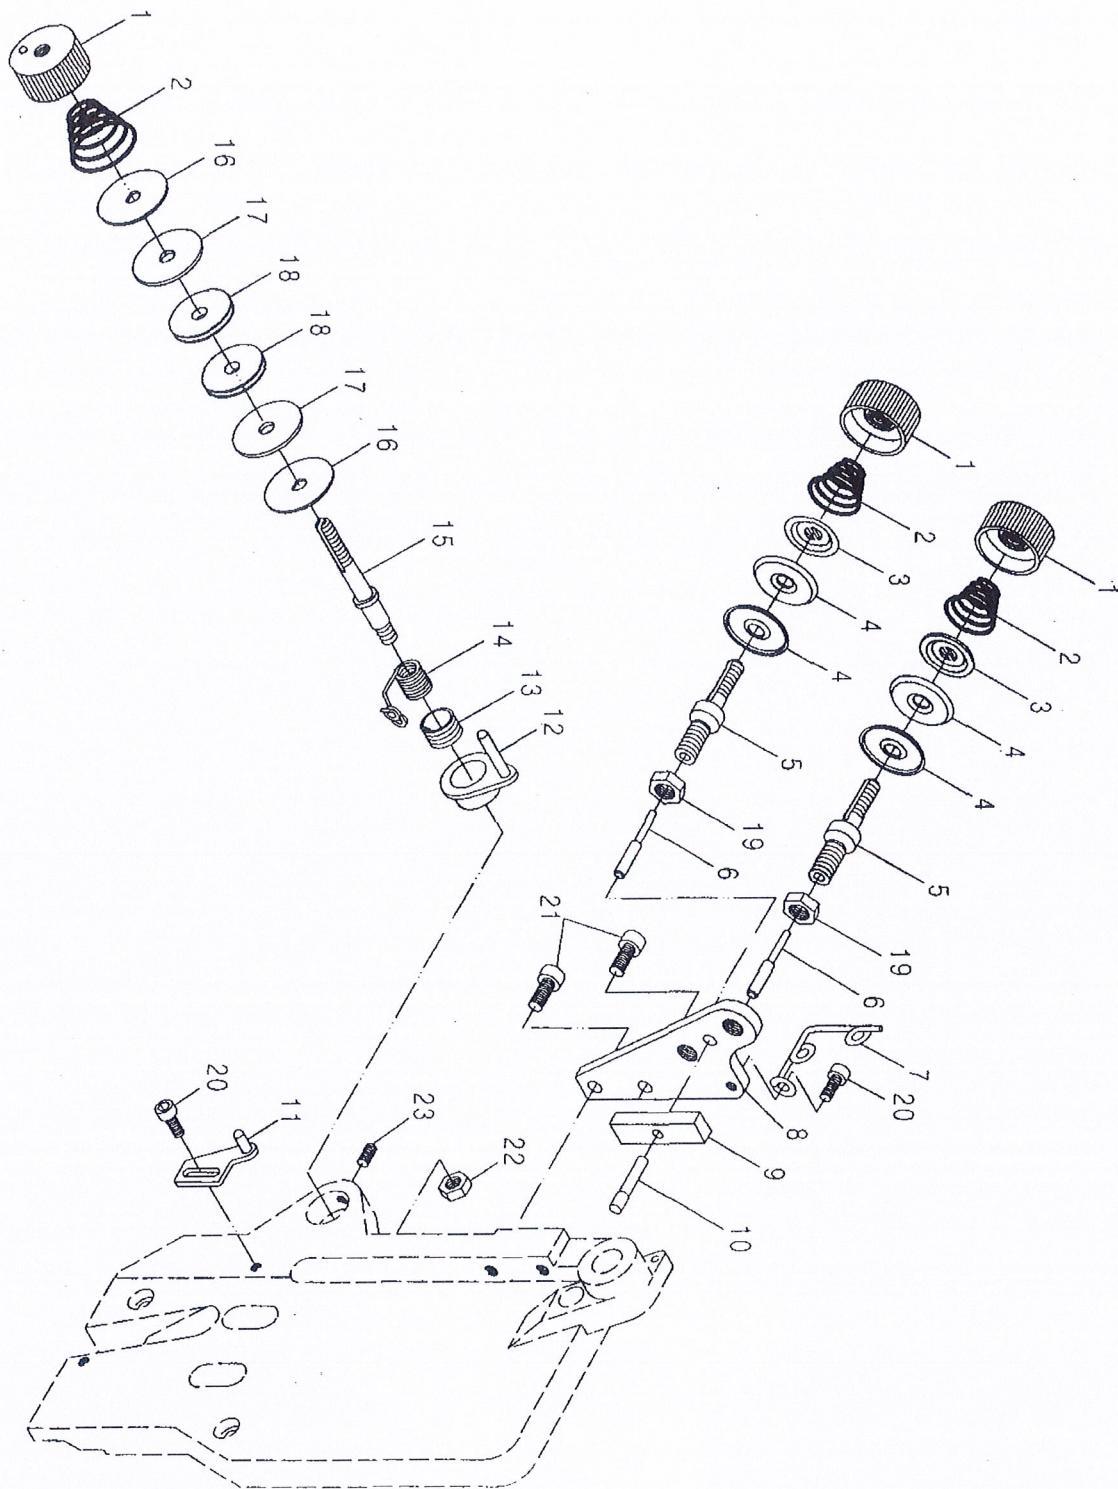


		Description
1	GLS204	tension nut --- --- --- --- --- --- 3
2	GW115	--- --- thread tension spring --- --- --- --- --- --- 3
3	GK232	--- --- thread releasing plate --- --- --- --- --- --- 2
4	GK231	--- --- tension plate --- --- --- --- --- --- 4
5	GZ126	--- --- tension screw --- --- --- --- --- --- 2
6	GX106	--- --- loosen bolt --- --- --- --- --- --- 2
7	M0908	--- --- thread passing ring --- --- --- --- --- --- 1
8	M0910	--- --- thread tension rack --- --- --- --- --- --- 1
9	M0911	--- --- thread releasing plate --- --- --- --- --- --- 1
10	M0912	--- --- pin --- --- --- --- --- --- --- 1
11	GKS108	--- --- drawing stand --- --- --- --- --- --- 1
12	GKS107	--- --- thread passing seat --- --- --- --- --- --- 1
13	GC0814	--- --- thread take-up soring --- --- --- --- --- --- 1
14	M0922	--- --- thread take-up spring --- --- --- --- --- --- 1
15	M0925	--- --- tension screw --- --- --- --- --- --- 1
16	GK233	--- --- thread passing plate --- --- --- --- --- --- 2
17	GK234	--- --- washer --- --- --- --- --- --- 2
18	GP102	--- --- thread passing wheel --- --- --- --- --- --- 2
19	GL205	--- --- nut --- --- --- --- --- --- 2
20	GS13208	--- --- screw --- --- --- --- --- --- 1
21	GS13316	--- --- screw --- --- --- --- --- --- 2
22	M0913	--- --- nut --- --- --- --- --- --- 1
23	GS11206	--- --- screw --- --- --- --- --- --- 1

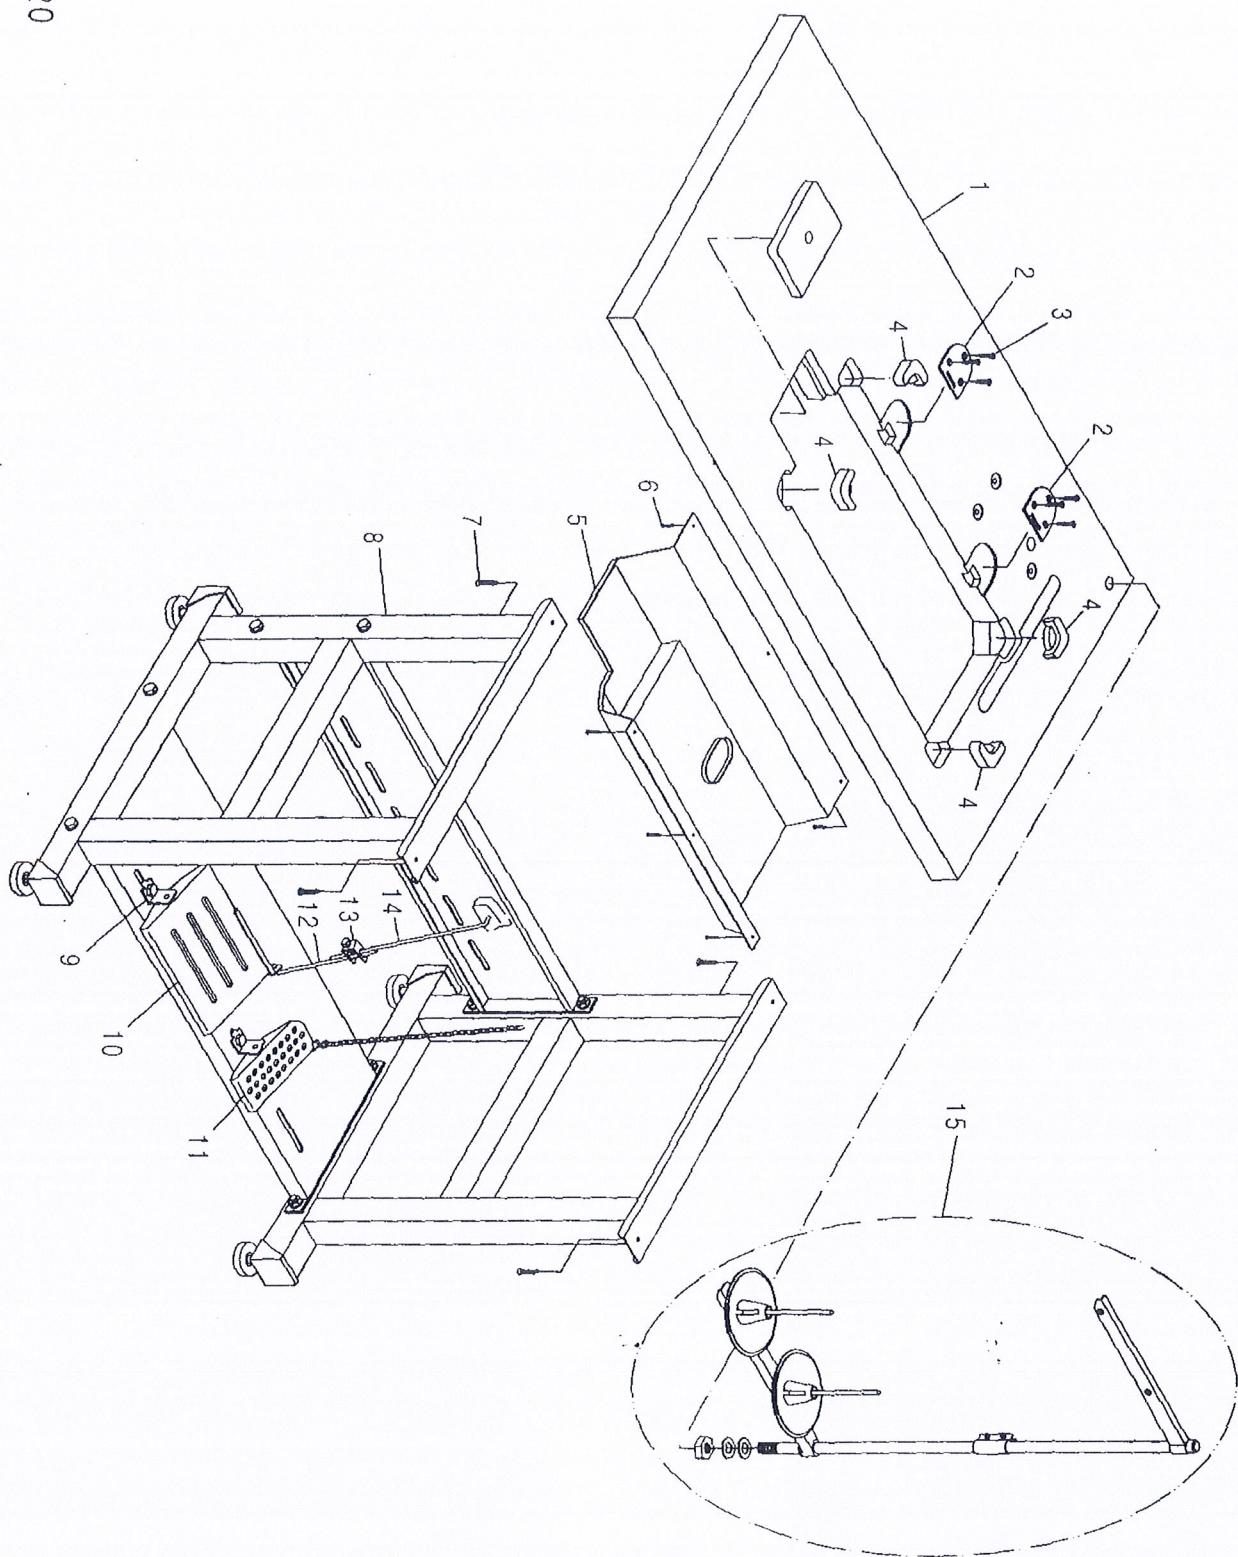

		Description
1	GKR221	table --- --- --- --- --- --- --- --- --- --- --- --- --- --- --- 1
2	GKR200	hinge --- --- --- --- --- --- --- --- --- --- --- --- --- --- 2
3	GC1005	screw --- --- --- --- --- --- --- --- --- --- --- --- --- --- 6
4	GC1004	rubber cushion --- --- --- --- --- --- --- --- --- --- --- --- --- 4
5	GKR216	oil pan --- --- --- --- --- --- --- --- --- --- --- --- --- 1
6	GBS112	screw --- --- --- --- --- --- --- --- --- --- --- --- --- 6
7	GC1021	screw --- --- --- --- --- --- --- --- --- --- --- --- --- 4
8	M1010	stand --- --- --- --- --- --- --- --- --- --- --- --- --- 1
9	GKR184	footstep axle seat --- --- --- --- 4
10	GKR182	pedal --- --- --- --- --- --- --- --- 1
11	GKR111	pedal --- --- --- --- --- --- --- --- 1
12	GKR116	lower rod of clutch motor --- --- 1
13	GKR183	rod adjusting device --- --- --- 1
14	GKR118	upper rod of clutch motor --- --- 1
15	M1014	thread stand --- --- --- --- 1

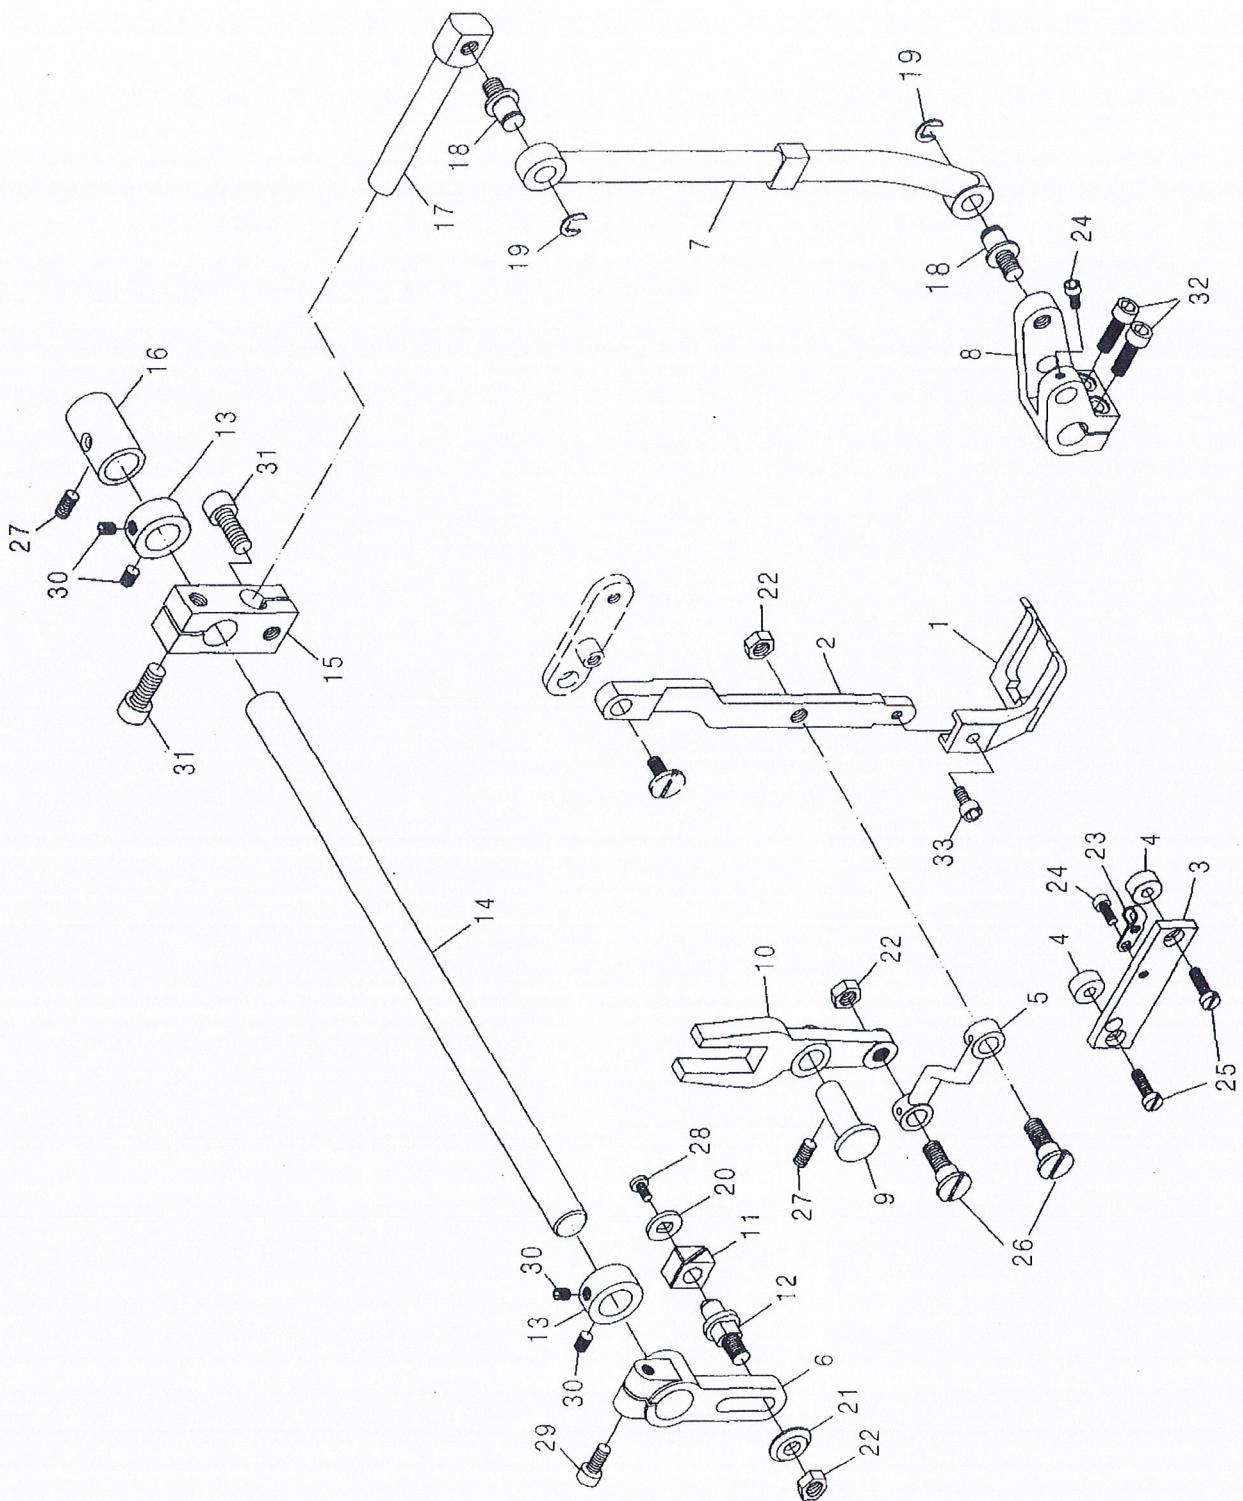

		Description
1	SF1201	walking foot — — — — —
2	SF1202	walking foot rod — — — — —
3	SF1203	guide plate — — — — —
4	SF1204	cushion — — — — —
5	SF1205	link shaft — — — — —
6	SF1206	front crank — — — — —
7	SF1207	connecting rod — — — — —
8	SF1208	back feeding cront — — — — —
9	GX123	pin — — — — —
10	GH148	fork-rod of swinging pressing foot — — — — —
11	GU119	crank slide block — — — — —
12	GU120	screw of slide block of pressing foot — — — — —
13	GK254	upper feeding axle retainer axle — — — — —
14	GZ120	upper feeding axle — — — — —
15	GH152	upper feeding back crank seat — — — — —
16	GO124	upper feeding axle back axle sleeve — — — — —
17	GK254	upper feeding adjustment bar — — — — —
18	GZ133	upper feeding connecting pin — — — — —
19	GW205	upper feeding connecting pin jump ring — — — — —
20	GU110	washer — — — — —
21	GR245	washer — — — — —
22	GL106	nut — — — — —
23	GC0819	finger — — — — —
24	GS13208	screw — — — — —
25	GS13318	screw — — — — —
26	GS180	screw — — — — —
27	GS11410	screw — — — — —
28	GS212	screw — — — — —
29	GS13416	screw — — — — —
30	GS11406	screw — — — — —
31	GS13520	screw — — — — —
32	GS13420	screw — — — — —
33	GS13312	screw — — — — —

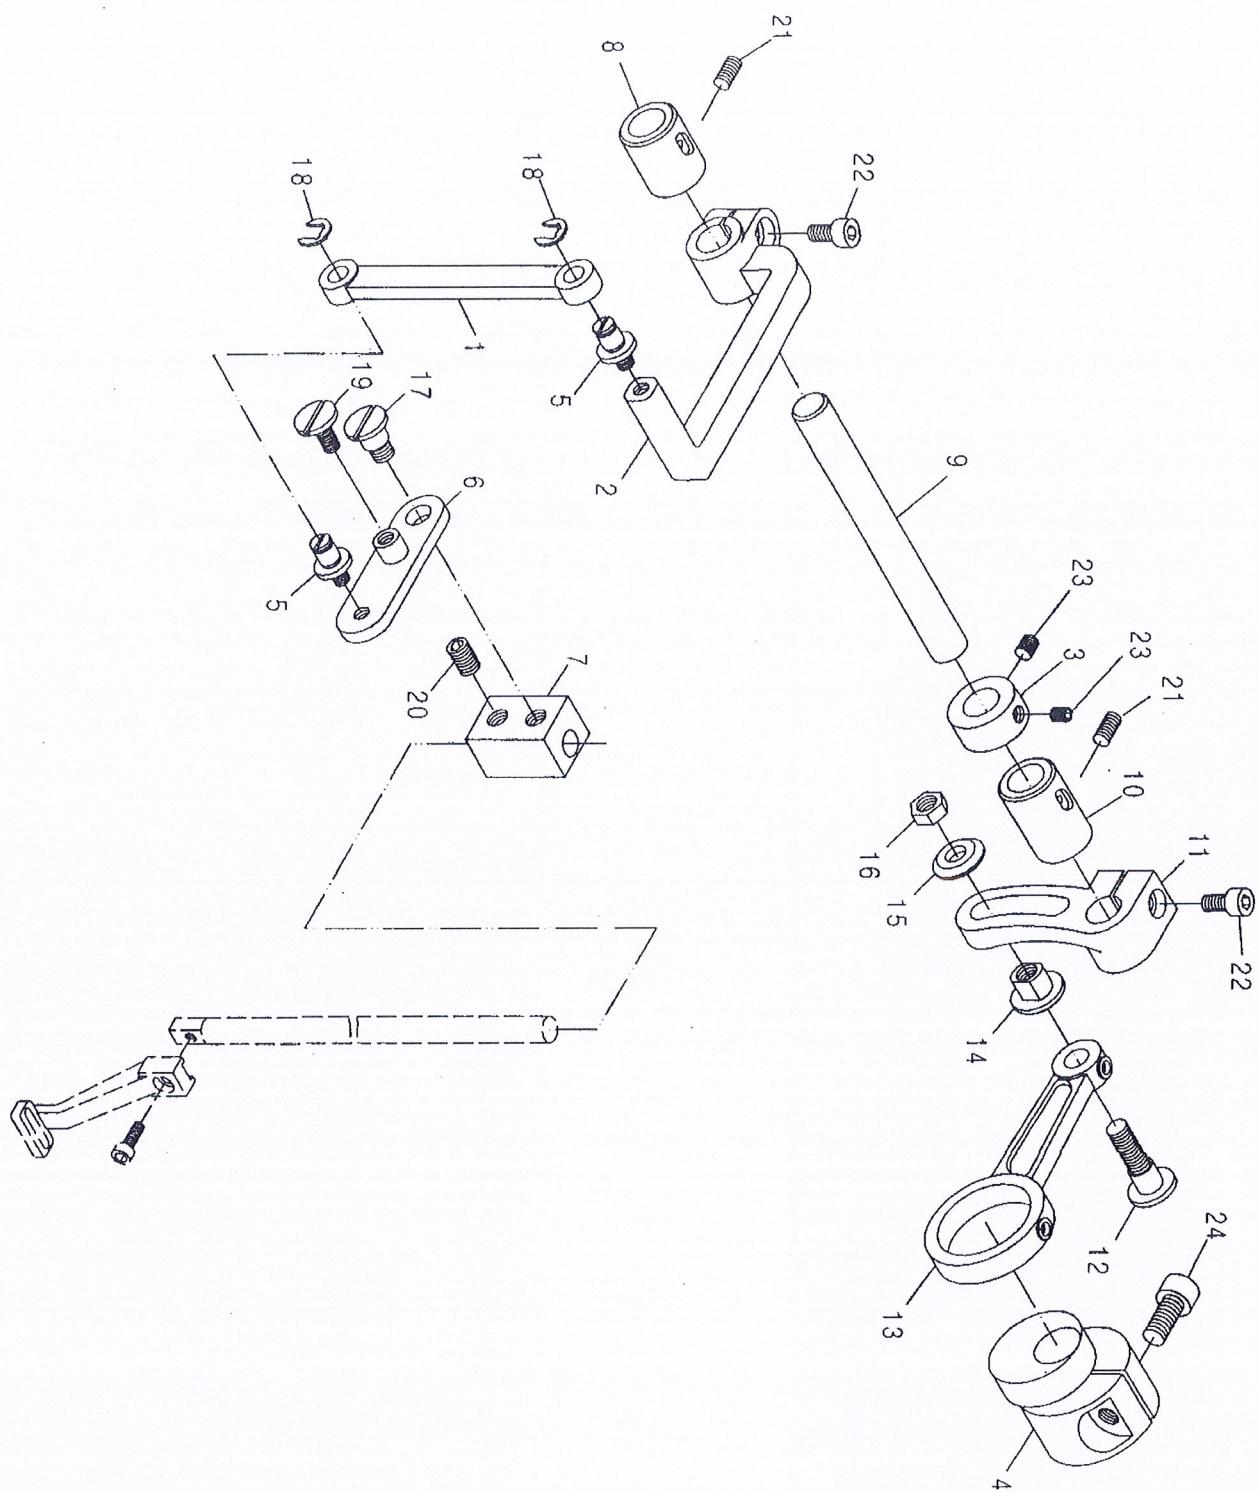

		Description
1	SF1301	large connecting rod --- --- --- --- --- 1
2	SF1302	pressing foot front crank --- --- --- --- --- 1
3	SF1303	blocking ring --- --- --- --- --- 1
4	SF1304	presser foot lift cam --- --- --- --- --- 1
5	SF1305	screw --- --- --- --- --- 2
6	SF1306	pressing foot lifting rocking board --- --- --- --- --- 1
7	SF1307	sliding block --- --- --- --- --- 1
8	GO127	pressing foot lifting shaft front sleeve --- --- --- --- --- 1
9	GZ122	pressing foot lift shaft --- --- --- --- --- 1
10	GO126	pressing foot lifting shaft back sleeve --- --- --- --- --- 1
11	GH146	pressing foot lifting adjusting back crank --- --- --- --- --- 1
12	GS150	screw --- --- --- --- --- 1
13	GD0606	large pressing foot lifting connecting rod --- --- --- --- --- 1
14	GL108	nut --- --- --- --- --- 1
15	GR245	washer --- --- --- --- --- 1
16	GL106	nut --- --- --- --- --- 1
17	GS181	screw --- --- --- --- --- 1
18	GW206	E-type --- --- --- --- --- 2
19	GS153	screw --- --- --- --- --- 1
20	GS10508	screw --- --- --- --- --- 1
21	GS11410	screw --- --- --- --- --- 2
22	GS13416	screw --- --- --- --- --- 2
23	GS11406	screw --- --- --- --- --- 2
24	GS13520	screw --- --- --- --- --- 1