

使 用 说 明 / 零 件 手 册

441/471型综合 / 上下摆臂式切削机

OPERATING INSTRUCTIONS/PARTS LIST TOR

使用说明 Operation Instruction

1 机器简介 BRIEF INTRODUCTION (1)
2 主要技术规格 MAIN SPECIFICATIONS (1)
3 操作准备 OPERATION PREPARATION (2)
4 安装电机 INSTALLING THE MOTOR (2)
5 安装皮带防护罩 INSTALLING THE BELT GUARD (3)
6 润滑 LUBRICATION (3)
7 安装机针 INSTALLING THE NEEDLE (3)
8 线的选择 CHOOSING THREAD (4)
9 棱心绕线 WINDING BOBBIN THREAD (4)
10 放入和取出梭心 INSTALLING AND UNINSTALLING THE BOBBIN (4)
11 穿引针线 THREADING NEEDLE THREAD (5)
12 调节线张力ADJUSTING THREAD TENSION (5)
13 调节针距ADJUSTING STITCH LENGTH (5)
14 调节挑线簧ADJUSTING THREAD TAKE-UP SPRING (6)
15 调节压脚的压力ADJUSTING THE PRESSURE OF PRESSER FOOT (6)
16 调节送布牙的高度ADJUSTING THE HEIGHT OF FEED DOG (6)
17 针与摆梭的关系THE RELATIONSHIP BETWEEN NEEDLE AND SHUTTLE (7)
18 调节压脚交互量ADJUSTING THE LIFTING AMOUNT OF ALTERNATING FOOT (7)
19 调节上送料同步ADJUSTING THE TIMING OF UPPER FEED (7)

零件手册 Parts Manual

A 机壳、外装机构FRAME&MISCELLANEOUS COVER COMPONENTS	2-3
B 上轴机构MAIN SHAFT COMPONENTS	4-5
C 针杆上送料机构NEEDLE BAR • UPPER FEED MECHANISM COMPONENTS	6-15
D 压脚机构PRESSURE BAR COMPONENTS	16-17
E 送料机构FEED MECHANISM COMPONENTS	18-21
F 下轴机构HOOK DRIVING SHAFT COMPONENTS	22-25
G 夹线器机构TENSION POST COMPONENTS	26-27
H 绕线器、穿线机构THREAD WINDER & THREAD GUIDE CONPONENTS	28-31
I 膝动提升机构KNEE LIFTER COMPONENTS	32-33
G 皮带罩机构BELT COVER COMPONENTS	34-35
K 纽架机构THREAD STAND COMPONENTS	36-37
L 台板机构TABLE COMPONENTS	38-39
M 附件ACCESSORIES PARTS COMPONENTS	40-41
N 零件号码与页数对照表NUMERICAL PARTS-LIST	42-45

1. 机器简介

该系列产品广泛地适用于箱包、帐篷、凉席等行业。

产品采用连杆挑线，单针特种摆梭，构成双线锁式线迹。

471采用上下复合送料；441采用三同步综合送料。送料力量强劲稳定，缝纫多层滑性、粘性缝料及特厚特长物料时，都能保持上下层不位移。使制品整齐，线迹精确美观。

该产品适用于安全和作业用的皮带、帐篷、船帆、帆布、建筑围栏和工业包等厚重和特大物料的缝制。

This series machines are widely used in the industry of bags, tents, mat, etc.

These machines adopt linking lever to take up thread, single needle and special oscillating shuttle to form lock-stitch seam. 471 is top and bottom feed and 441 is compound feed, they have strong feeding power and can easy stitch several plies, slippery, extra thick or extra long materials. The stitch seam is neat and beautiful.

These products are suitable for sewing leather belt, tents, sails, construction barrier, industrial bags, etc.

2. 主要技术规格

适用范围	厚料、极厚料
最高缝纫速度	800s.p.m
最大线迹长度	0 ~ 11mm
压脚提升高度	手动 13mm, 脚踏 20mm
针杆行程	56mm
采用机针	DY × 3 25#
使用旋梭	KSP-204N
缝合直径	81mm
润滑方式	手工加油
电动机	550W

2. Main specifications

Applications	Heavy and Extra-heavy weight materials
Max. sewing speed	800s. P. m
Max. stitch length	11mm
Needle bar stroke	56mm
Presser foot lift height	13mm by hand 20mm by pedal
Hook	KSP-204N
Needle	DY × 3 25#
Cylinder diameter	81mm
Lubrication	Oiled by hand
Motor power	550W

3. 操作准备

(一) 擦擦机器

机头装箱为了防止机件生锈，各部分均涂有较厚的防锈油脂，同时机头装箱后，还可能在较长的贮藏和长途运输阶段造成油脂硬化和积累在机器表面的灰尘，所以必须将表面的油脂和灰尘用汽油和洁净的软布拭擦干净。

(二) 检查

机器出厂时，虽经过周密的检查和试验，但在长途运输中也可能受到强烈的震动使机件松动或歪曲，所以应该做一次周密仔细的检查，并用手轻轻转动主动轮，看机件之间有无转动困难，碰撞现象或其他不均匀的阻力，不正常的声响，如有应做适当的调整，机器情况正常后才可正式试车。

3. Machine installation

1. Clearing the machine

Before the head is packed, all of the parts of the machine are coated with anti-rust grease, meanwhile the grease can harden and the dust can cover the machine surface during long time storage and shipment, so, the dust and grease must be cleared by clean cloth with gasoline.

2. Examination


Although every machine is conformed by strict inspection and test before delivery, the parts of the machine may be loose and deformed after long distance transportation with jolt. A thorough examination must be performed. Turn the balance wheel slightly by hand to check if there is running obstruction, parts collision, uneven resistance and abnormal noise. If any of these exist, adjustment must be made accordingly before running.

4. 安装电机(如图 1)

将电动机C左右移动，使缝纫机主动轮槽A与电动机皮带轮槽B在一直线位置，以皮带不接触台板为准。

4. Installing the motor(Fig. 1)

Move the motor C leftward or rightward to make the hand wheel belt groove A and motor pulley belt groove B run in line.

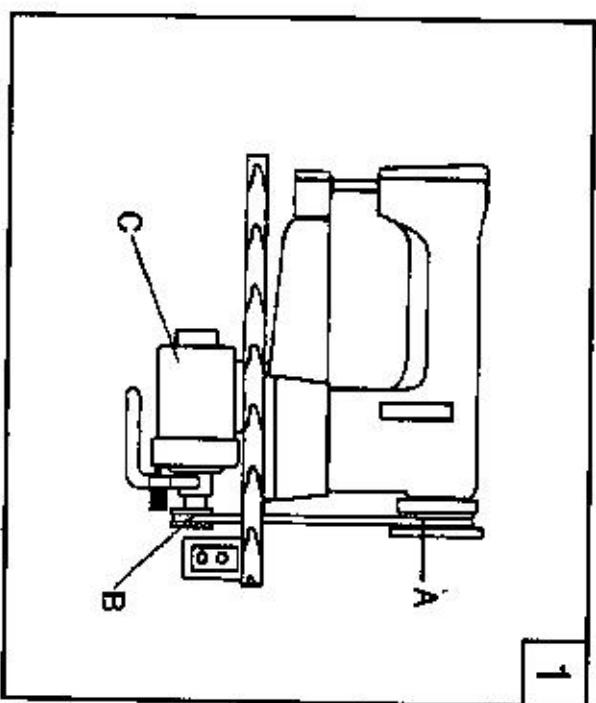

5. 安装皮带防护罩(见图2)

从安全角度考虑，应安装皮带防护罩

- a. 把皮带罩支架①旋入到机壳螺钉孔内；
- b. 皮带罩板②安装在机壳上；
- c. 把V型皮带罩套在手轮上；
- d. 把皮带罩③装在皮带罩板②上；
- e. 钻孔 a、a，用木螺钉固定在台板上。

6. 润滑(见图3)

如图在箭头所示处加油

7. 安装机针(如图4)




- a. 转动手轮，使针杆停在最高位置；
- b. 舒松机针夹紧螺钉①，使机针②的凹槽a朝向右面；
- c. 将机针插至针杆孔的底部；
- d. 拧紧机针夹紧螺钉①。

6. Lubrication (Fig.3)

Please add the oil at the places shown by arrows.

7. Installing the needle (Fig.4)

- a. Turn the hand wheel to lift the needle bar at its highest position;
- b. Loosen the screw ① and keep the long groove A of needle ② rightward;
- c. Fully insert the needle shank up to the bottom of needle bar;
- d. Tighten the screw ①.

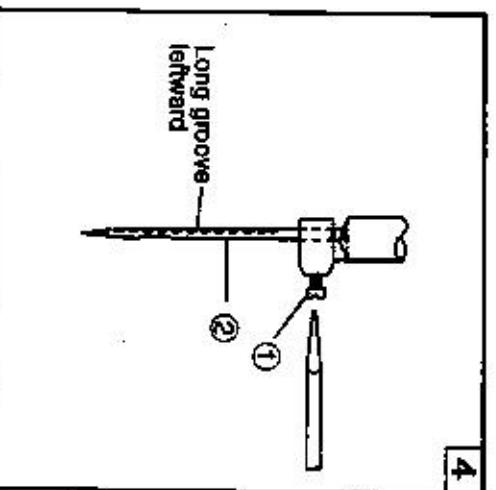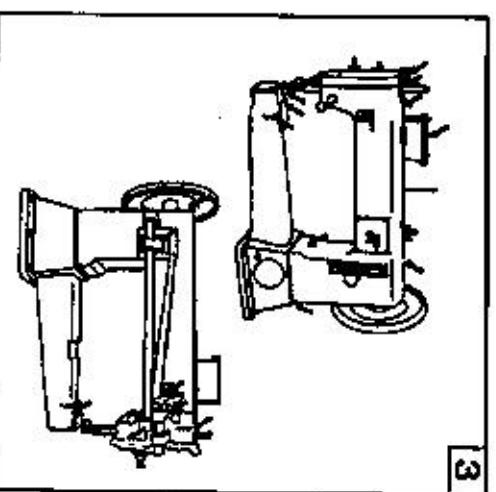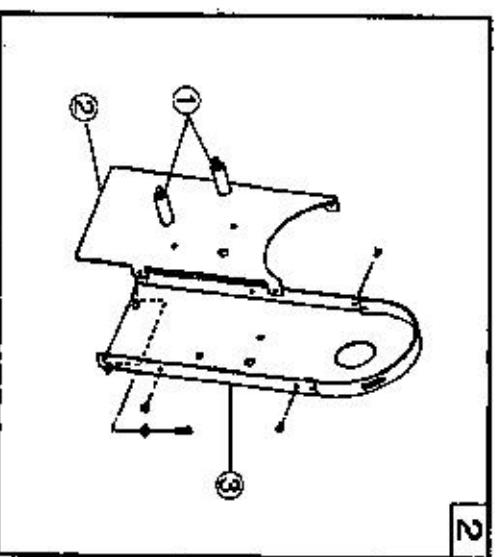

5. Installing the belt guard(Fig. 2)

Please install the belt guard for the safety purpose

- a.Install the pin supporter ① into the screw hole on the machine casting;
- b.Install the guard ② on the casting;
- c.Put the V-belt on the hand wheel;
- d.Install the guard ③ on the guard ②;
- e.Fix the guard on the table with wooden screw.

(3)

8. 线的选择

面线采用左捻线，底线可使用左捻线或右捻线，辨别线的旋向，根据图示，把缝线捏住，以右手按图箭头方向搓转缝线，若线股越差越紧，则为左捻线，反之，则为右捻线。

9. 棱心绕线（见图6）

- 自线团来的线，依次穿过A、B、C、D，然后把线头在棱心上绕上几圈；
- 把棱心压板向下揿压，绕线轮即可压向机壳内摩擦轮；
- 绕线量由调节螺钉②加以调节，适当的绕线量为平行绕线至棱心外径的80%。顺时针转动螺钉增加棱心绕线量，逆时针转动螺钉减少棱心绕线量。
- 棱心绕满后，棱心压板松开，绕线器自动停。
- 放入和取出棱心（如图7）

(一) 取出棱心
打开棱盖，将针杆放至最低位置，在弹簧①和棱心壳②之间插入开手③，压下弹簧①，向外拉棱心壳②，就可将棱心从棱心壳中取出。

(二) 放入棱心

放棱心时，拉出线头，将棱心④放入棱心壳⑤，将线从棱心壳的线槽⑦中向上引出。然后将线从棱心壳⑥下面的穿线孔中引出。确保当棱心放入摆梭后，摆梭内的弹簧①被扣住。


8. Choosing thread(Fig.5)

The needle thread should be left-twist; the bobbin thread may be left-twist or right-twist. The way judging the thread twist: hold the thread by left hand, twist it by right hand as the direction shown in the Fig.5, if the thread changes tightly, it's left-twist, on the contrary, it's right-twist.


9. Winding the bobbin thread(Fig.6)

- Thread the thread from thread spool and pass through A, B, C, D, then wind thread several circles around bobbin;
- Put the winding lever onto bobbin, the winding pulley will press the friction pulley in the arm;
- Thread amount can be adjusted by screw ②, the optimum capacity of bobbin thread is fill about 80% of bobbin outside diameter, turn the screw clockwise to increase thea mount, on the contrary,decrease the amount.
- After finish, loosen the winding lever and thread winder will stop automatically.
- Installing and uninstalting the bobbin(Fig.7)


1. Uninstalling the bobbin
Open the shuttle cover and lower the needle bar at its lowest position, insert the opener ③ between spring ① and bobbin case ②, press the spring ① down and draw the bobbin case ② out, the bobbin will be pulled out from bobbin case.
2. Installing the bobbin
When install the bobbin, draw the thread tip out and put the bobbin 4 into bobbin case ⑤, thread the bobbin thread from slit ⑦, then pass it through the hole under the tension spring ⑥. The bobbin case will be locked by spring ① after being put into shuttle.

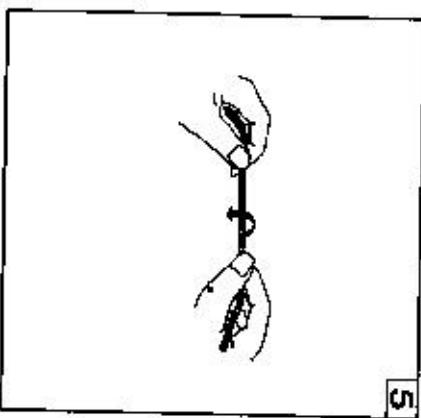

5

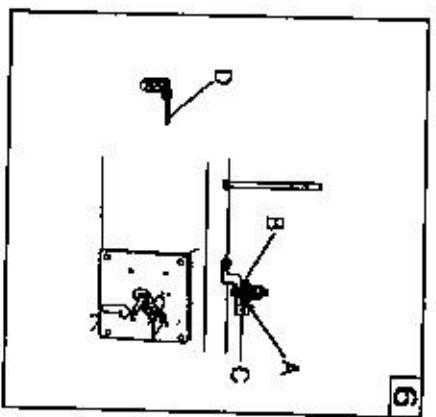

6

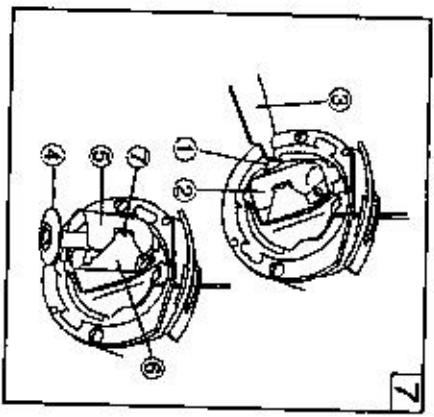


7

(4)

11. 穿引针线(见图8)

针线穿法按图示从(1)到(14)。

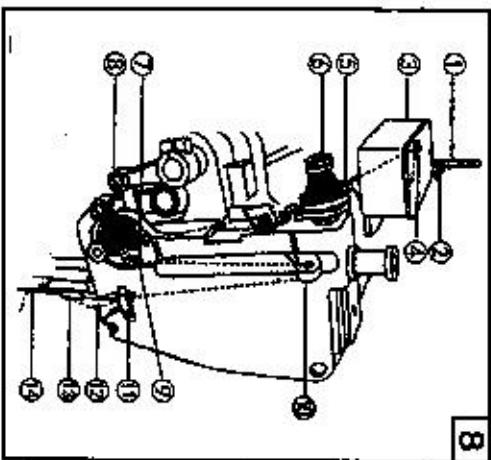

11. Threading needle thread(Fig.8)

The sequence of threading is shown in the Fig.8 from(1)-(14).

12. 调节面线张力(见图9)

(一) 调节面线张力

旋转张力调节螺母(1)，顺时针旋转面线张力增大，逆时针旋转面线张力减小。


(二) 调节底线张力

旋转张力调节螺钉(2)，顺时针旋转底线张力增大，逆时针旋转张力减小。

13. 调节针距(见图10)

逆时针或顺时针旋转针距调节螺母(1)，刻度板上的数字表示线迹长短尺寸，若所需针距确定后，锁紧螺母(2)应拧紧。倒缝送料时，只要向上提针距调节螺杆即可。若手放松针距调节螺杆，缝纫机恢复正常送料。

注：针距调节螺杆由于长期上下移动而松动时，旋转螺钉(3)，调整到扳动力度适宜即可。

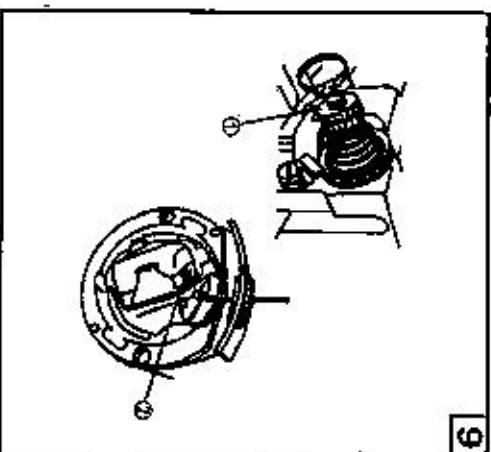


12. Adjusting thread tension(Fig.9)

1. Adjusting needle thread tension.

Turn the nut ①clockwise to increase the needle thread tension, turn the nut counter-clockwise to decrease the needle thread tension.

2. Adjusting bobbin thread tension

Turn the screw ② clockwise to increase the bobbin thread tension, turn the screw counter-clockwise to decrease the tension.

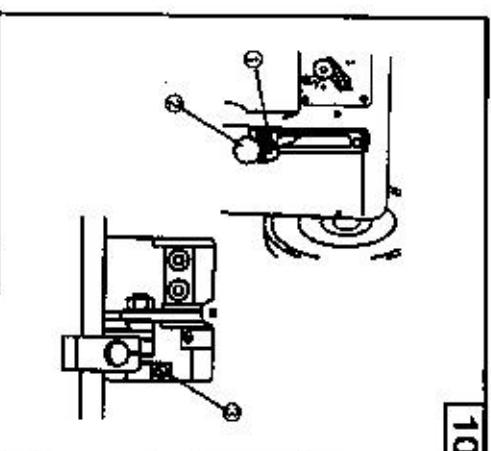

13. Adjusting stitch length(Fig.10)

Turn the stitch length adjusting nut ①clockwise or counter-clockwise, the numbers on graduation board shown the sizes of the stitch length, if the stitch length confirmed, please tighten the nut ②. For reverse feed, lift the stitch length adjusting screw bar to perform reverse sewing, release the screw bar, the forward sewing is resumed.

Note: if the screw bar becomes loose because of moving upward or downward for a long time, please turn the screw 3 to maintain the proper tension.

14. 调节挑线簧 (见图 11)

(一) 改变挑线簧的行程

- 拧松限位板螺钉①，并上下移动限位板②；
- 限位板向下移，则增大挑线簧行程，限位板向上移，则减小挑线簧行程。

(二) 改变挑线簧的张力

拧松螺母③，逆时针旋转弹簧轴，则增大挑线簧张力；顺时针旋转弹簧轴，则减小挑线簧张力，用螺丝刀插入弹簧轴的插口，旋转到所要求的张力。

15. 调节压脚的压力 (见图 12)


调节适当的压脚压力是根据所采用的缝料而定。

- 旋转弹簧调压螺钉①，顺时针旋转则增大压脚压力，反之则减小压脚压力。
- 调整后，紧固调压螺母(2)。


16. 调节送布牙的高度 (如图 13)

送布牙的调整位置是高出针板1.3~1.5mm。根据缝纫要求调整送布牙高度或更换送布牙后，请按如下步骤：


- 确定送布牙的最高位置，紧固送布牙螺钉 1；
- 根据缝纫特殊情况，可临时调整送布牙高度，相对标准高度或高或低。

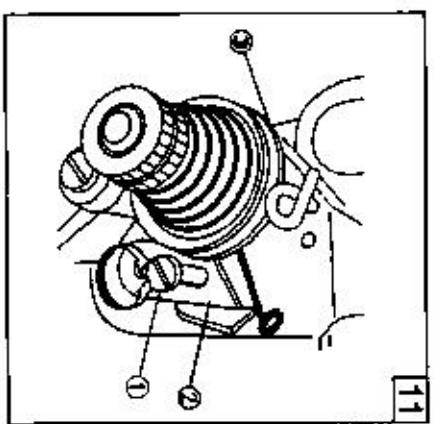

[11]

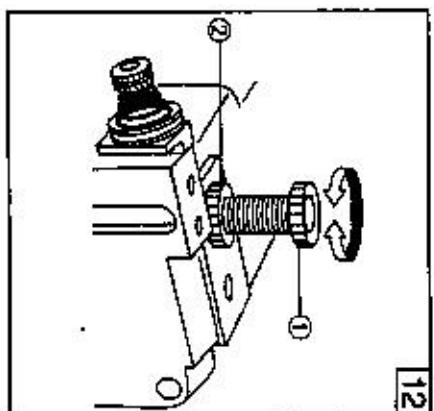

[12]

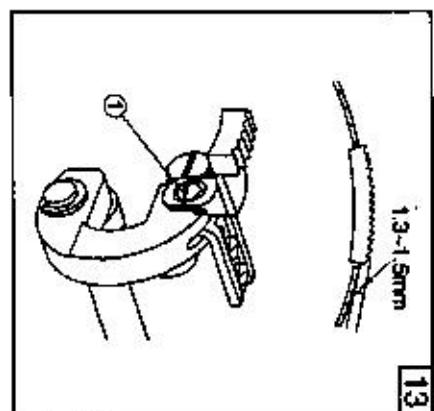

[13]

14. Adjusting thread take-up spring(Fig.11)

1.Changing the stroke of thread take-up spring

- a. Loosen the screw ① and move the stop plate ② up-ward and downward;
- b. Move the stop plate downward to increase the stroke of thread take-up; move the plate up-ward to decrease the stroke of thread take-up.

2.Adjusting the tension of thread take-up

Loosen the nut ③, turn the spring shaft counter-clockwise to increase the tension of thread take-up; turn the shaft clockwise to decrease the tension. Please use a screw driver to insert the split on the spring shaft and turn the spring shaft to get the required tension.

15. Adjusting the pressure of presser foot(Fig.12)

The proper pressure of presser foot should be adjusted according to the materials to be sewn.

- a. Turn the screw ① clockwise to increase the pressure, on the contrary, decrease the pressure.
- b. After finish, tighten the nut ②.

16. Adjusting the height of feed dog(Fig.13)

The adjustment position of feed dog is higher 1.3~1.5mm than needle plate, please adjust it as following sequence according to sewing requirements or after changing a new one:

- a.Confirm the highest position of feed dog,then tighten the feed dog screw ①;
- b.Temporarily adjust the height of feed dog higher or lower compare to the standard height according to special sewing situation.

17. 针与摆梭的关系(见图 14)

a. 确定针杆的高度

针杆标准高度的确定，当针杆从最低位置上升4.5—5.5mm时，摆梭勾尖端在针杆中心，针杆孔上边与摆梭勾线尖距离为2.5—3mm。

b. 确定摆梭的位置

旋松底座孔(1)中曲柄螺钉(2)，然后前后移动曲柄，调整梭尖位置完毕后，拧紧螺钉(2)。

c. 梭尖与针杆之间间隙在0.05—0.3mm范围内，旋松下轴后曲柄螺钉和下轴紧固螺钉，左右移动下轴，调整好后，拧紧各螺钉。

18. 调节压脚交互量(见图 15)


摆压脚和小压脚的交替提升量，可在一定范围内进行适当的调节，在一般的厚料缝纫中，摆压脚提升量为6mm，小压脚提升量为4.5mm左右。当其它机构不变的情况下，两压脚提升量之和是一定值。

调节方法：旋松调节曲柄螺钉(1)，按图示向上转动升降前曲柄，摆压脚的提升量增大，反之提升量减小。调好后，将螺钉拧紧即可。


摆压脚和小压脚总提升量的调节方法：先将偏心轮连杆螺钉(2)旋松，然后调节该螺钉与升降轴中心距B，若便摆压脚和小压脚总提升量增加，中心距B变小，反之总提升量减小。其调节量有一定范围，不宜过大。

19. 调节上送料同步(见图 16)


a. 不管下送料，放下提升杆，就可获得粗链上送料线迹。
b. 441 的微调如图所示，旋松螺钉(1)，按箭头所示方向调整(2)(3)的相对位置，调节结束后旋紧螺钉(1)。
c. 471 的微调如图所示，旋松手柄螺钉(4)，按箭头所示方向旋转蜗杆(5)进行调整，调节结束后旋紧螺钉(4)。

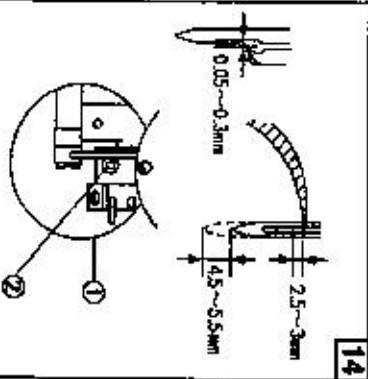

[14]

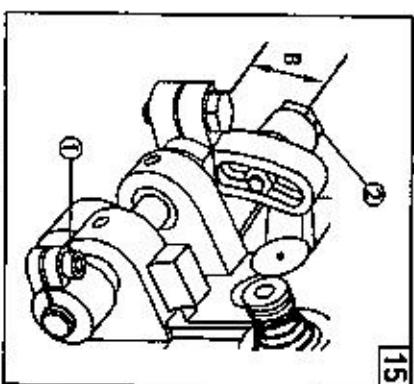

[15]

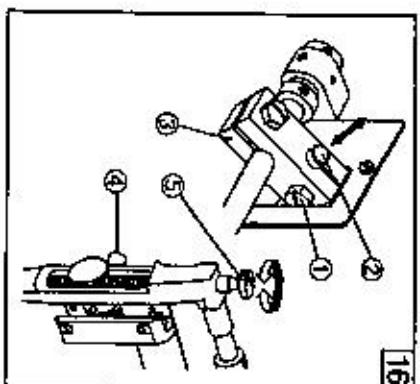

[16]

17. The relationship between needle and shuttle(Fig.14)

a. confirm the height of needle bar

When the needle bar is lifted 4.5-5.5mm from its lowest position, the tip of shuttle should locate at the center of needle bar and the clearance between the top of needle bar hole and the tip of shuttle is 2.5-3mm.

b. Confirm the position of shuttle

Loosen the crank screw ①in the bed hole ①, move the crank forward or backward, after adjust the position of the tip of shuttle, tighten the screw ②.

c. The flank clearance between the tip of shuttle and needle bar should be 0.05~3mm, loosen the rear crank screw and collar screw of lower shaft, move the lower shaft leftward or rightward, after adjustment, tighten the screws.

18. Adjusting the lifting amount of alternating foot(Fig.15)

The lifting amount of alternating foot can be adjusted within a certain range. for normal sewing, the lifting amount of outer presser foot is 6mm, the lifting amount of inner presser foot is 4.5mm, if the other mechanism is fix, the lifting amount of two feet is constant.

Adjusting method: Loosen the crank screw ①, turn the crank upward shown in the Fig 15 to increase the lifting amount of outer presser foot, on the contrary decrease the amount, after finish, tighten the screw. Adjusting method of lifting amount of two feet: loosen the screw ③, adjust the central distance B between the screw and upper feed shaft, shorten the distance B will increase the lifting amount, on the contrary decrease the amount. Please note the range of adjustment is limited, please don't be overlarge.


19. Adjusting the timing of upper feed(Fig.16)

a. Ignoring Lower Feed, lower the presser foot lifting bar and the coarse stitch of upper feed is realized.

b. For 441, loosen the screw ①, adjust the relative position between ②and ③, after finish, tighten the screw ①.

C. For 471, loosen the screw ④, turn the worm ⑤as the direction shown in the Fig.16, after finish, tighten the screw ④.

A、机壳、外装机构 FRAME & MISCELLANEOUS COVER COMPONENTS

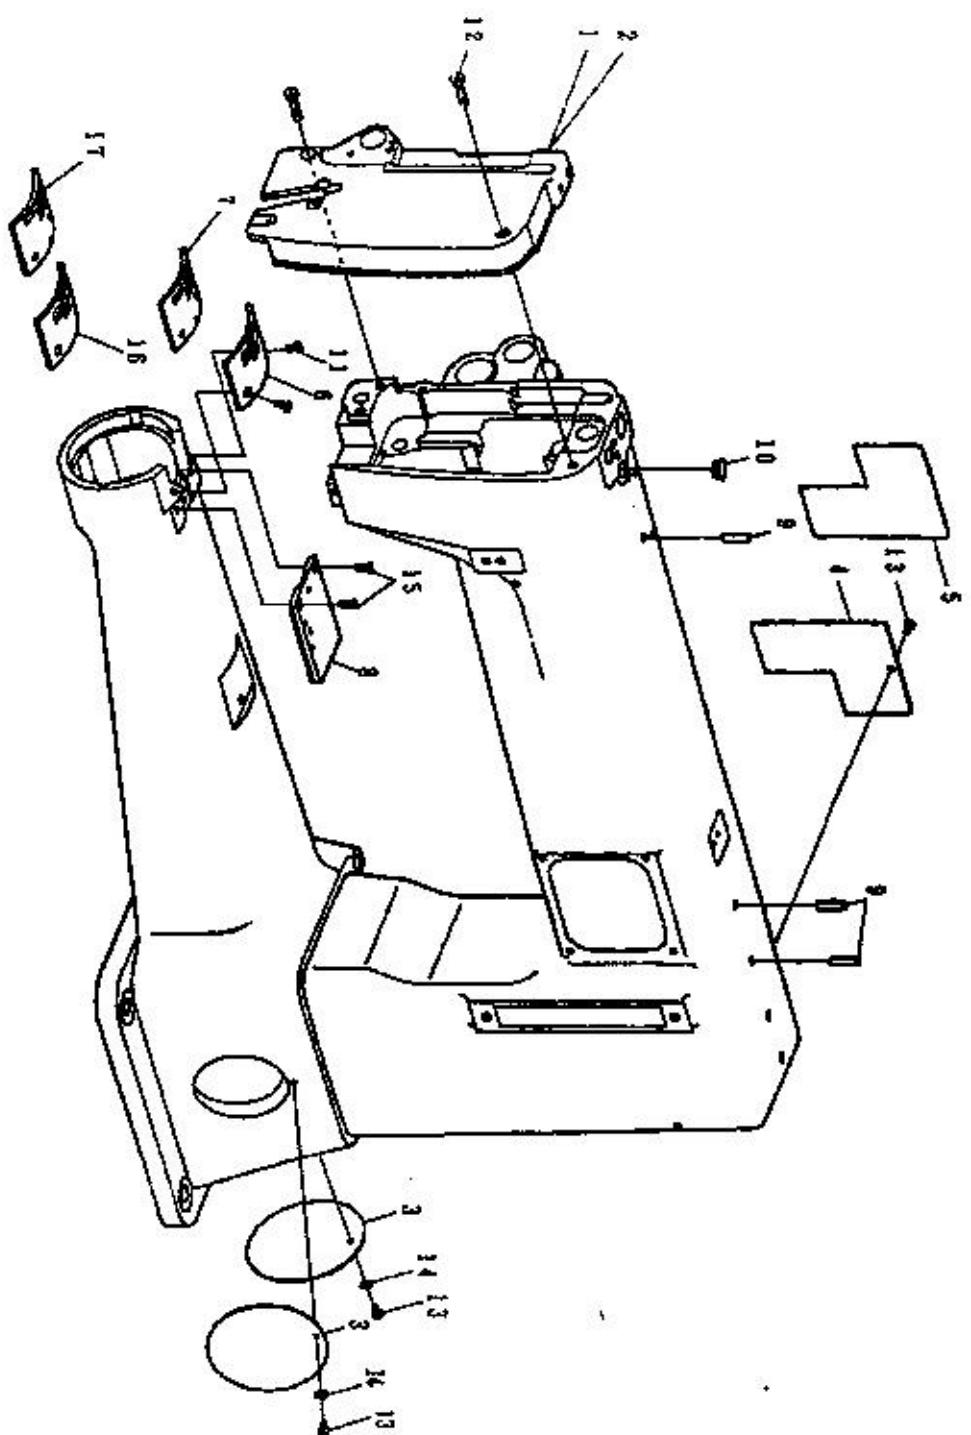

A、机壳、外装机构 FRAME & MISCELLANEOUS COVER COMPONENTS


REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1	#01	4410111005	面板组件 Face Plate Asm	1	
2	#02	4710111005	面板组件 Face Plate Asm	1	
3		4710111100	底座侧面板 (A) Side Cover, A	2	
4	#01	4410111200	侧盖板 (B) Side Cover, B	1	
5	#02	4710111200	侧盖板 (B) Side Cover, B	1	
6	#01	4410111300	针板 Throat Plate	1	
7	#02	4710111300	针板 Throat Plate	1	
8		4710111600	角板 Slide Plate	1	
9		YD050018	油管 Oil Pipe	3	
10	#01	S1013-0A	油塞 Rubber Plug	1	
11		ZSB12045	针板螺丝 Screw 3/16-28 L=8	2	
12		ZSR15014	面板螺丝 Screw 15/64-28 L=21	2	
13		ZSB09047	侧盖板螺丝 Screw 9/64-40 L=7	3	
14		WCC049001	螺丝垫圈 Washer	2	
15		ZSH11018	角板螺钉 Screw 11-64-40 L=9	2	
16	#01	4410111400	针板 Throat Plate(Short)	1	
17	#02	4710111400	针板 Throat Plate(Short)	1	

Note (注记) #1 For-441 用

#2 For-471 用

B、主轴机构 MAIN SHAFT COMPONENTS

4

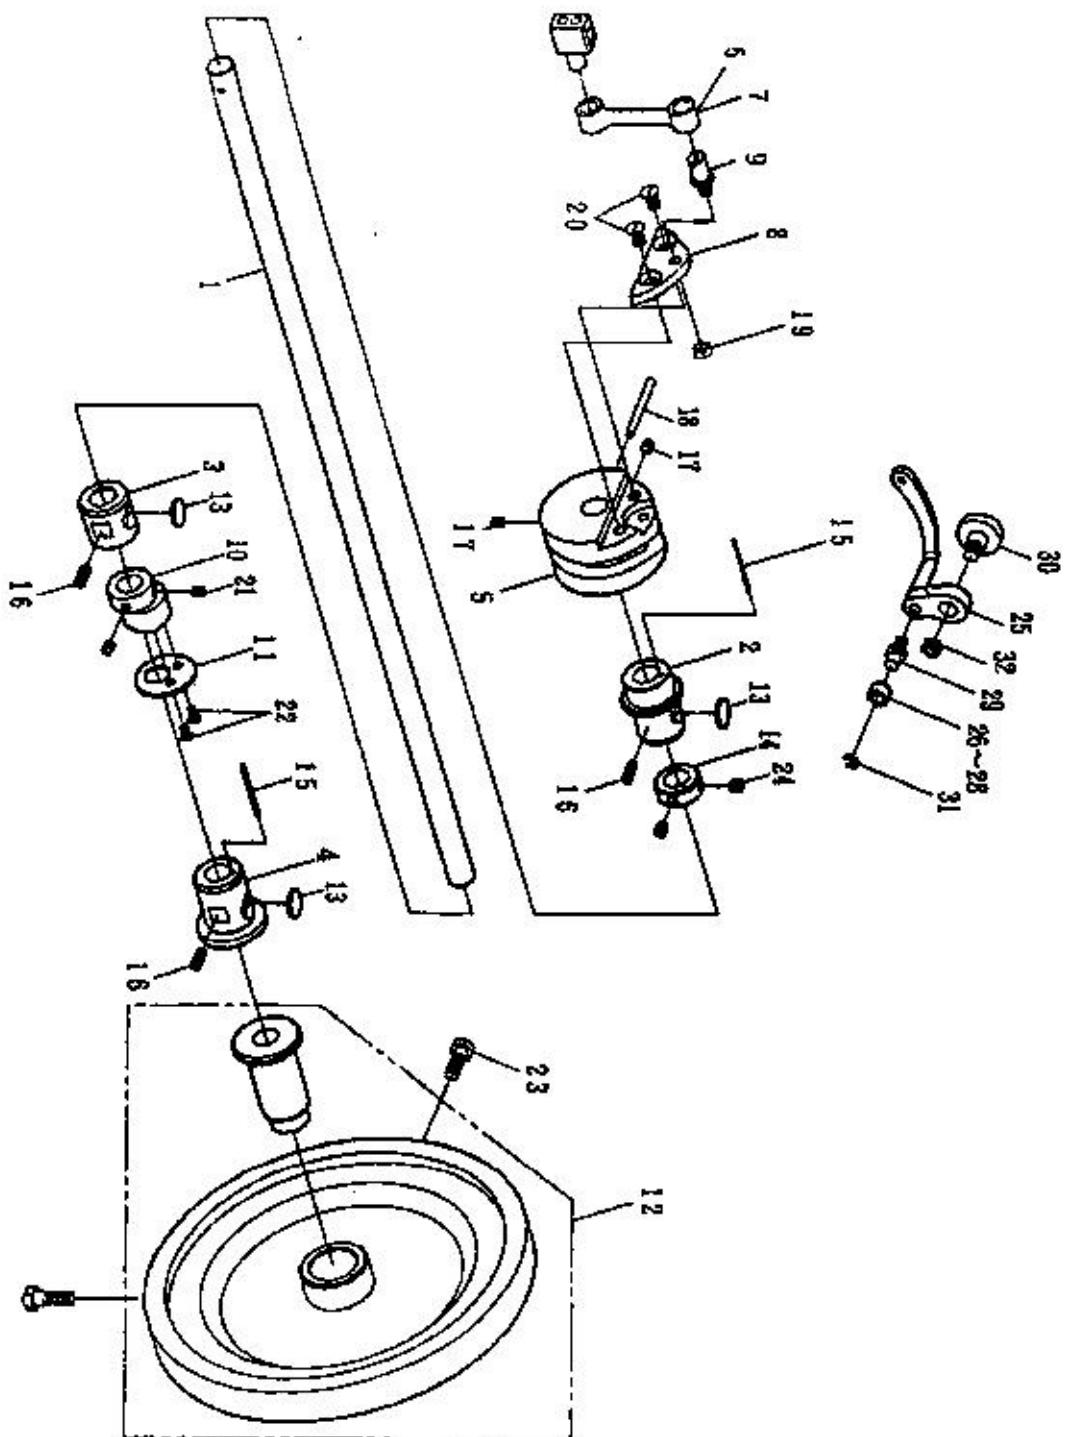

B、上轴机构 MAIN SHAFT COMPONENTS


REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710120101	上轴 Main Shaft	1	
2		4710120201	上轴前套 Main Shaft Bushing, Front	1	
3		4710120300	上轴中套 Main Shaft Bushing,Center	1	
4		4710120400	上轴后套 Main Shaft Bushing,Rear	1	
5		4710191301	挑线凸轮 Thread Take Up Cam	1	
6	#01	4410121000	针杆小连杆 Needle Bar Crank Rod	1	
7	#02	4710121000	针杆小连杆 Needle Bar Crank Rod	1	
8		4710121100	挑线凸轮连接座 Crank Plate	1	
9		4710121300	挑线凸连接轴 Needle Bar Crank Shaft	1	
10		4710122000	送料凸轮 Feed Cam	1	
11		4710122100	凸轮侧板 Side Plate	1	
12		4710122304	上轮 Hand Wheel Asm	1	
13		4710122500	油线 Felt	3	
14		4710122601	上轴定环 Thrust Collar	1	
15		X.A200160	油线 Oil Wick	2	
16		ZSA15010	上轴套螺钉 Screw 15/64-28 L=15	3	
17		ZSH16001	挑线凸轮螺钉 Screw 1/4-40 L=6	2	
18		YB040045	挑线凸轮销 Tapered Pin 4.0X45	1	
19		ZSL18001	凸轮连接座螺母 Nut 9/32-28	1	
20		ZSC18001	凸轮连接座螺钉 Screw 9/32-28 L=22	2	
21		ZSH15001	凸轮螺钉 Screw 15/64-28 L=7	2	
22		ZSC11007	凸轮侧板螺钉 Screw 11/64-40	2	
23		ZSD20003	上轮螺钉 Screw 5/16-24 L=21	2	
24		ZSA16025	定环螺钉 Screw 1/4-40 L=6	2	
25		4710190100	挑线杆体 Thread Take Up Lever	1	
26		4710190200	挑线液柱套 Roller	1	
27	#03	4710190220	挑线液柱套 Roller	1	
28	#03	4710190230	挑线液柱套 Roller	1	
29		4710190300	挑线杆液柱轴 Roller Stud	1	
30		ZSG20012	挑线螺钉 Hinge Screw	1	
31		RF00040	E型环 E-Shaped Snap Ring(4mm)	1	
32		ZSL18001	挑线螺母 Nut 9/32-28	1	

Note (注记) #1 For 441用

#2 For 471用

#3 Selective part 选用品


C. 针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

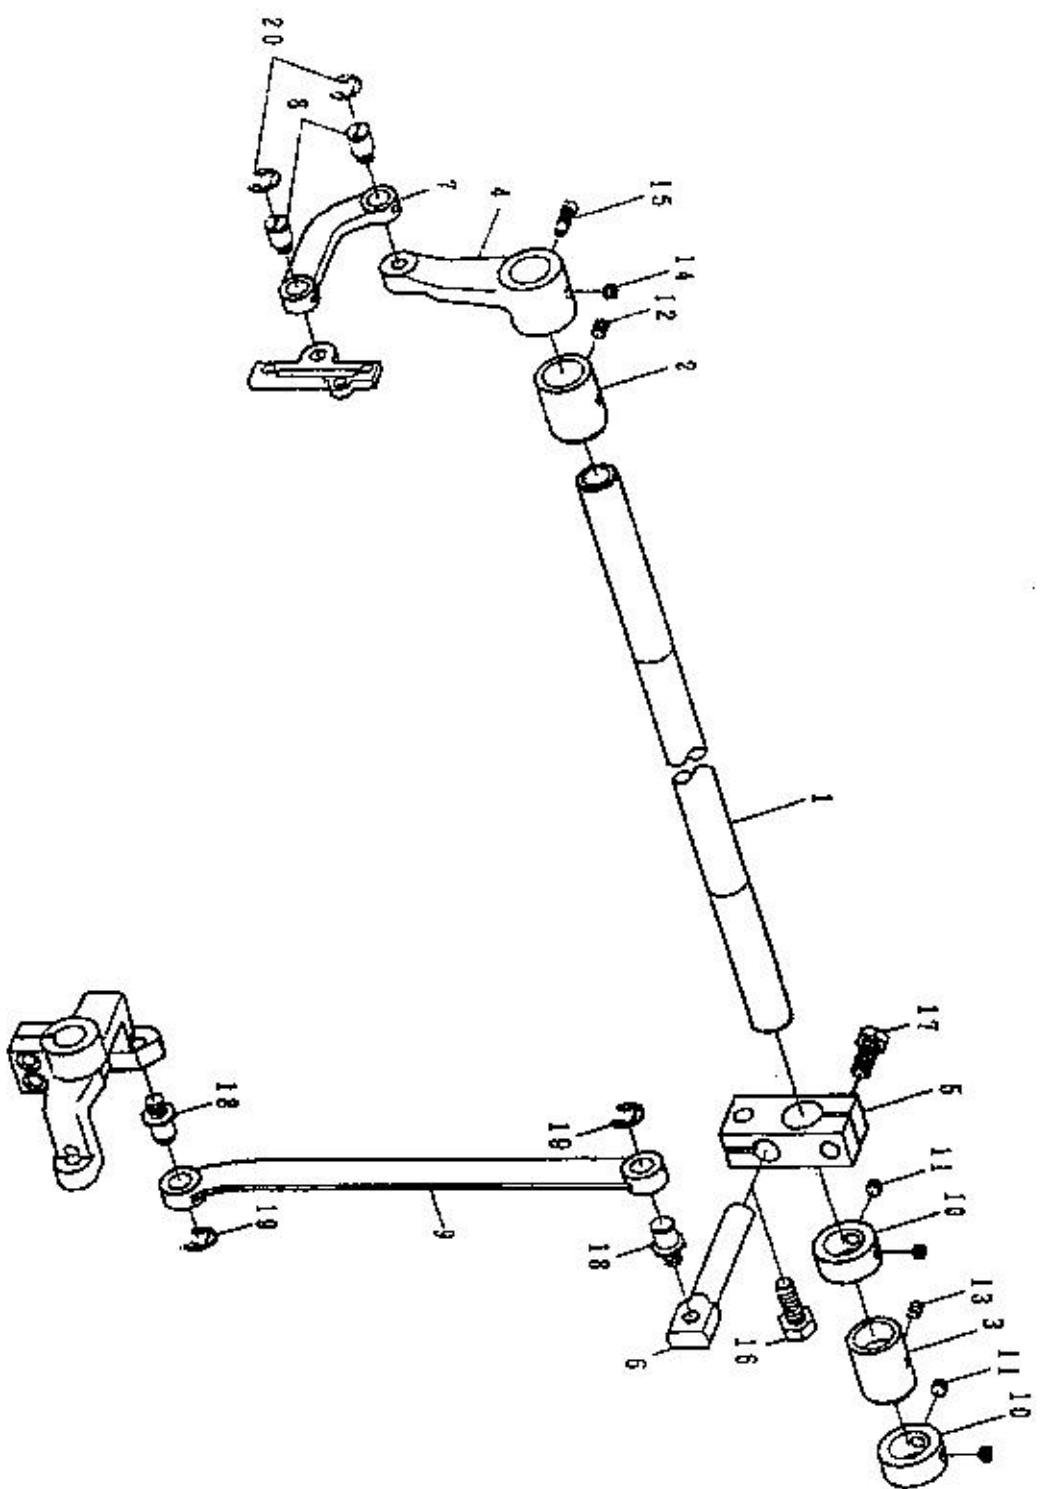

C、针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称	Name of Part	件数 Q'TY	备注 Remarks
1		4410142100	中轴	Driving Shaft	1	
2		4410145600	中轴前套	Driving Shaft Front Metal	1	
3		4710142201	中轴后套	Driving Shaft Rear Metal	1	
4		4410142300	中轴前连杆	Driving Shaft Rod, Front	1	
5		4410142400	中轴后连杆	Driving Shaft Rod, Rear	1	
6		4410141900	中轴后连杆销	Driving Shaft Rear Arm Pin	1	
7		4410143100	压杆连杆	Frame Driving Link	1	
8		ZSK18019	压杆连杆螺钉	Hinge Screw	2	
9		4410142000	送料连杆	Frame Driving Rod	1	
10		LG4043-0A	中轴定环	Thrust Collar D=18 W=12	2	
11		ZSA16910	定环螺钉	Screw M4-40 L=4.5	4	
12		ZSA15028	中轴套螺钉	Screw 15/64-28 L=7	1	
13		ZSA15028	中轴套螺钉	Screw 15/64-28 L=7	1	
14		ZSH16605	中轴前连杆螺钉	Screw 1/4-40 L=4.5	1	
15		ZSB15015	中轴前连杆定位螺钉	Screw 15/64-28 L=14.5	1	
16		ZSD20011	中轴后连杆紧固螺钉	Screw 5/16-18 L=18	1	
17		ZSD20009	中轴后连杆紧固螺钉	Screw 5/16-18 L=24	1	
18		ZSK20009	送料连杆螺钉	Hinge Screw	2	
19		RE000080	E型环	E-Shaped Snap Ring(8mm)	2	
20		RE000080	E型环	E-Shaped Snap Ring(8mm)	2	


C、针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

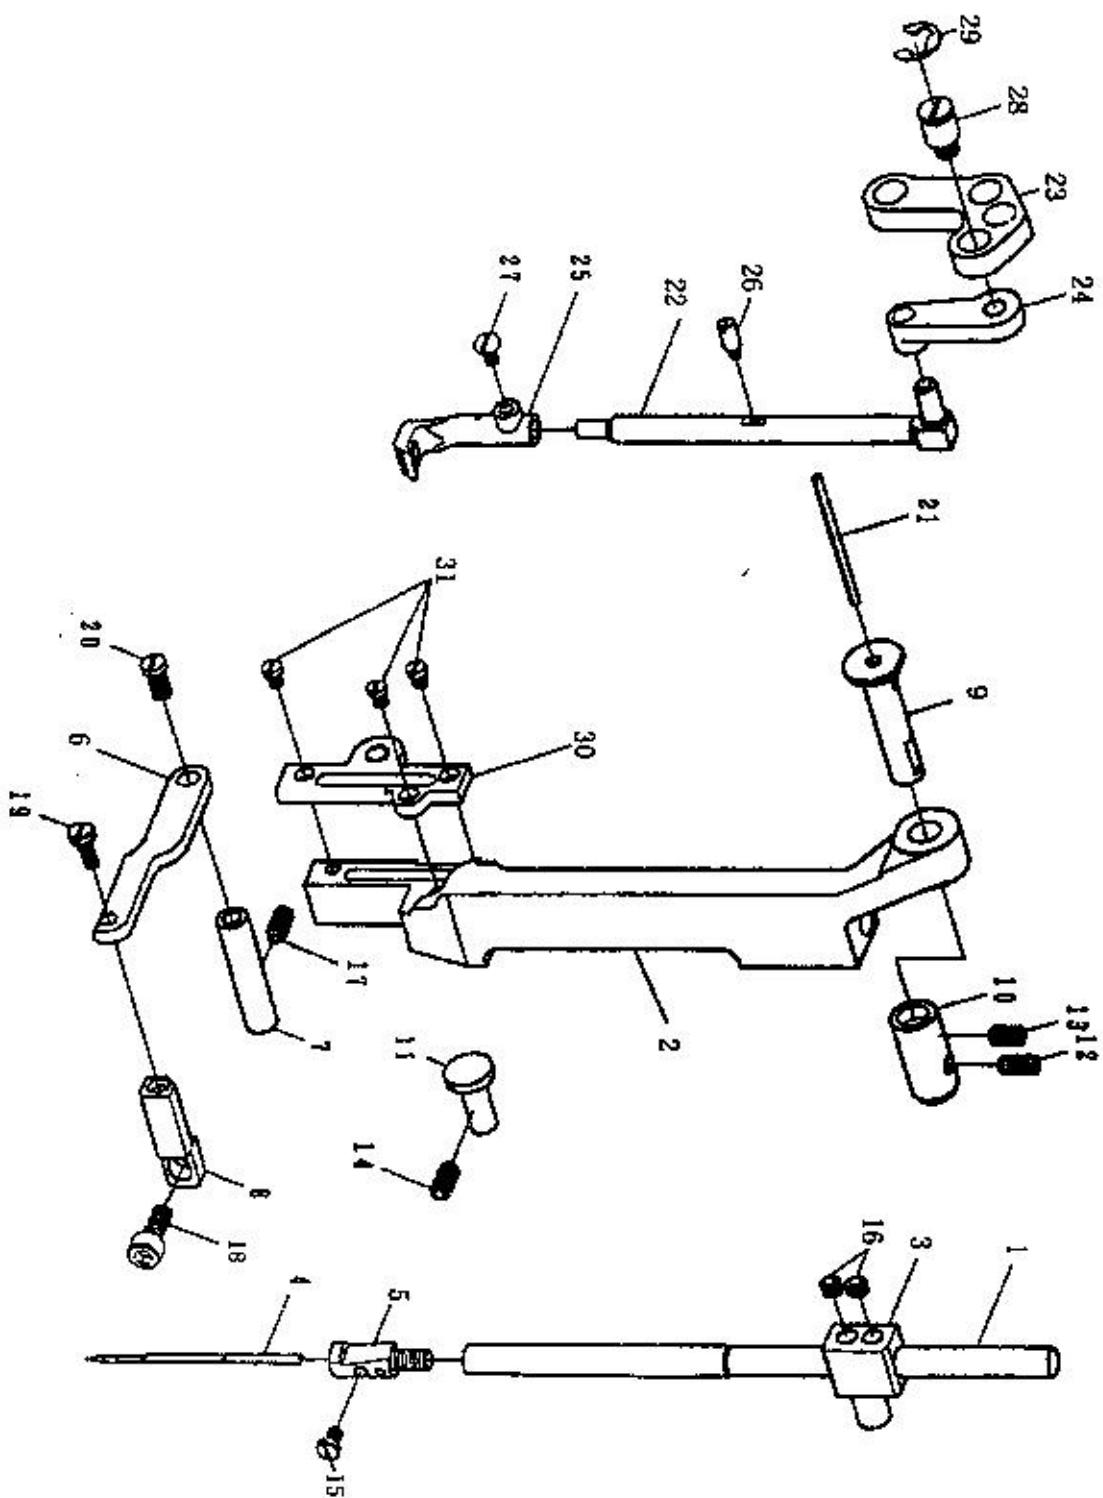

C、针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'ty	备注 Remarks
1		4410140100	针杆 Needle Bar	1	
2		4410270100	针杆座 Frame Driving Base	1	
3		4410140900	针杆连接轴 Needle Bar Connection	1	
4		IN794#230	机针 Needle (794Nm=230.4)	1	
5		4410140200	针夹 Needle Stopper	1	
6		4410143700	压板 Pressure Plate	1	
7		4410272300	调节轴 Setting Shaft	1	
8		4410272200	调节板 Setting Plate	1	
9		4410270200	针杆座调节轴 Frame Driving Base Shaft	1	
10		4410273000	调节轴套 Frame Driving Base Shaft Metal	1	
11		4410270400	针杆座定位轴 Frame Driving Base Guide	1	
12		ZMH06005	调节套固定螺钉 Screw 5/64-28 L=12	1	
13		ZMH06010	定位轴固定螺钉 Screw 15/64-28 L=12	1	
14		ZMH06005	针夹螺钉 Screw 11/64-40 L=7	1	
15		ZSB11022	针杆连接轴螺钉 Screw 1/4-40 L=4.5	2	
16		ZMH16005	调节轴固定螺钉 Screw 15/64-28 L=12	1	
17		ZMH06005	调节板螺钉 Screw 15/64-28 L=12	1	
18		ZMJ06002	压板固定螺钉 A Screw 11/64-40 L=12	1	
19		ZSB11076	压板固定螺钉 B Screw 15/64-28 L=21	1	
20		ZSR15004	毛毡 Oil Wick	1	
21		XA200100	压杆 Upper Feed Bar	1	
22		4410150100	L型连杆 L Link	1	
23		4410143600	压杆连杆 Upper Feed Frame Driving Link	1	
24		4410143300	内压脚 Pressure Foot	1	
25		4410151000	压杆定位螺柱 Upper Feed Bar Pin	1	
26		4410142900	内压脚螺钉 Screw 11/64-40 L=7	1	
27		ZSB11041	L型连杆定位螺钉 Hinge Screw	1	
28		ZSKH8019	E型环 E-Shaped Snap Ring(8mm)	1	
29		REJ00080	压杆定位板 Guide Plate	1	
30		4410151100	定位板固定螺钉 Screw 11/64-40 L=4.5	1	
31		ZSH11042		1	

C. 针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

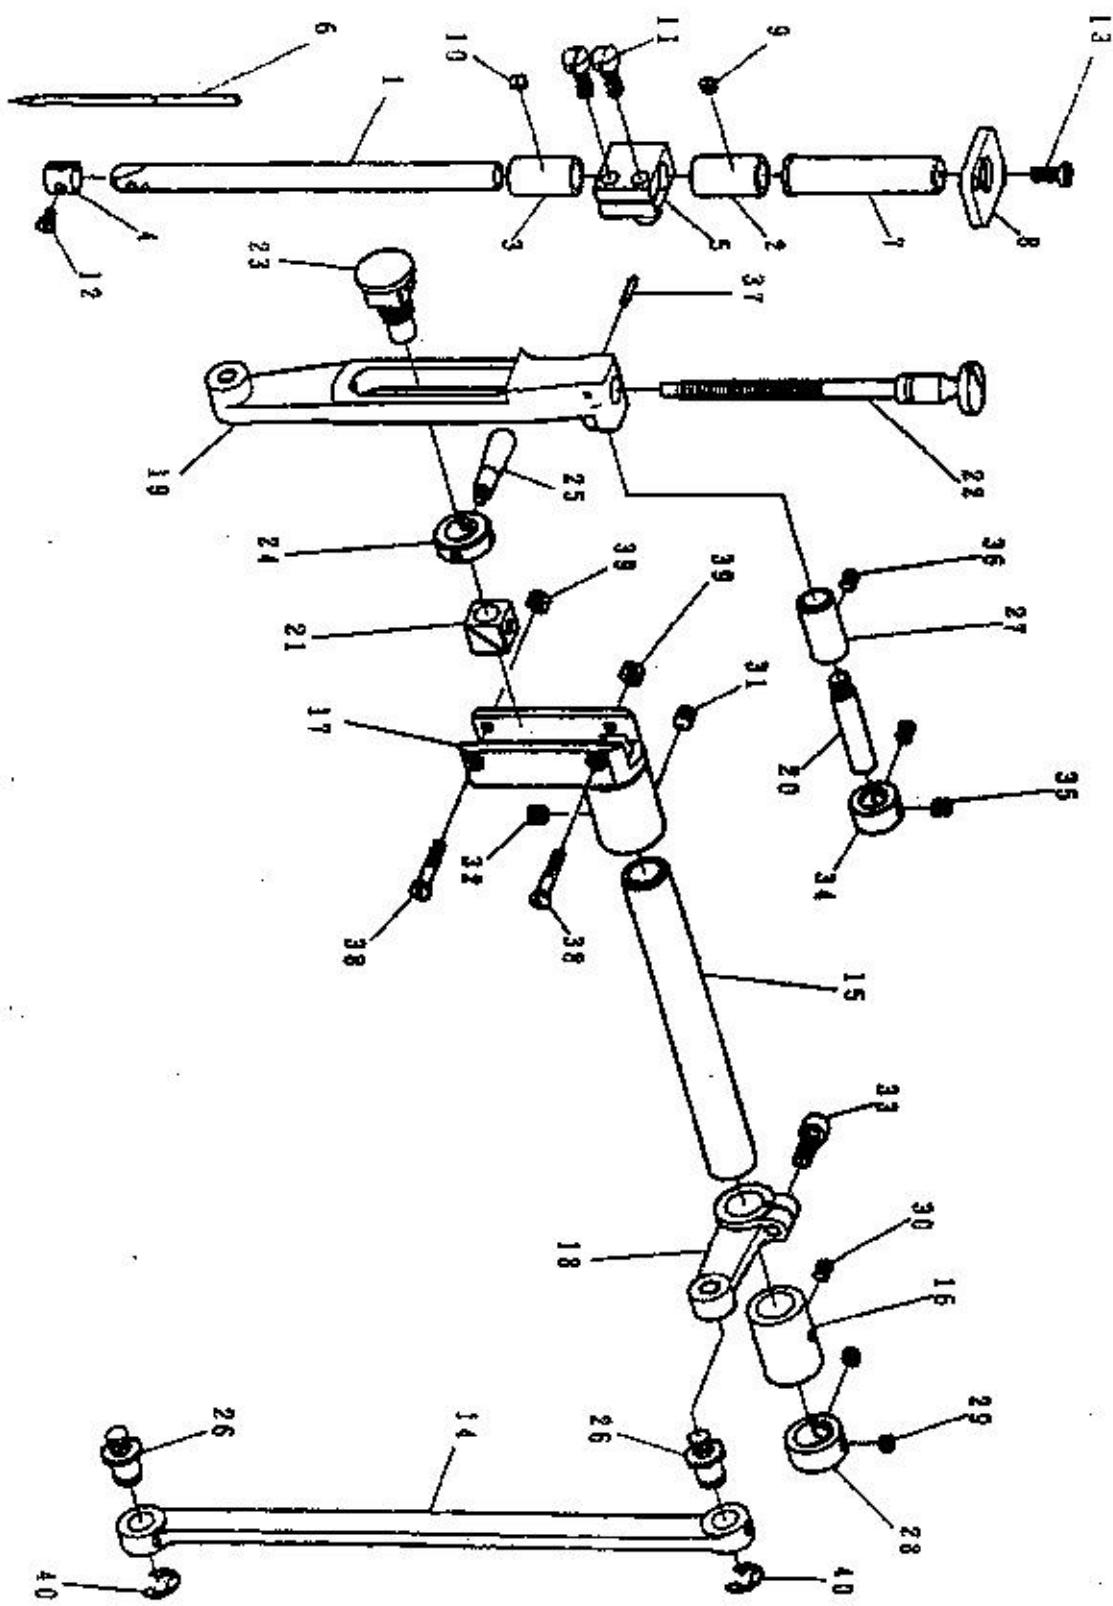


C、针杆・上送料机构 NEEDLE BAR・UPPER FEED MECHANISM COMPONENTS

REF. NO	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Qty	备注 Remarks
1	#02	4710140100	针杆	1	Needle Bar
2	#02	4710140400	针杆上套	1	Needle Bar Bushing, Upper
3	#02	4710140500	针杆下套	1	Needle Bar Bushing, Lower
4	#02	4710140700	针杆挡线	1	Needle Bar Thread Guide
5	#02	4710140900	针杆连接轴	1	Needle Bar Connection
6	#02	INT94#230	机针	1	Needle (INT94 Nm=230)
7	#02	4710141200	针杆护套	1	Needle Bar Cover
8	#02	4710141300	针杆护套定位板	1	Cover Plate
9	#02	ZSA15013	针杆上套螺钉	1	Screw M5/64-28 L=3.4
10	#02	ZSA16039	针杆下套螺钉	2	Screw M5/64-28 L=2.5
11	#02	ZSB11032	针杆连接轴收紧螺钉	1	Screw M5/64-40 L=14
12	#02	ZSB11030	挡线螺钉	2	Screw M1/16/4-40 L=6.5
13	#02	ZSB11076	定位板螺钉	2	Screw M1/16/4-40 L=12
14	#02	4710142000	送料连杆	1	Lengthwise Feed Rod
15	#02	4710142101	中轴	1	Driving Shaft
16	#02	4710142201	中轴前连杆	1	Gusding, Rear
17	#02	4710142301	中轴后连杆	1	Driving Shaft Rod,Front
18	#02	4710142401	上送料调节器	1	Driving Shaft Rod,Rear
19	#02	4710142500	调节器连接轴	1	Upper Feed Control Bracket
20	#02	4710142600	上送料调节滑块	1	Shaft
21	#02	4710142700	送料调节罗丝	1	Brock
22	#02	4710142800	送料连接轴	1	Screw
23	#02	4710142900	滑块连接轴	1	Shaft
24	#02	4710143000	滑块连接轴锁紧螺母	1	Nut
25	#02	4710143400	送料连接轴锁紧提杆	1	Control Lever
26	#02	ZSK20009	连接轴套管	2	Hinge Screw
27	#02	4710140500	中轴固定环	1	Bushing
28	#02	LG4045-0A	定环螺钉	1	Thrust Collar D=18 W=16
29	#02	ZSA16010	中轴套螺钉	2	Screw M14-40 L=4.5
30	#02	ZSA15028	中轴前连杆固定螺钉	1	Screw M5/64-28 L=7
31	#02	ZSH16002	中轴前连杆固定螺钉	1	Screw M14-40 L=8.5
32	#02	ZSH16001	中轴前连杆收紧螺钉	1	Screw M14-40 L=6
33	#02	ZM1J06002	螺母	1	Screw M6 L=15
34	#02	LG1274-0A	Thrust Cellar	1	D=9.53 W=10
35	#02	ZSA15028	连接轴固定螺丝	2	Screw M5/64-28 L=7
36	#02	ZSA15028	连接轴固定金属丝	1	Screw M5/64-28 L=7
37	#02	YD025014	弹簧销	1	Spring Pln 2.8x14
38	#02	ZSH11507	滑块防护螺丝	2	Screw M1/16/4-40 L=24
39	#02	ZSL11004	滑块防护螺母	2	Nut M1/16/4-40
40	#02	RE0400080	E型环	2	E-Shaped Snap Ring(8mm)

Note (注記) #02 ----- For 471 471 用

C、针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

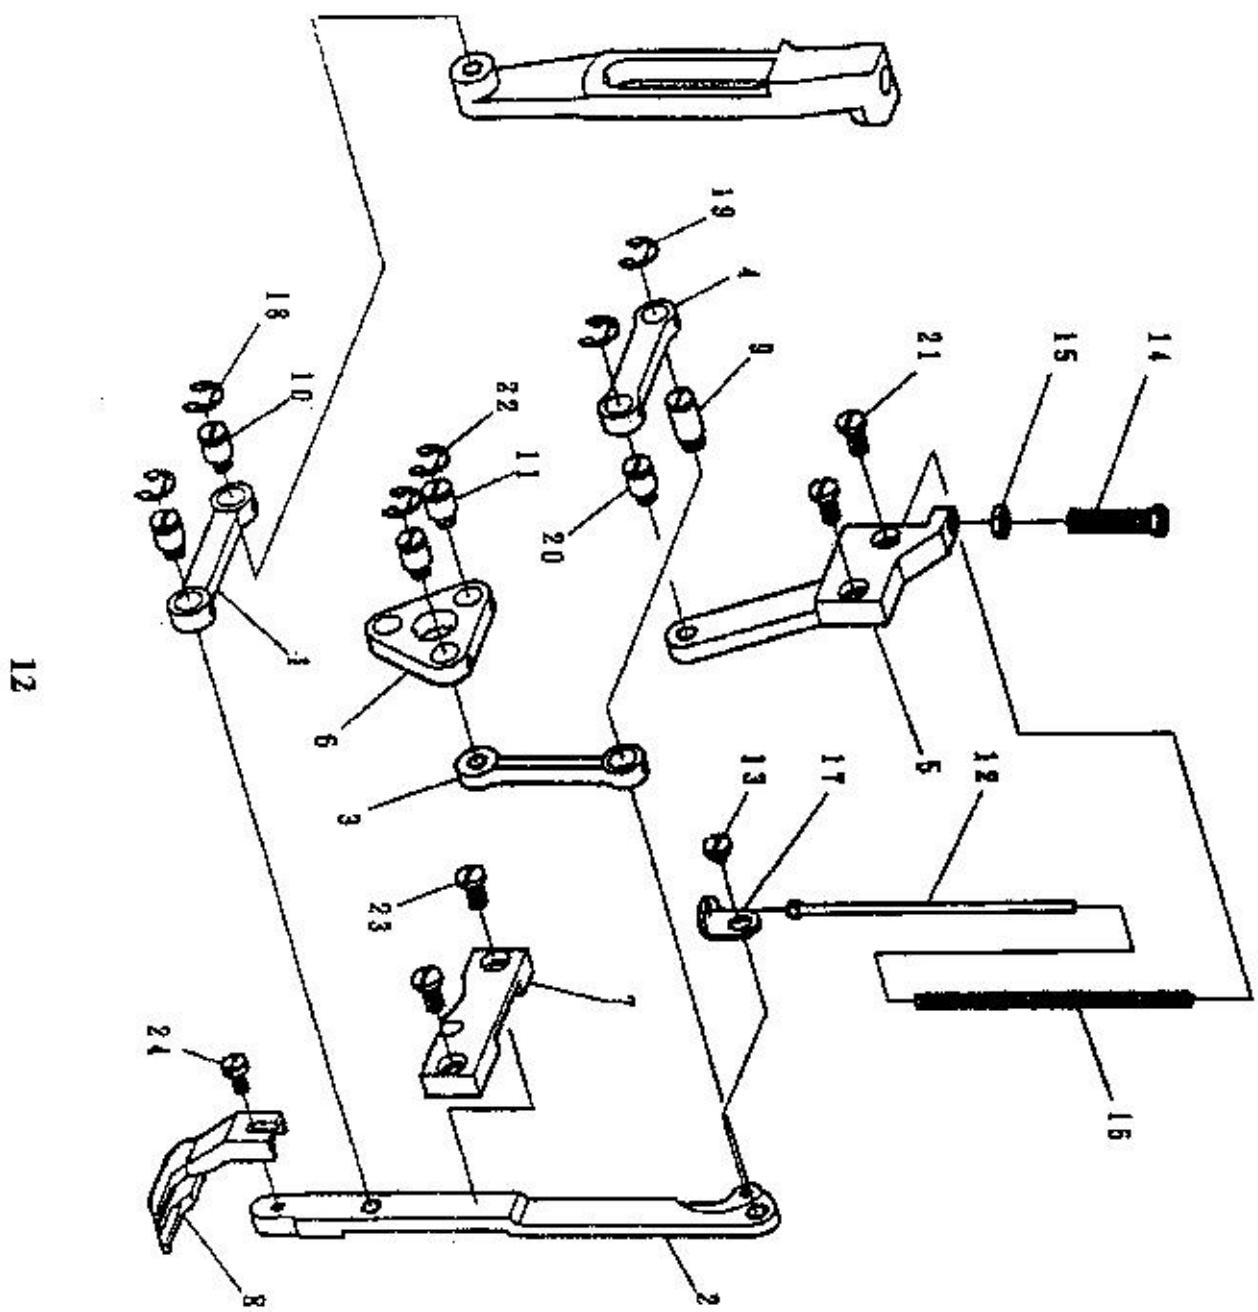


C、针杆・上送料机构 NEEDLE BAR・UPPER FEED MECHANISM COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称	Name of Part	件数 Qty	备注 Remarks
1	#02	4710143100	压脚小连杆	Rod	1	
2	#02	4710143200	同步压杆	Upper Feed Rod	1	
3	#02	4710143300	连杆 A	Upper Feed Link A	1	
4	#02	4710143400	连杆 B	Upper Feed Link B	1	
5	#02	4710143500	连杆架	Upper Feed Link Bracket	1	
6	#02	4710143600	三角形连杆	Bracket	1	
7	#02	4710143700	同步压杆导架	Supporting Plate	1	
8	#02	4710143800	外压脚	Walking Foot(Standard)	1	
9	#02	ZSK20006	连杆 A 螺钉	Hinge Screw	1	
10	#02	ZSK18019	上送调节器连接螺钉	Hinge Screw	2	
11	#02	ZSK18019	三角形连杆连接螺钉	Hinge Screw	2	
12	#02	4710144100	弹簧导杆	Spring Guide Bar	1	
13	#02	ZSG11058	弹簧支板固定螺钉	Hinge Screw	1	
14	#02	ZSF18001	调压螺钉	Adjusting Thumb Screw	1	
15	#02	ZSL18003	调压螺母	Nut 932-28	1	
16	#02	4710144200	压缩弹簧	Spring	1	
17	#02	E1288-0A	弹簧支板	Retaining Plate	1	
18	#02	RE000080	E 型环	E-Shaped Snap Ring (8mm)	2	
19	#02	RE000080	E 型环	E-Shaped Snap Ring (8mm)	2	
20	#02	ZSK18019	连杆架连接螺钉	Hinge Screw	1	
21	#02	ASB15005	连杆架固定螺钉	Screw 15/64-28 L=12	2	
22	#02	RE000080	E 型环	E-Shaped Snap Ring (8mm)	2	
23	#02	ZSB15005	压杆导架固定螺钉	Screw 15/64-28 L=12	2	
24	#02	ZSB11026	外压脚螺钉	Screw 11/64-40 L=9.5	1	

Note (注記) #02 For 471 用


C、针杆·上送料机构 NEEDLE BAR · UPPER FEED MECHANISM COMPONENTS

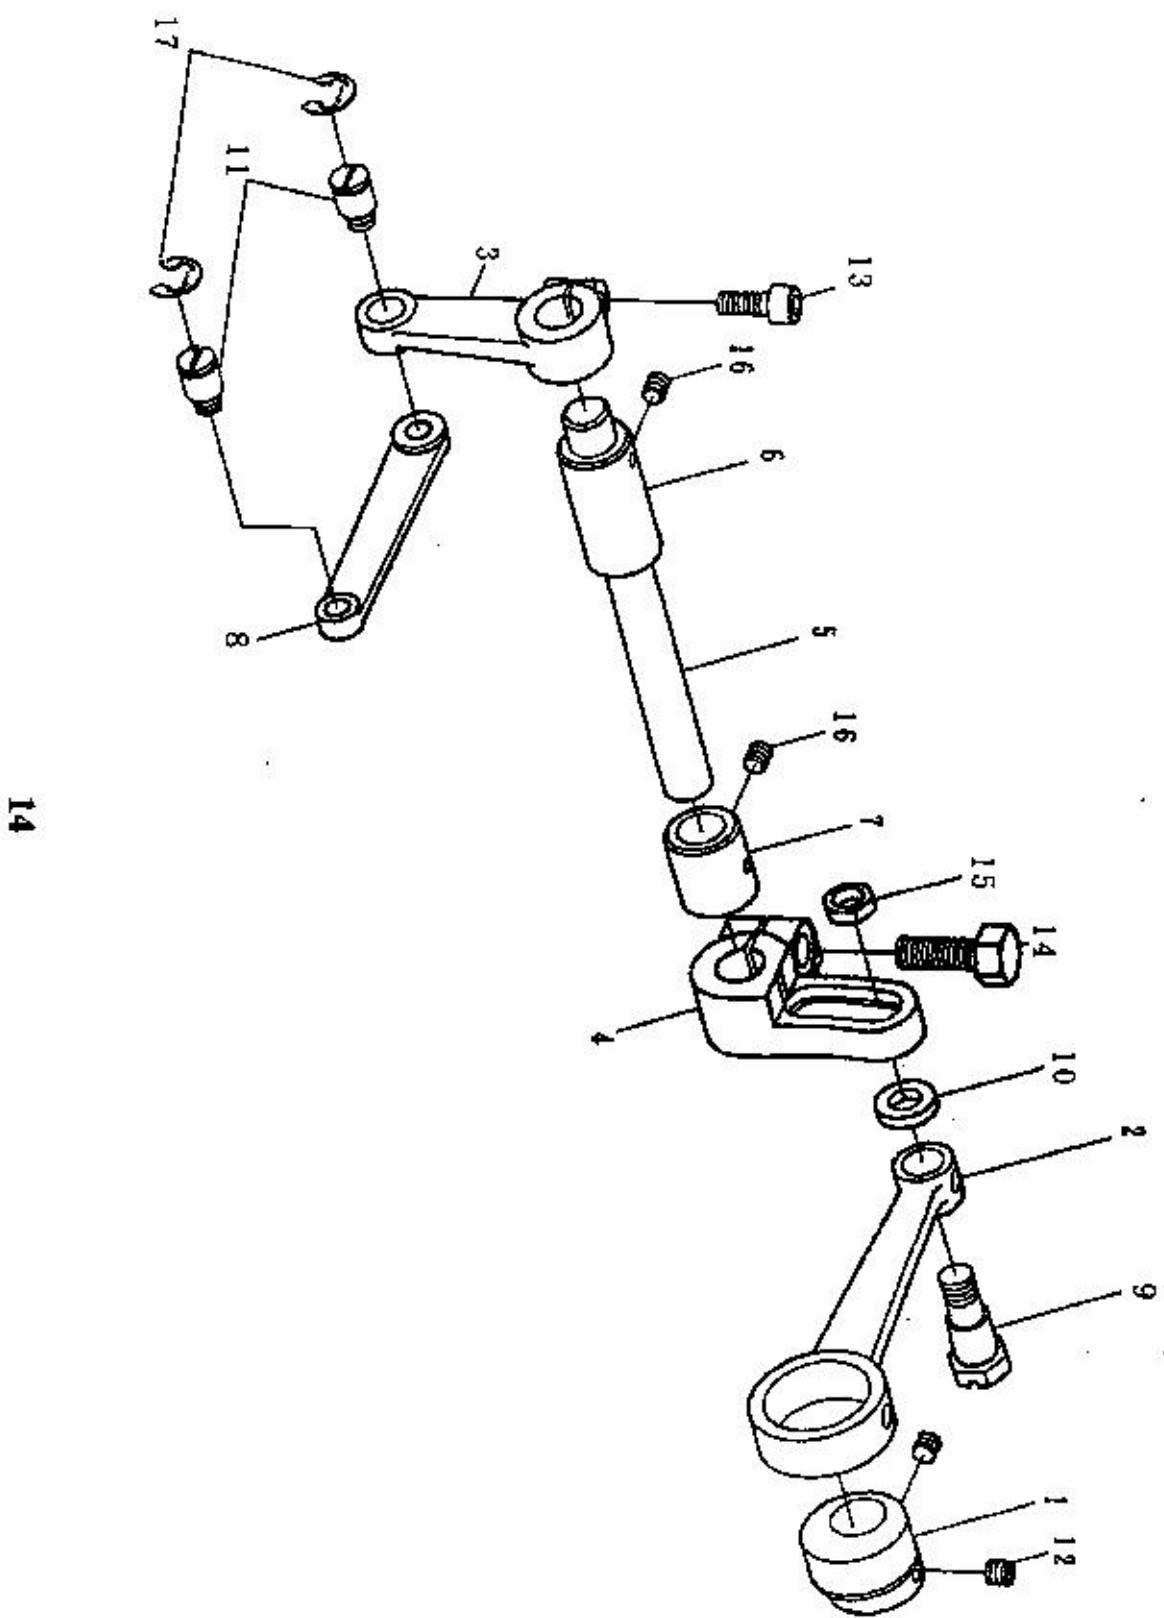

C. 针杆 - 上送料机构 NEEDLE BAR - UPPER FEED MECHANISM COMPONENTS

REF.NO	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 QTY	备注 Remarks
1		4710144401	上送轴偏心 Driving Cam	1	
2		4710144500	上送料连杆 Connecting Rod	1	
3		4710144600	上送轴曲柄 Driving Shaft Arm, Front	1	
4		4710144700	上送轴曲柄 Driving Shaft Arm, Rear	1	
5		4710144800	上送轴 Feed Rocker Shaft	1	
6		4710144900	上送轴前套 Bushing, Front	1	
7		4710145000	上送轴后套 Bushing, Rear	1	
8		4710145100	摇轴连杆 Rod	1	
9		ZSG22002	上送料调节螺丝 Hinge Screw	1	
10		WH218005	平垫 Washer	1	
11		ZSK18019	上送轴连接螺钉 Hinge Screw	2	
12		ZSA16025	偏心顶丝 Screw 1/4-40 L=6	2	
13		ZMJ06002	曲柄收紧螺钉 Screw m6 L=21	1	
14		ZSD20011	上送轴曲柄收紧螺钉 Screw 5/16-18	1	
15		ZSL22001	上送料调节螺母 Nut 11/32-28	1	
16		ZSA15028	上送轴后套顶丝 Screw 15/64-28 L=7	2	
17		REMON80	E型环 E-Shaped Snap Ring(8mm)	2	

D、压脚机构 PRESSURE BAR COMPONENTS

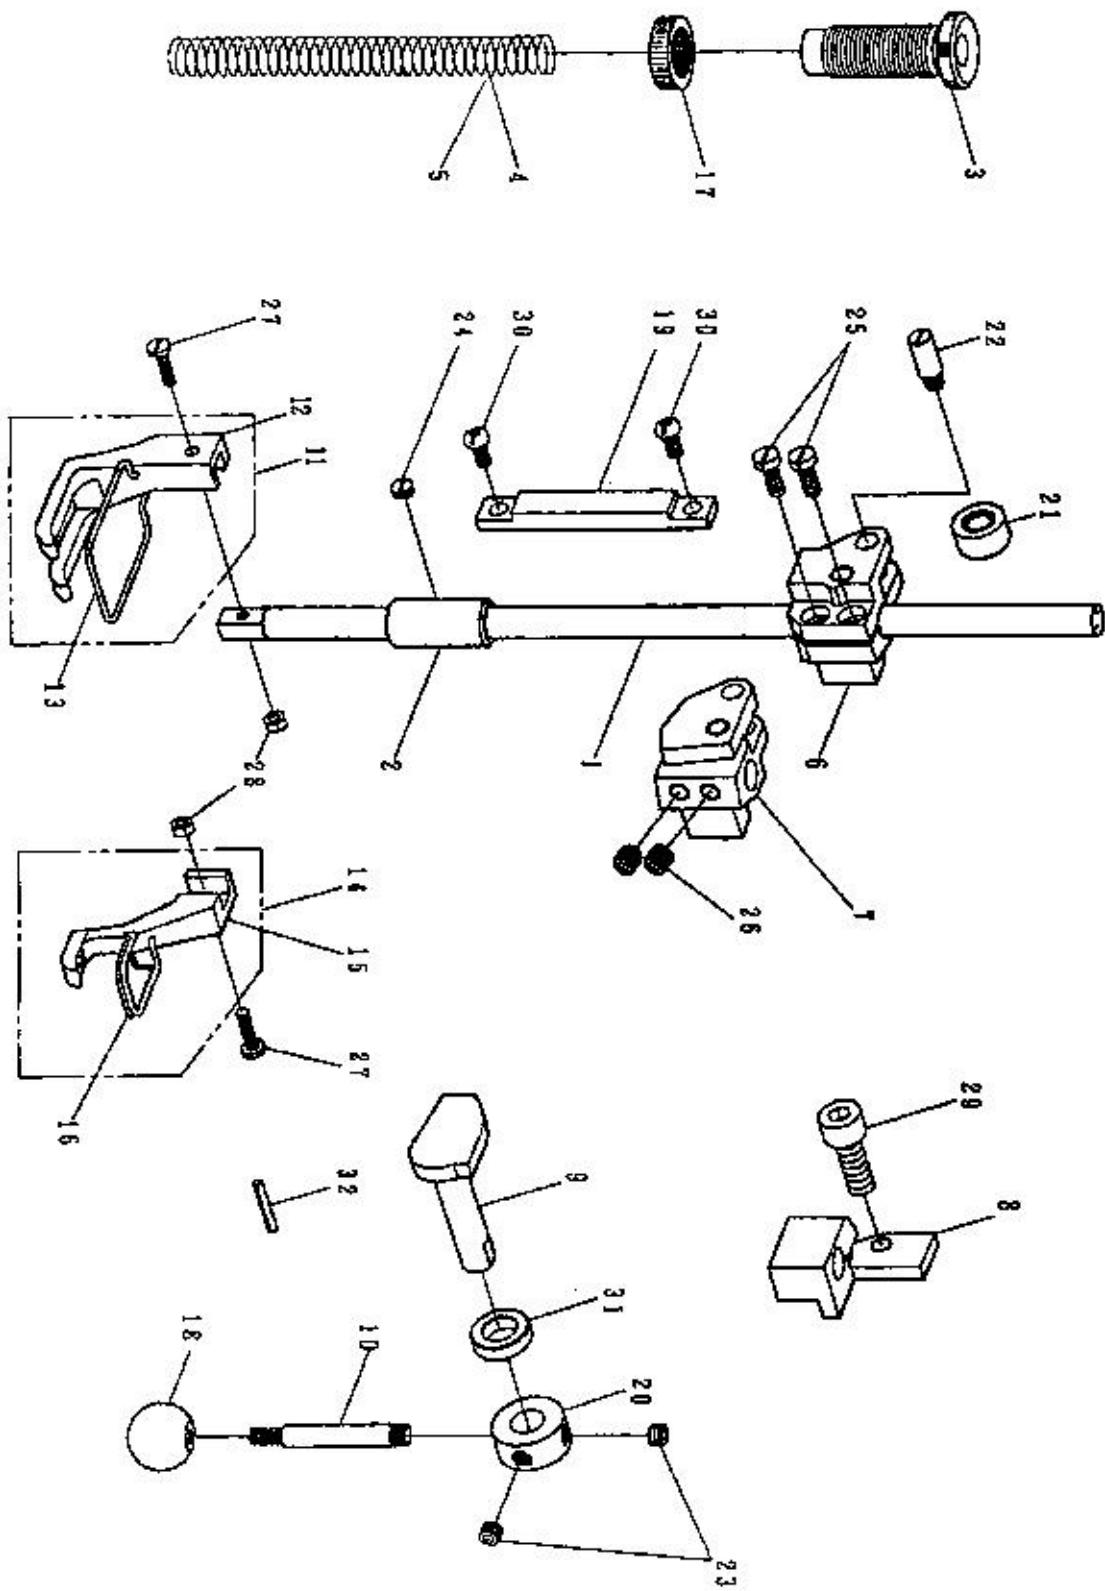

D、压脚机构 PRESSURE BAR COMPONENTS


REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710150100	压杆.....	Presser Bar	1
2		4710150200	压杆下套.....	Presser Bar Bushing	1
3		4710150300	压杆调压螺钉.....	Screw	1
4	#01	4410150400	压杆压缩弹簧.....	Spring	1
5	#02	4710150400	压杆压缩弹簧.....	Spring	1
6	#01	4410150500	压杆导架.....	Presser Bar Guide Bracket	1
7	#02	4710150500	压杆导架.....	Presser Bar GUIDE bracket	1
8		4710150600	压杆提升器.....	Hand Lifter Link	1
9		4710150700	压杆偏心轴.....	Hand Lifter Cam	1
10		4710150800	压脚提升杆.....	Hand Lifter Lever	1
11	#01	4410143805	外压脚(组).....	Pressure Foot(Standard) Asm	1
12	#01	4410143800	外压脚.....	Pressure Foot(Standard)	1
13	#01	4410152500	外压脚挡线簧.....	Guard	1
14	#02	4710152500	内压脚(组).....	Pressure Foot(Standard)Asm	1
15	#02	4410151000	内压脚.....	Pressure Foot (Standard)	1
16	#02	4410152500	外压脚挡线簧.....	Guard	1
17		4410155000	压簧锁紧螺母.....	Nut	1
18		4410151600	压脚提升手球.....	Grip	1
19		4710151700	导板.....	Guide Plate	1
20		4710151800	压杆提升定环.....	Thrust Collar	1
21		4710151900	滚轮轴.....	Roller Follower	1
22		4710152000	定环顶丝.....	Guide Pin	1
23		ZSH16005	压杆下套顶丝.....	Screw 1/4-40 L=4.5	2
24		ZSA15013	压杆导架收紧螺钉.....	Screw 15/64-28 L=2.5	1
25	#01	ZSB12002	压杆导架收紧螺钉.....	Screw 3/16-28 L=12	2
26	#02	ZSH16001	压杆导架螺丝.....	Screw 1/4-40 L=6	2
27		ZSB09001	外压脚螺丝.....	Screw 9/64-40 L=13.5	1
28		ZSL09001	外压脚螺母.....	Nut 9/64-40	1
29		ZS116001	提升架螺钉.....	Screw 1/4-40 L=4.5	1
30		ZSB11011	导板固定螺钉.....	Screw 11/64-40 L=9	2
31		WA100009	定环.....	Collar	1
32		YD030020	弹簧销.....	Spring Pin 3.0x20	1

Note (注记) #1 For 441 用

#2 For 471 用

E、送料机构 FEED MECHANISM COMPONENTS (12)

18

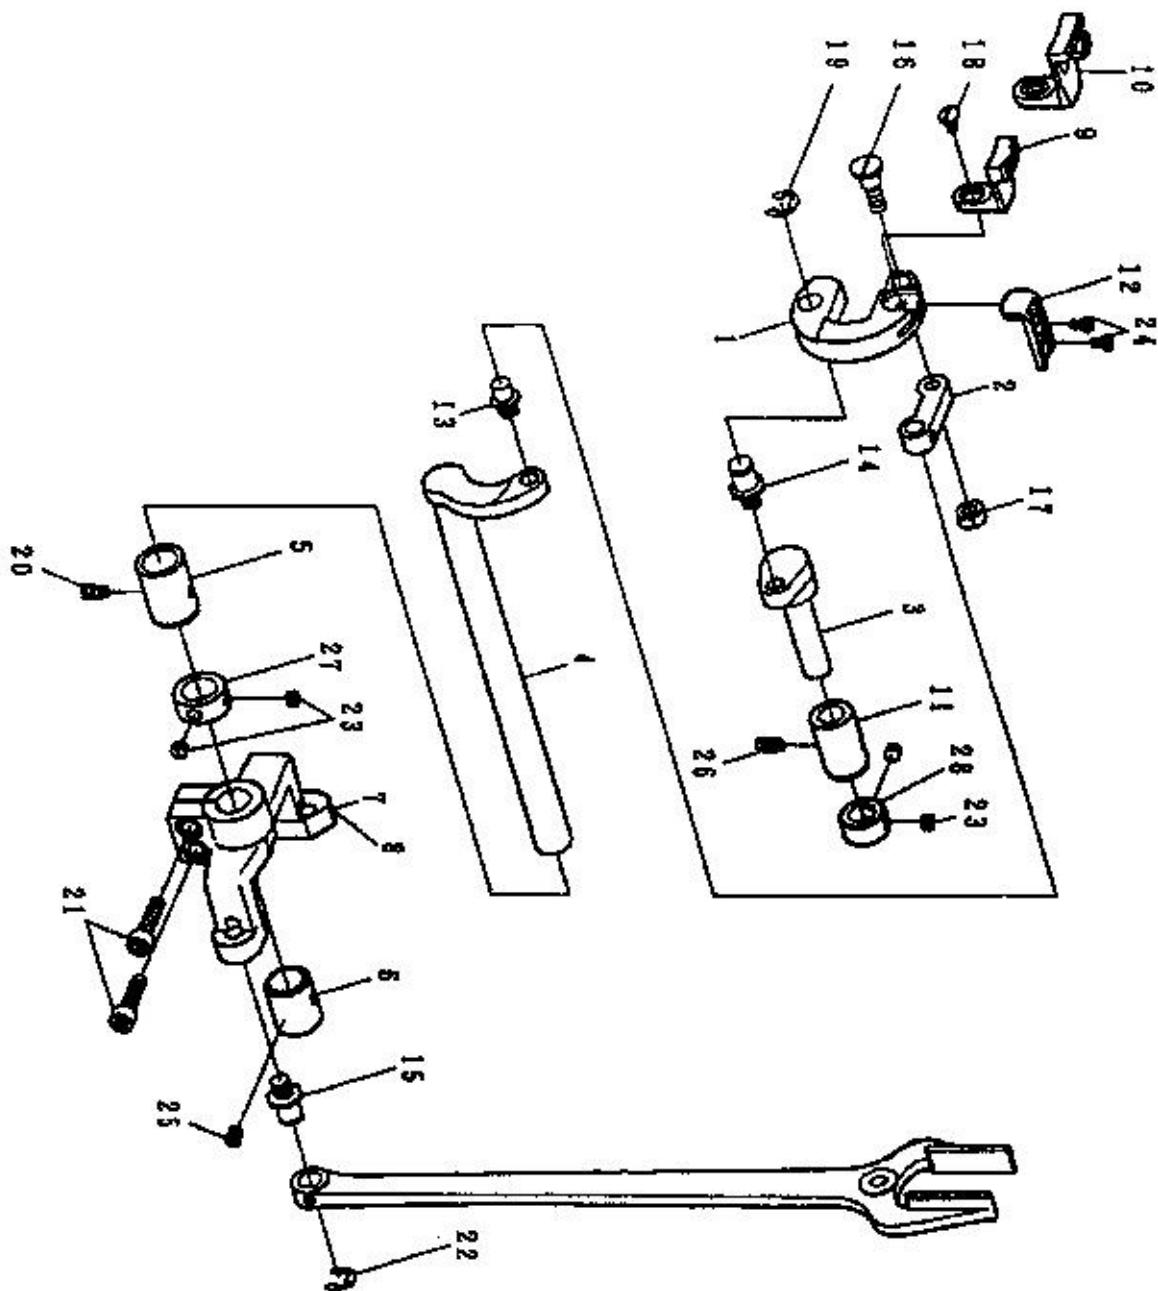


E、送料机构 FEED MECHANISM COMPONENTS (1/2)

REF.NO	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710160160	牙架	Feed Bar	1
2		4710160200	牙架连杆	Feed Bar Link	1
3		4710160300	牙架连接轴	Driving Shaft	1
4		4710160404	摇动轴	Feed Rocker Shaft	1
5		4710160600	摇动轴前套	Bushing, Front	1
6		4710160700	摇动轴后套	Bushing, Rear	1
7	#1	4410160800	摇动曲柄	Feed Rocker Shaft Crank	1
8	#2	4710160800	摇动曲柄	Feed Rocker Shaft Crank	1
9	#1	4410161400	送料牙	Feed Dog	1
10	#2	4710161400	送料牙	Feed Dog	1
11		4710161700	牙架压板	Driving Shaft Metal	1
12		4710162100	摇动轴螺柱	Feed Bar Presser	1
13		ZSK20007	牙架连接轴螺柱	Hinge Screw	1
14		ZSK20009	牙架连接螺柱	Hinge Screw	1
15		ZSK20009	牙叉连接螺柱	Hinge Screw	1
16		ZSG16024	连杆牙架连接螺钉	Hinge Screw D=7.94 L=8	1
17		ZSL16004	连杆牙架连接螺母	Nut 1/4-24	1
18		ZSB11041	机牙螺丝	Screw 11/64-40 L=7	1
19		RE000080	E型环	E-Shaped Snap Ring(3mm)	1
20		ZSA15037	摇动轴前套顶丝	Screw 15/64-28 L=10.5	1
21		ZMJ06004	摇动曲柄收紧螺钉	Screw M6	2
22		RE000080	E型环	E-Shaped Snap Ring(8mm)	1
23		ZSA16029	定环顶丝	Screw 1/4-40 L=3.5	4
24		ZSB11035	牙架压板螺丝	Screw 11/64-28 L=6	2
25		ZSA15028	摇动轴后套顶丝	Screw 15/64-28 L=7	1
26		ZSA15037	牙架连接套顶丝	Screw 15/64-28 L=10.5	1
27		LG4044-0A	摇动轴定环	Thrust Collar D=14.72 W=10	1
28		LG4014-0A	牙架连接轴定环	Thrust Collar D=11.11 W=10	1

Note (注记) #1 For 441 用

#2 For -471 用


E、送料机构 FEED MECHANISM COMPONENTS (2/2)

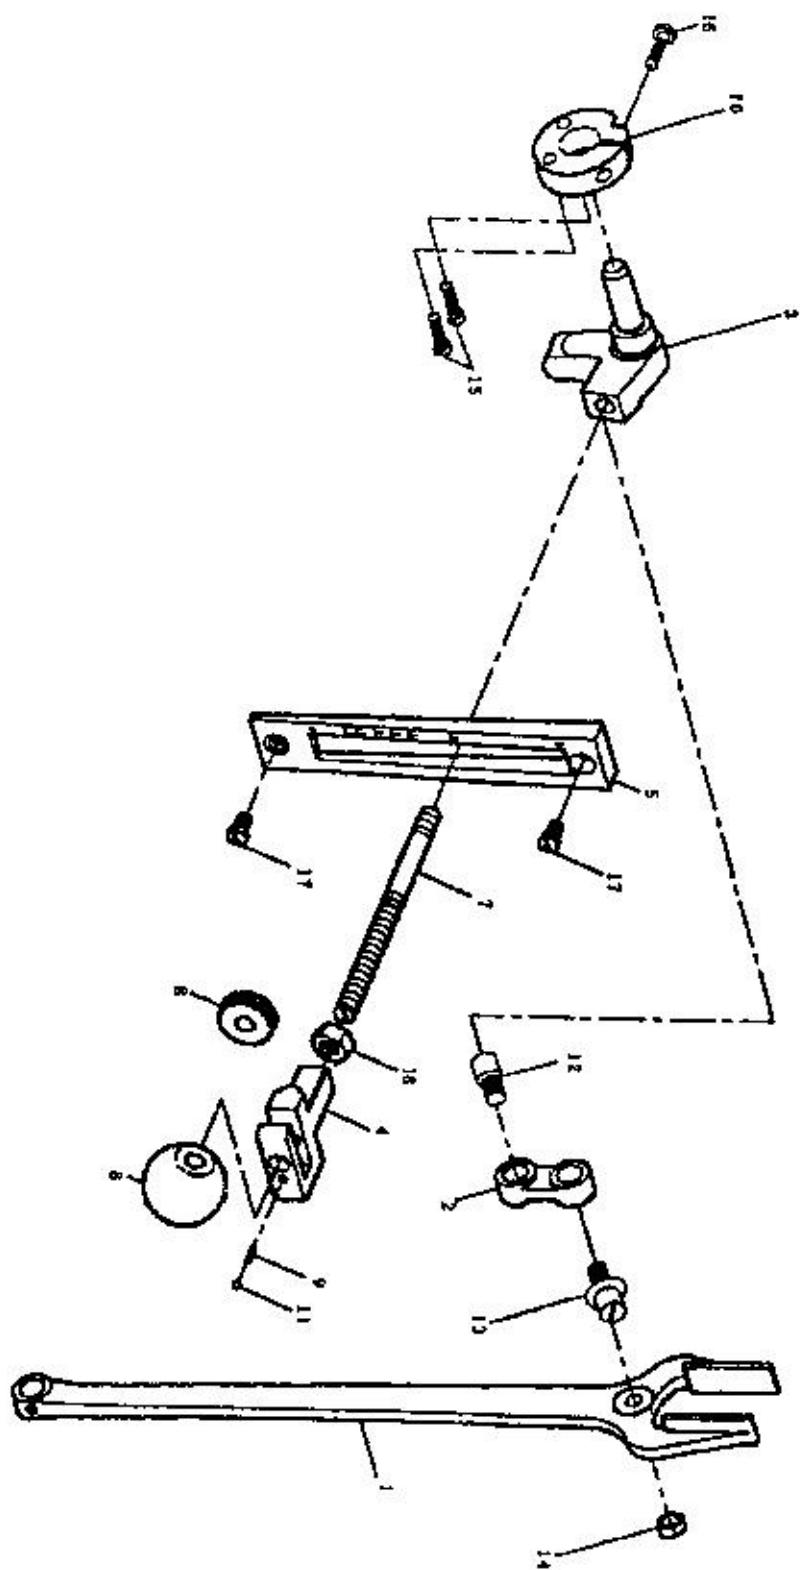

E、送料机构 FEED MECHANISM COMPONENTS (2/2)

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710160900	大牙叉 Rod	1	
2		4710161000	针距连杆 Feed Connecting Link	1	
3		4710161100	针距座 Feed Regulator	1	
4		4710161200	倒缝杠杆 Lever	1	
5		4710161300	刻度板 Side Cover	1	
6		4710161600	针距调节手柄 Lever Grip	1	
7		4710161800	针距调节杆 Lever Shaft	1	
8		4710161900	针距调节螺母 Nut	1	
9		4710162000	固定弹簧 Spring	1	
10		4710162200	针距固定环 Support Plate	1	
11		4710162300	刚球 Ball	1	
12		ZSK18018	针距连杆连接螺钉 Hinge Screw, A	1	
13		ZSK18020	针距连杆连接螺钉 Hinge Screw, B	1	
14		ZSL18001	连接螺母 Nut 9/32-28	1	
15		ZSB12015	固定环固定螺钉 Screw M6-28 L=12	2	
16		ZSB12036	固定环收紧螺钉 Screw M6-32 L=18	1	
17		ZSB15019	刻度板固定螺钉 Screw M6-28 L=9	2	
18		ZML08001	杠杆锁紧螺母 Nut	1	

F、下轴机构 HOOK DRIVING SHAFT COMPONENTS (12)

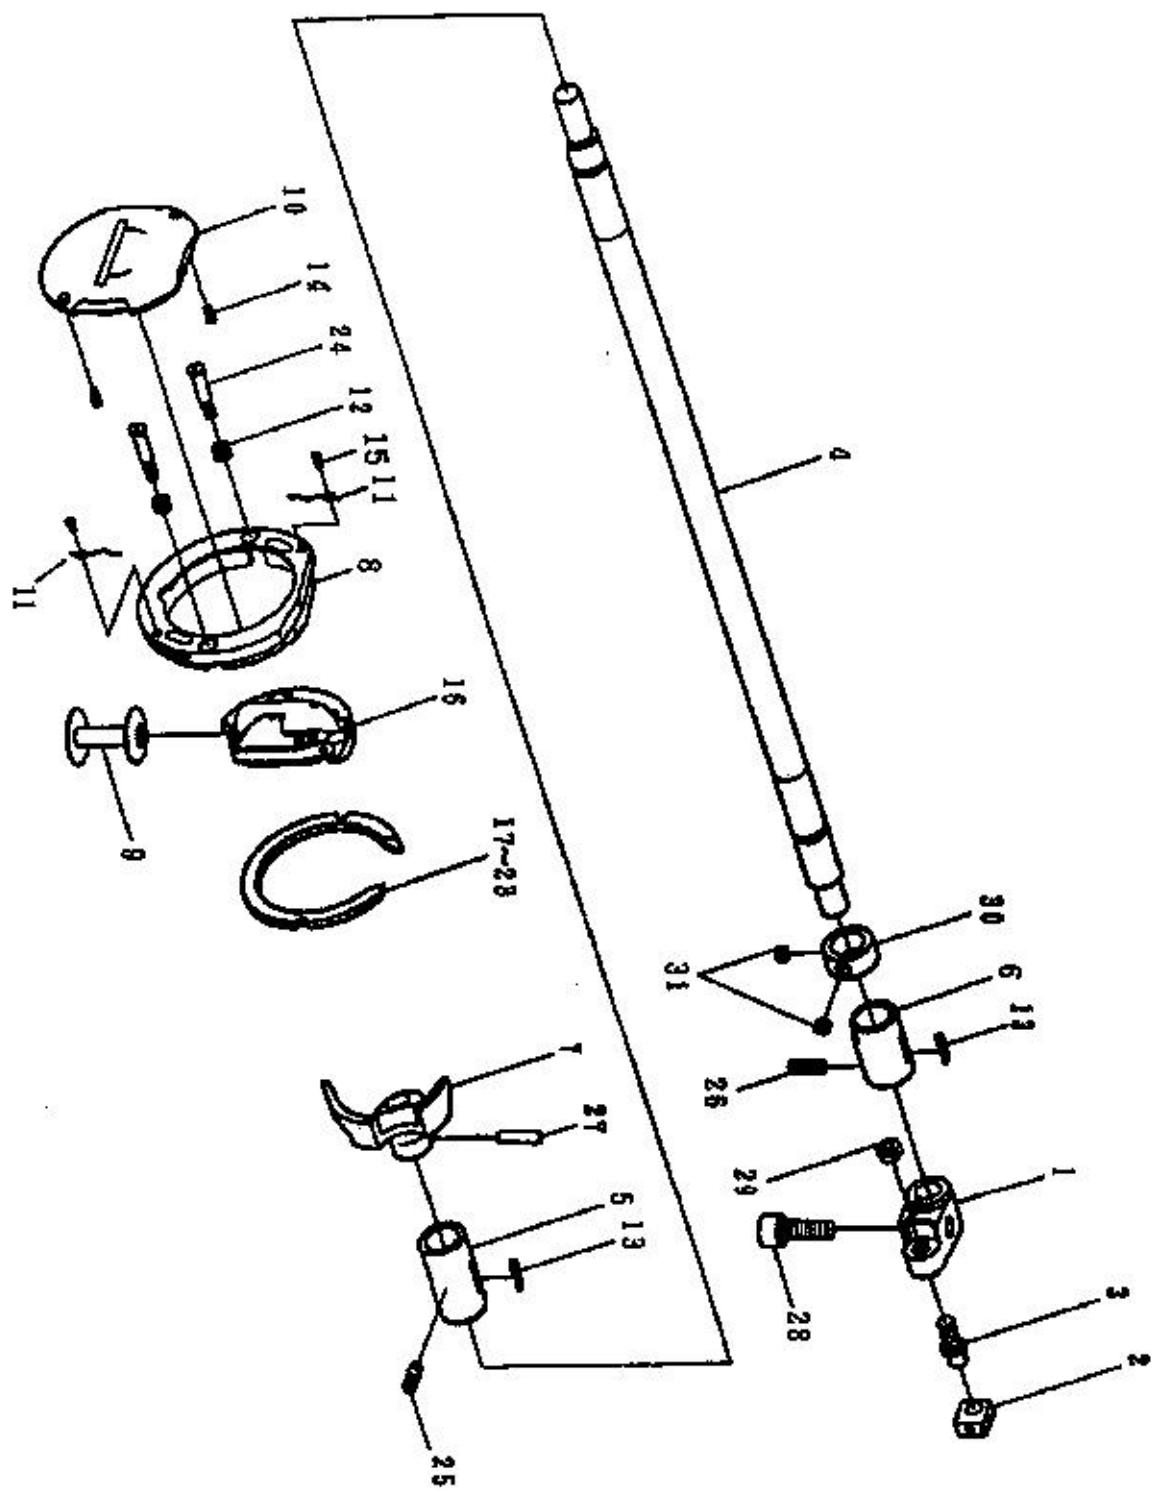


F、下轴机构 HOOK DRIVING SHAFT COMPONENTS (1/2)

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710182500	下轴曲柄.....	1	Hook Driving Shaft Crank
2		4710182600	摆轴滑块.....	1	Crank Slide Block.....
3		4710182700	滑块螺柱.....	1	Slide Block Stud.....
4		4710180100	下轴.....	1	Hook Driving Shaft.....
5		4710180300	下轴前套.....	1	Bushing, Front.....
6		4710180500	下轴后套.....	1	Bushing, Rear.....
7		4410181600	摆梭托.....	1	Shuttle Driver.....
8		4710181400	梭床.....	1	Shuttle Race Body.....
9		4710183200	梭心.....	1	Bobbin.....
10		4710183600	梭床盖.....	1	Hook Cover.....
11		4710183700	梭床盖弹簧.....	2	Hook Cover Spring.....
12		4710183800	梭床盖弹簧.....	2	Hook Counter Spring.....
13		4710183900	毛毡.....	2	Oil Felt
14		4710184000	梭床盖螺钉.....	2	Screw
15	ZSG06004	4710181300	摆梭.....	1	Hook Cover.....
16		4710184210	梭床圈.....	1	Distance Piece
17	#03	4710184220	梭床圈.....	1	Distance Piece
18	#03	4710184230	梭床圈.....	1	Distance Piece.....
19	#03	4710184230	梭床圈.....	1	Distance Piece(Standard)
20		4710184200	梭床圈.....	1	Distance Piece
21	#03	4710184240	梭床圈.....	1	Distance Piece
22	#03	4710184250	梭床圈.....	1	Distance Piece
23	#03	4710184260	梭床圈.....	1	Distance Piece
24		ZSG12047	梭床螺钉.....	2	Screw
25		ZSA15010	下轴前套螺钉.....	1	Screw 15/64-28 L=15
26		ZSA15010	下轴后套螺钉.....	1	Screw 15/64-28 L=15
27		YB040016	摆梭托肖.....	1	Tapered Pin 4.0x16
28		ZMJ08003	下轴曲柄螺钉.....	1	Screw M8 L=21
29		ZSL18003	滑块螺母.....	1	Nut 9/32-28
30		LG4044-0A	下轴定环.....	1	Thrust Collar D=14.72 W=10
31		ZSA16029	下轴定环螺钉.....	2	Screw 1/4-40 L=3.5

Note (注记) #3 selective part 选用品


F、下轴机构 HOOK DRIVING SHAFT COMPONENTS (2/2)

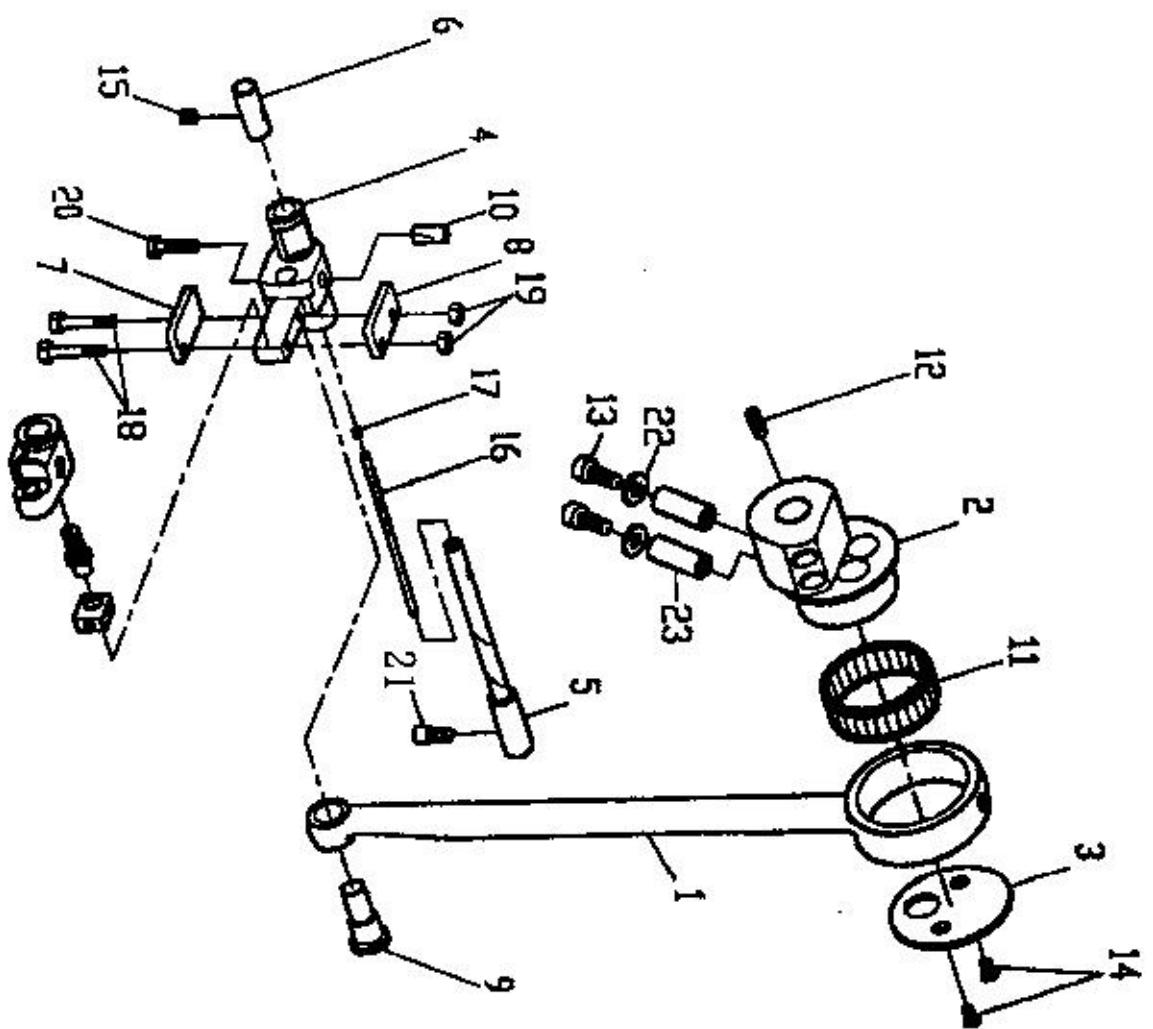

F、下轴机构 HOOK DRIVING SHAFT COMPONENTS (2/2)

REF.NO	NOTE	零件号码 Part No.	零件名称	Name of Part	件数 Q'TY	备注 Remarks
1		4710181800	大连杆	Connecting Rod	1	
2		4710181940	主轴偏心侧板	Cam Side Plate	1	
3		4710182000	摆轴	Oscillating Rock Shaft	1	
4		4710182200	中心轴	Hinge Pin	1	
5		4710182300	中心轴套	Rock Shaft Bushing	1	
6		4710182400	摆轴下夹板	Slide Plate A	1	
7		4710182800	摆轴上夹板	Slide Plate B	1	
8		4710182900	大连杆连接轴	Con-Rod Pin	1	
9		4710183000	大连杆锁紧螺钉	Con-Rod Pin Wedge	1	
10		4710183100	大连杆轴承	Cage & Roller	1	
11		4710182100	主轴偏心定位螺钉	Screw 15/64-28 L=15	1	
12		ZSH15006	偏心锁紧螺丝	Screw M8x1=30	2	
13		ZMJ06006	大连杆固定螺钉	Screw 11/64-40 L=7	2	
14		ZSC11002	中心轴套顶丝	Screw 15/64-28 L=7	1	
15		ZSA15028	毛毡	Oil Wick	1	
16		XA390085	中心轴油道螺钉	Plug 2.9x3.2x3	1	
17		LG1275-0A	摆轴夹板螺丝	Screw	2	
18		ZSD11010	摆轴夹板螺母	Nut 11/64-40	2	
19		ZSL11002	大连杆锁紧螺钉	Screw 3/16-32 L=18	1	
20		ZSB12036	中心轴锁紧螺钉	Screw 15/64-28 L=10.7	1	
21		ZSJ15001	垫圈	Washer	2	
22		WA06008	偏心螺销	PIN	2	
23		4710183400				


G、夹线器机构 TENSION POST COMPONENTS

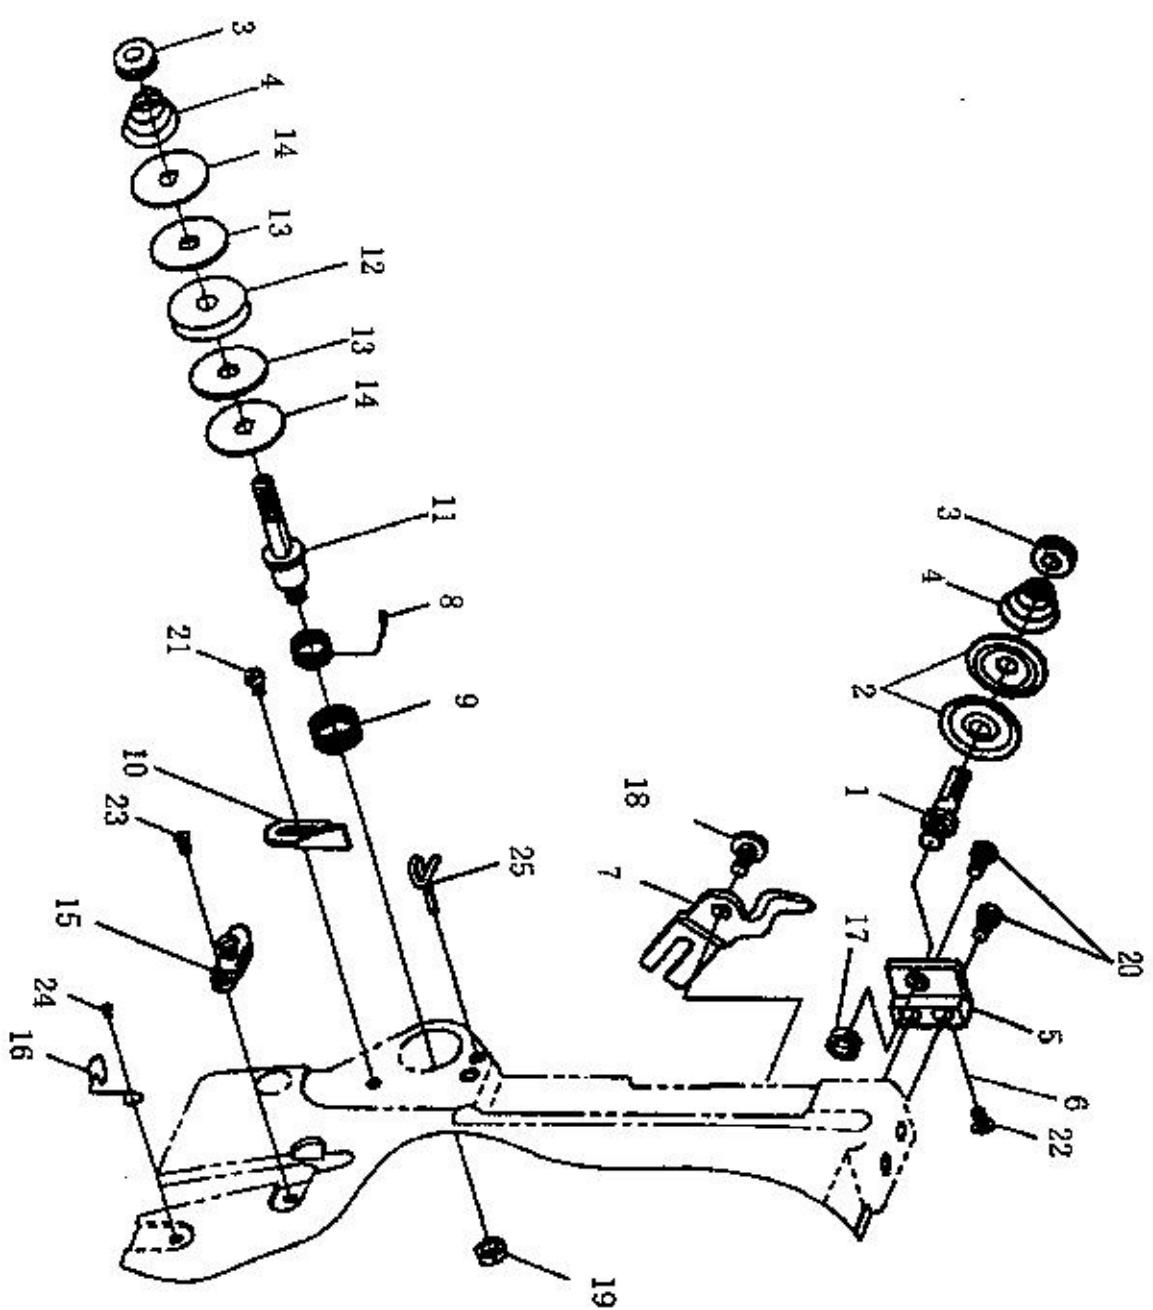

G、夹线器机构 TENSION POST COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710310100	夹线螺钉 Thread Tension Post	1	
2	A1025-0A	ZSN16004	夹线板 Thread Tension Disk	2	
3		4710310400	夹线簧 Thread Tension Spring	2	
4		4710310500	夹线座 Thread Tension Post Bracket	1	
5		4710310600	线挂 Thread Tension Guide	1	
6		4710310700	松线板 Thread Releasing Plate	1	
7		4710310800	挑线簧 Spring A	1	
8		4710310900	挑线扭簧 Spring B	1	
9		4710311000	线轴弹簧调节器 Spring Support Plate	1	
10		4710311100	过线螺钉 Thread Tension Wheel Post	1	
11		4710311200	过线轮 Thread Tension Wheel	1	
12		XB123001	过线轮油毡 Wheel Felt	2	
13		4710311400	穿线压板 Felt Support Plate	2	
14		4710311605	穿线架组件 Arm Thread Guide Bottom Asm	1	
15		4710312000	线挂下 Frame Thread Guid	1	
16		ZSL18003	夹线器固定螺母 Nut 9/32-28	1	
17		ZSG12046	松线板固定螺钉 Hinge Screw D=6.0 L=3.2	1	
18		ZSL15002	过线锁紧螺母 Nut 15/64-28	1	
19		ZSH11011	夹线器座固定螺钉 Screw 11/64-40 L=12	2	
20		ZSB09014	调节器固定螺钉 Screw 9/64-40 L=6.0	1	
21		ZSB09047	线挂螺钉 Screw 9/64-40 L=7	1	
22		ZSC09005	穿线架固定螺钉 Screw 9/64-40 L=5	1	
23		ZSB09047	线挂螺钉 Screw 9/64-40 L=7	1	
24		4710113300	过线圈 Thread Guide	1	


H、夹线器穿线机构 THREAD WINDER & THREAD GUIDE COMPONENTS (12)

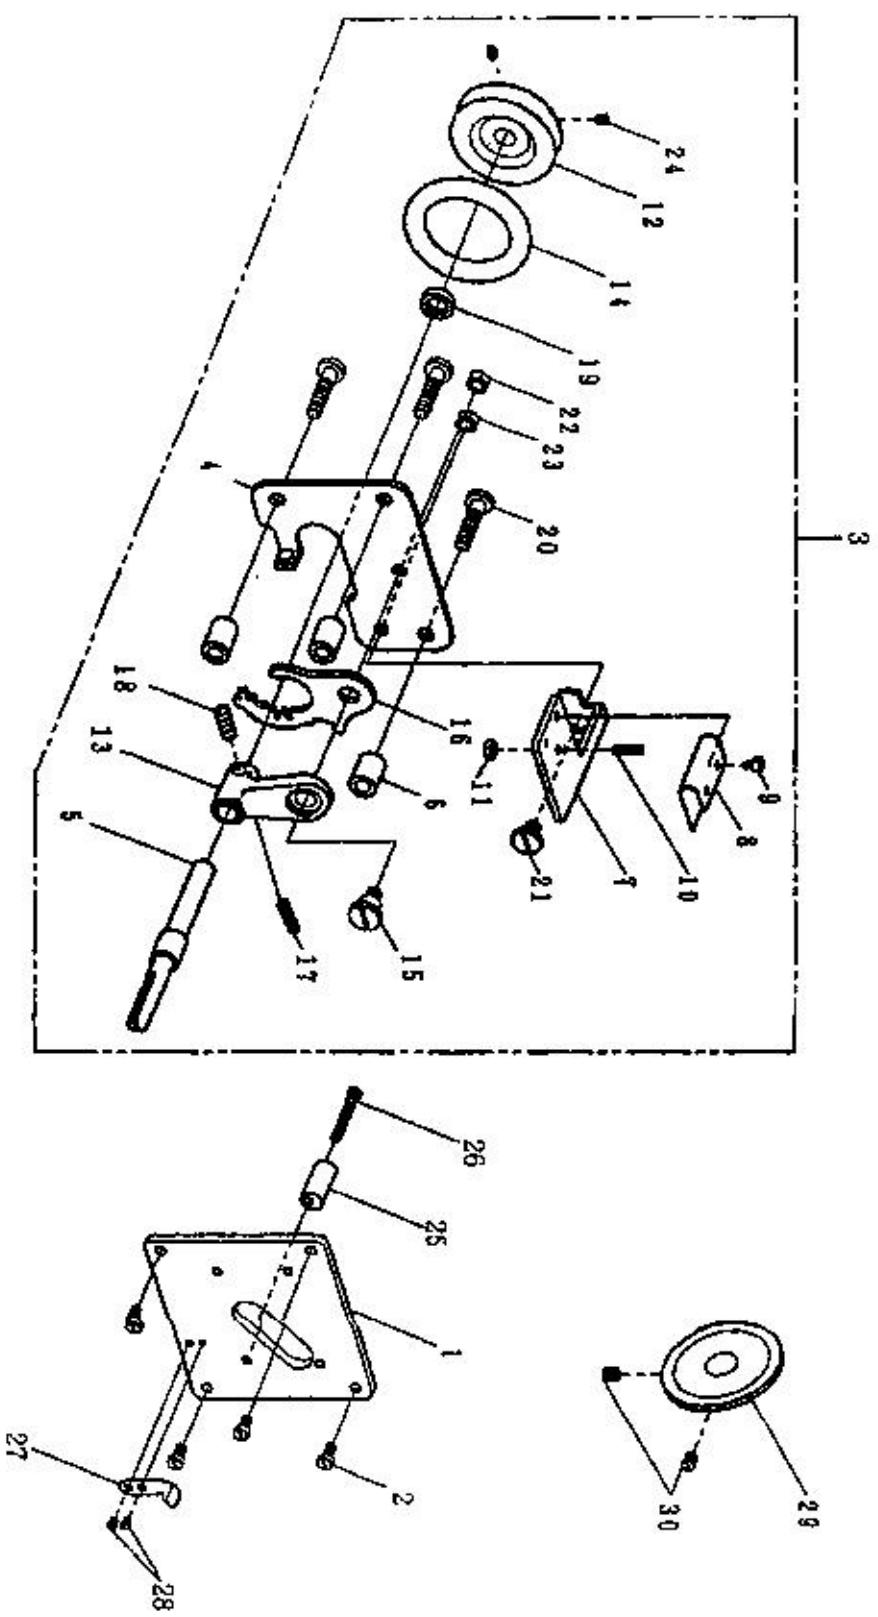

B、夹线器 穿线机构 THREAD WINDER & THREAD GUIDE COMPONENTS (1/2)

REF.No	NOTE	零件号码 Part No.	零件名称	Name of Part	件数 Q'TY	备注 Remarks
1		4710320100	绕线器座	Thread Winder Plate	1	
2		ZSB11011	绕线器座固定螺钉	Screw 11/64-40 L=9	4	
3		4710320805	绕线器组件	Thread Winder Asm	1	
4		4710320800	下绕线板	Thread Winder Base	1	
5		4710320940	绕线轴	Thread Winder Shaft	1	
6		4710321000	定位销	Spacer	3	
7		4710321100	压力板	Bobbin Presser	1	
8		4710321200	满线脚板	Bobbin Presser Spring	1	
9		ZSB06008	跳板固定螺钉	Screw 3/32-56 L=3.3	2	
10		ZSA08007	跳板调节螺钉	Adjusting Screw	1	
11		ZSL08001	跳板调节螺母	Nut 1/8-44	1	
12		4710321300	驱动轮	Bobbin Winder Wheel	1	
13		4710321400	绕线架	Bobbin Winder Frame	1	
14		4710322000	绕线轮	Wheel Ring	1	
15		ZSG11059	绕线架连接螺钉	Hinge Screw	1	
16		4710321500	压縮弹簧	Bobbin Winder Tension Bracket	1	
17		4710321600	绕线压缩弹簧	Spring	1	
18		4710321800	驱动轮定环	Bobbin Winder Spring	1	
19		4710321900	下绕线板	Thread Winding Shaft Collar	1	
20		ZSB11083	下绕线板固定螺钉	Screw 11/64-40 L=18	3	
21		ZSG11057	压力板固定螺钉	Hinge Screw D=7.24 L=1.9	1	
22		ZSL11007	压力板固定螺母	Nut 11/64-40	1	
23		ZSL11007	绕线架固定螺母	Nut 11/64-40	1	
24		ZSA11003	驱动轮固定螺钉	Screw 11/64-40 L=5	2	
25		4710320300	定位销	Stopper	1	
26		ZSB11071	定位销固定螺钉	Screw 11/64-40 L=30	1	
27		4710320400	切线保持板	Thread Cut & Clamp Plate	1	
28		ZSB08008	保持板固定螺钉	Screw 1/8-44 L=4	2	
29		4710320500	摩擦轮	Friction Wheel	1	
30		ZSA15028	摩擦轮固定螺钉	Screw 15/64-28 L=7	2	


H、夹线器穿线机构 THREAD WINDER & THREAD GUIDE COMPONENTS (2/2)

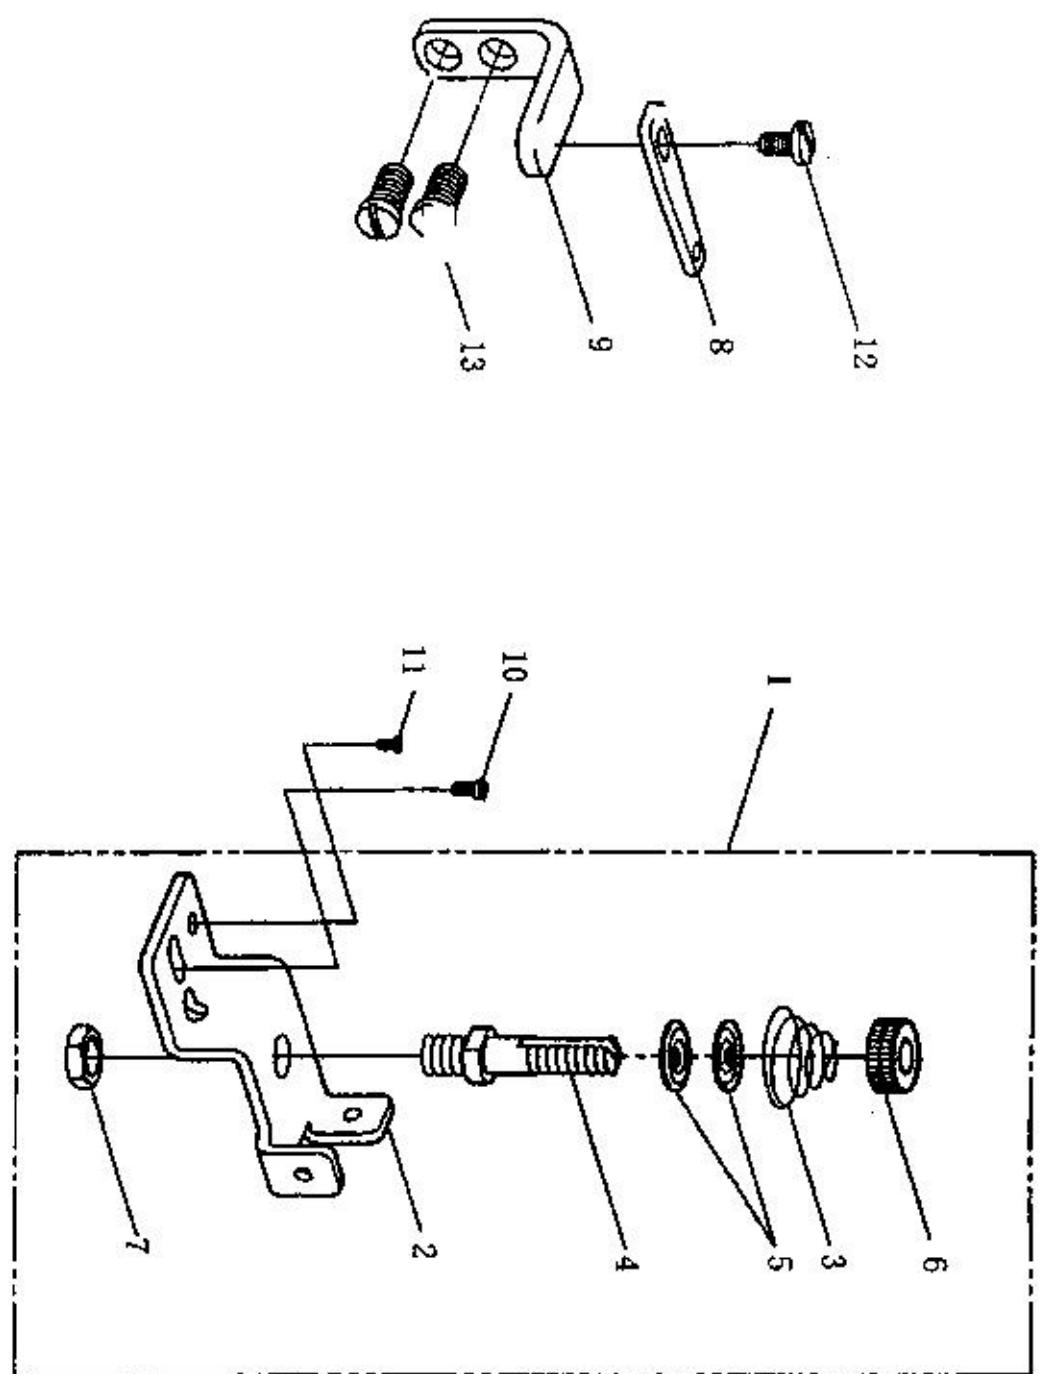

H、夹线器 穿线机构 THREAD WINDER & THREAD GUIDE COMPONENTS (2/2)

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q' TY	备注 Remarks
1		4710313005	绕线压力调节器组件	1	
2		4710313000	压力调节器座 Thread Winder Guide Base	1	
3		4710313100	夹线簧 Tension Spring	1	
4		4710310100	调压螺丝 Thread Tension Post	1	
5	A1025-0A		夹线板 Tension Disk	2	
6		ZSN160M4	调压螺母 Thread Tension Stud Nut	1	
7		ZSL18003	调压螺丝固定螺母 Nut 9/32-28	1	
8		4710322200	线挂 Thread Guide	1	
9		4710322300	线挂座 Guide Bracket	1	
10		ZSB11015	压力座调整螺丝 Screw 11/64-40 L=8.5	1	
11		ZSB08001	压力固定螺丝 Screw 1/8-44 L=6	1	
12		ZSB09047	线挂固定螺钉 Screw 9/64-40 L=7	1	
13		ZSB15004	线挂座固定螺钉 Screw 15/64-28 L10.5	2	


I. 膝动提升机构 KNEE LIFTER COMPONENTS

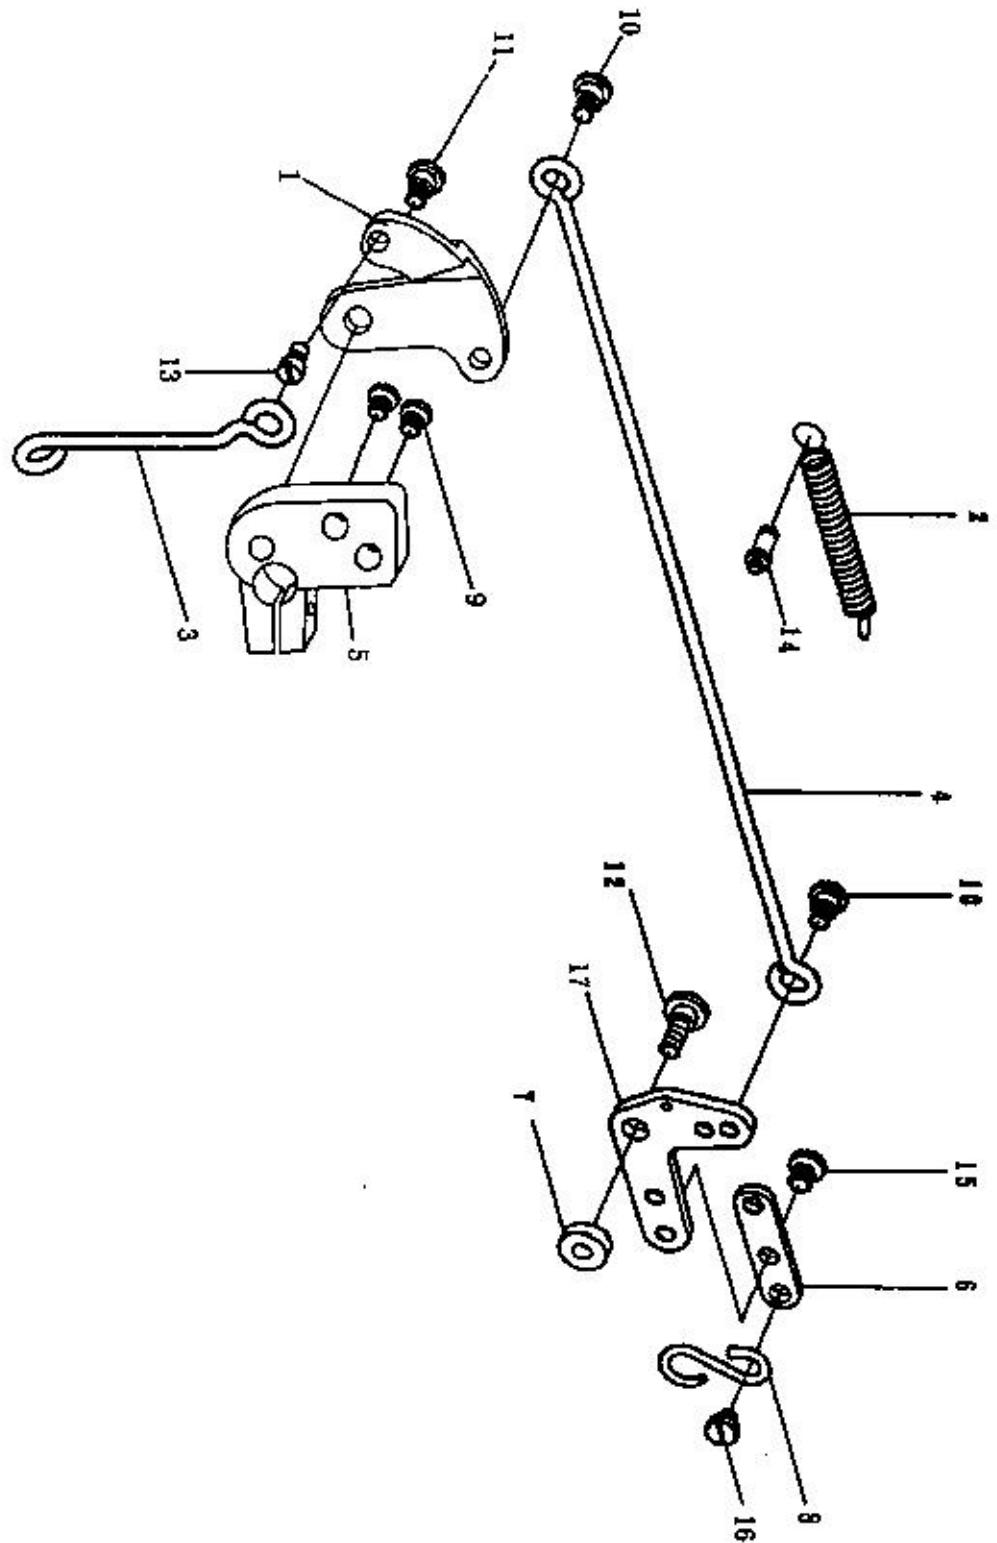

1、膝动提升机构 KNEE LIFTER COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Qty	备注 Remarks
1		4710340100	扁型压杆提升臂 Presser Bar Lifting Link	1	
2		4710340200	压杆提升拉簧 Presser Bar Lifting Spring	1	
3		4710340300	压杆提升杆 Presser Bar Lifting Bar	1	
4		4710340400	压杆提升拉杆 Side Connecting Bar	1	
5		4710340500	支撑板 Link Base	1	
6		4710340600	连接板 Link Plate	1	
7		4710340700	升臂定环 Link Collar	1	
8		4710340800	S型销 S-Plug	1	
9		ZSB15001	支撑板紧固螺钉 Screw M5/64-28 L=6.5	2	
10		ASG15045	拉杆连接螺钉 Hinge Screw D=7.94 L=4.3	2	
11		ZSG15045	升臂连接螺钉 Hinge Screw D=7.94 L=4.3	1	
12		ZSG15046	升臂连接螺钉 Hinge Screw D=7.94 L=4.3	1	
13		4710341200	升杆连接螺钉 Hinge Screw	1	
14		ZSK11037	弹簧勾螺钉 Spring Suspension	1	
15		ZSB15001	连接板固定螺钉 Screw M5/64-28 L=6.5	2	
16		ZSG16025	S销连接螺钉 Hinge Screw D=8.0 L=3.4	1	
17		4710340110	L型压杆提升臂 Presser Bar Lifting Link	1	


J. 皮带罩 BELT COVER COMPONENTS

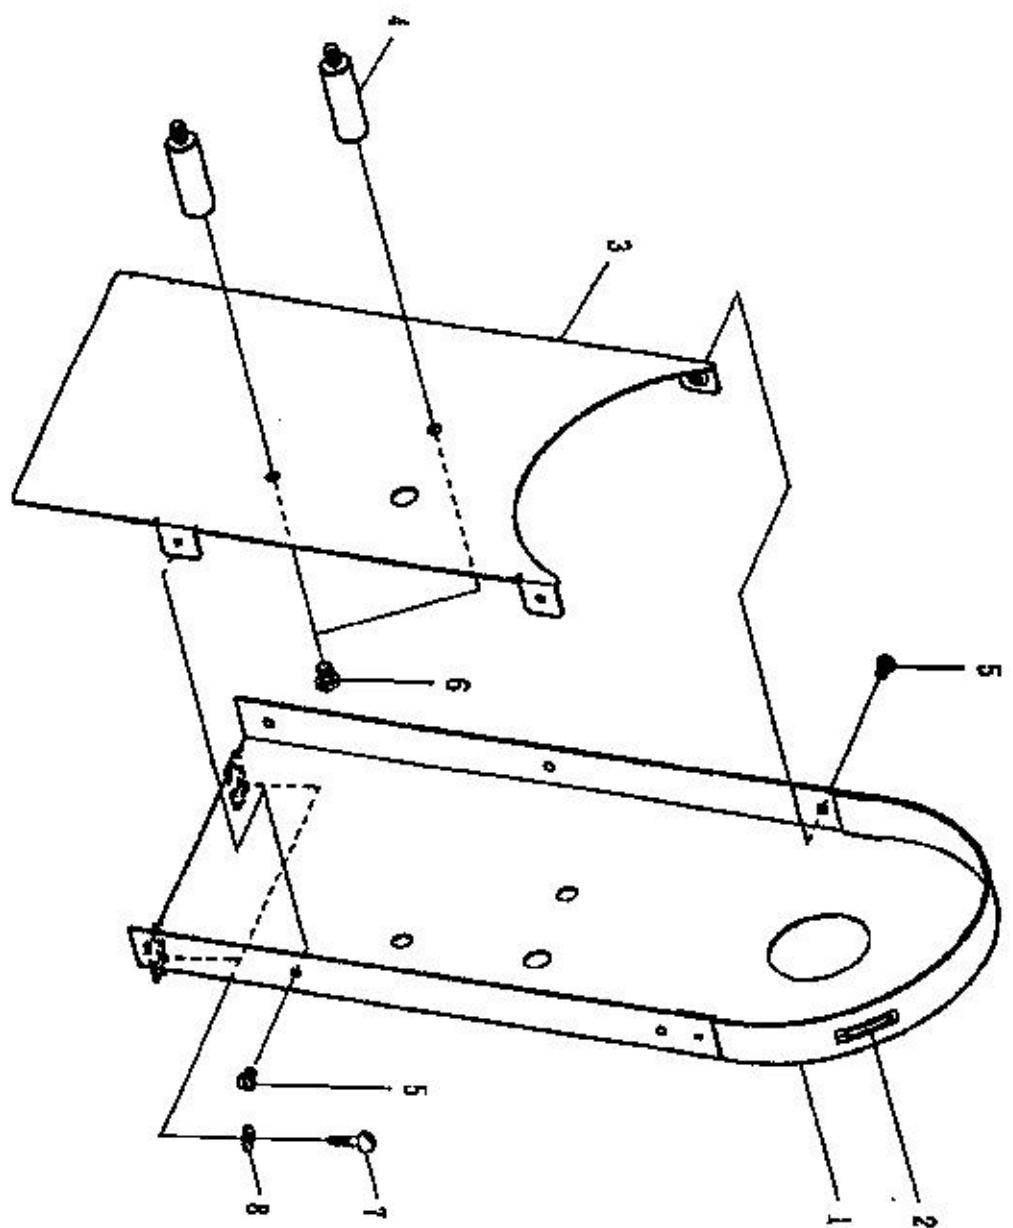

J、皮带罩 BELT COVER COMPONENTS

REF. NO	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		4710335100	皮带盖 A Belt Cover A	1	
2		4710335400	方向标识 Direction Label	1	
3		4710335200	皮带盖 B Belt Cover B	1	
4		4710335300	皮带盖连接螺丝 Belt Cover Stud	2	
5		ZSB11068	皮带盖固定螺丝 Screw 11/64-40 L=5	5	
6		ZSB15001	皮带盖锁紧螺丝 Screw 15/64-28 L=6.5	2	
7		ZMT05003	木螺丝 Wood Screw D=8.3 L=18	2	
8		WA059005	平垫 Washer 5x10.5M	2	


K、线架 THREAD STAND COMPONENTS

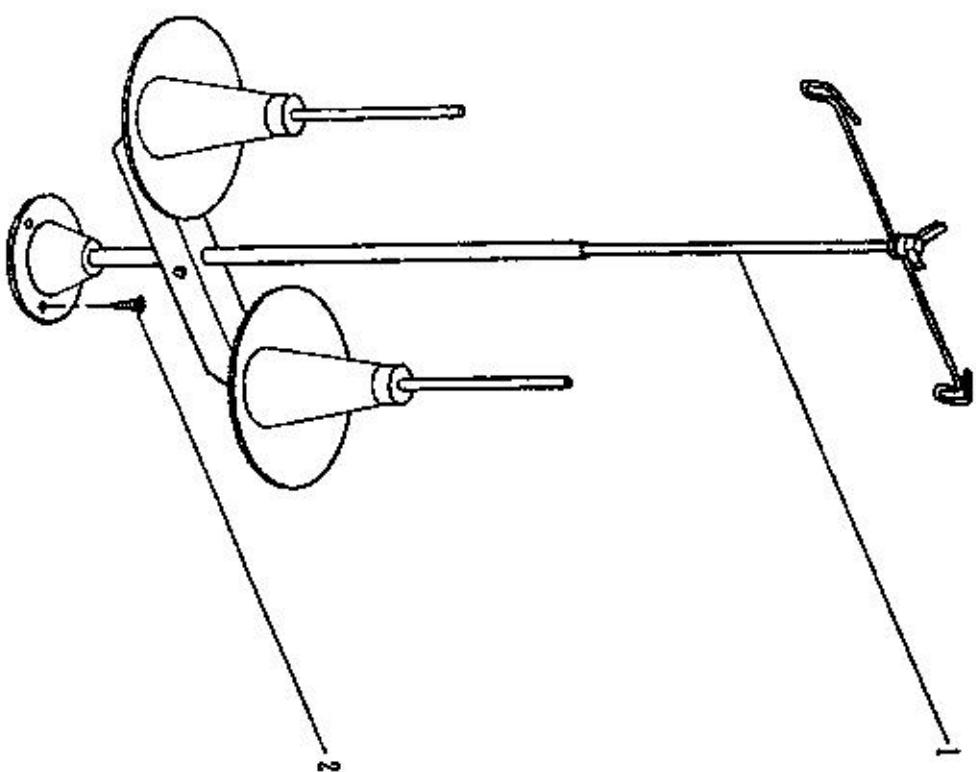

K、线架 THREAD STAND COMPONENTS

REF.No	NOTE Part No.	零件名称	Name of Part	件数 Q'TY	备注 Remarks
1	A7050-0A ZMT05001	线架 木螺丝	Thread Stand Wood Screw L=8	1 3	
2					

I、抬板机架 TABLE COMPONENTS

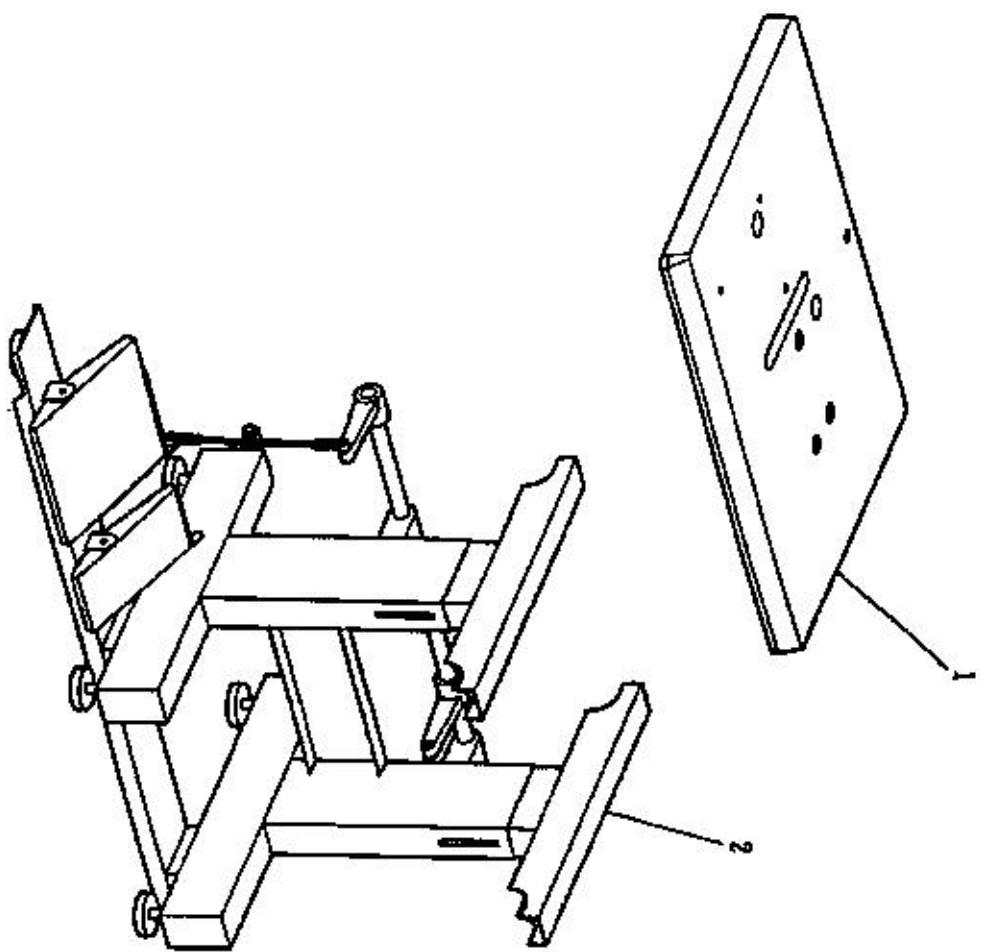


L、抬板机架 TABLE COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 QTY	备注 Remarks
--------	------	------------------	----------------------	-----------	---------------

- | | | | | | |
|---|---|------------|----------|-------------|---|
| 1 | | 4710820100 | 台板 | Table | 1 |
| 2 | 0 | | 机架 | Stand | 1 |

M、配件 ACCESSORIES PARTS COMPONENTS

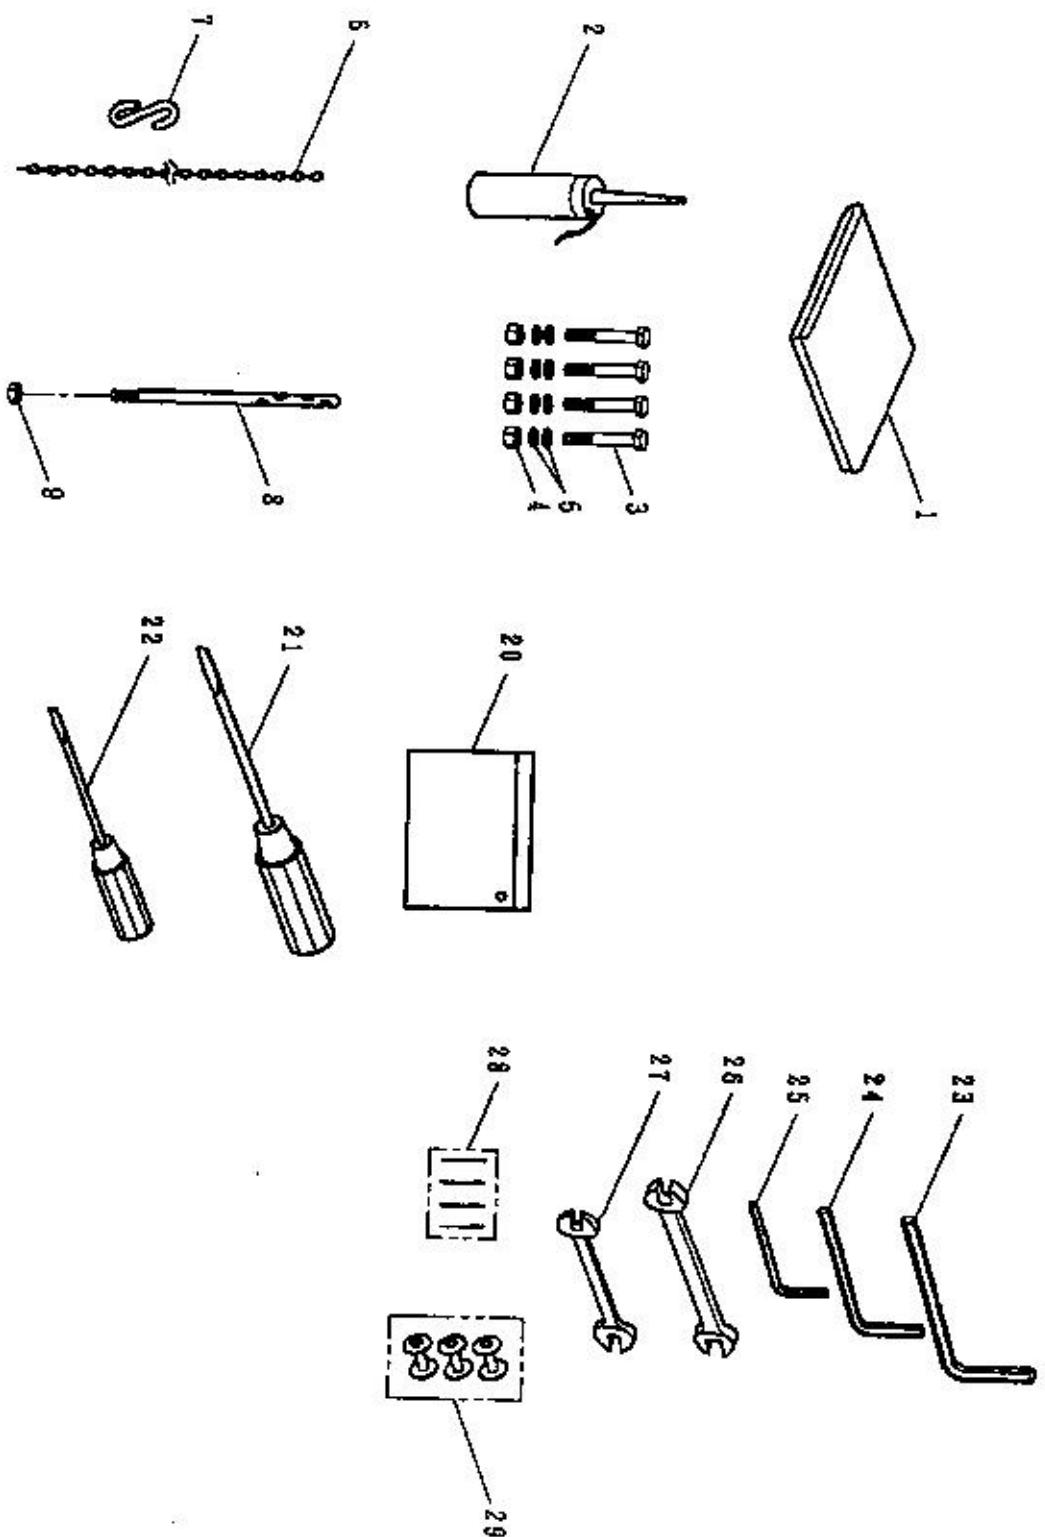

H、附件 ACCESSORIES PARTS COMPONENTS

REF.No	NOTE	零件号码 Part No.	零件名称 Name of Part	件数 Q'TY	备注 Remarks
1		A7001-0A	车头盖 Cover	1	
2		A7012-1A	油壶 Oiler Asm.	1	
3		ZMD10002	螺丝 Screw M10 L=65	4	
4		ZML10004	螺帽 Nut M 10	4	
5		WA110003	平垫圈 Washer 11x27x2	8	
6		4710341400	锁链 Chain	1	
7		4710340800	S型销 S-Plug	1	
8		4710113400	绵柱 Needle Thread Guide Pin	1	
9		ZSL12003	螺帽 Nut 3/16-32	1	
10		4710911105	油壶组 Oil Pot Asm.	1	
11		4710911100	油壶盖 Oil Pot Cover	(1)	
12		4710911000	油壶 Oil Pot	(1)	
13		4710911200	穿线构 Frame Thread Guide	(1)	
14		4710911300	弹簧板 Cover Stopper	(1)	
15		ZSL06001	螺帽 Nut 3/32-56	(1)	
16		ZSB09047	螺丝 Screw 9/64-40 L=7	(1)	
17		4710911400	销 Pin	(1)	
18		ZSB15005	螺丝 Screw 15/64-28 L=12	(1)	
19		ZSA09005	螺丝 Screw 9/64-40 L=3.5	(1)	
20		A7000-0A	工具袋 Accessory Box	1	
21		A7010-2A	螺丝刀(大) Screw Driver, Large	1	
22		A7010-0A	螺丝刀(小) Screw Diver, Small	1	
23		EHT141-5A	六角形螺丝刀 Hexagonal Wrench Key(5mm)	1	
24		EHT141-6A	六角形螺丝刀 Hexagonal Wrench Key(4mm)	1	
25		EHT141-4A	六角形螺丝刀 Hexagonal Wrench Key(3mm)	1	
26		LG7200-0A	开口扳手 Wrench (11x14)	1	
27		LG7201-0A	开口扳手 Wrench (9x16)	1	
28		INT94#Z30	针 Needle (794Nm=230-4)	1	
29		4710183200	梭心 Bobbin	3	

N、零件号码与页数对照表 NUMERICAL PARTS-LIST (II)

零件号码 Part No.	页数 PAGE						
4410111005.....	3-1	4410273000.....	9-10	4710143000.....	11-24	4710152000.....	17-22
4410111200.....	3-4	4710111005.....	3-2	4710143100.....	13-1	4710152500.....	17-16
4410111300.....	3-6	4710111100.....	3-3	4710143200.....	13-2	471016100.....	19-1
4410111400.....	3-16	4710111200.....	3-5	4710143300.....	13-3	4710160200.....	19-2
4410121000.....	5-6	4710111300.....	3-7	4710143400.....	13-4	4710160300.....	19-3
4410140100.....	9-1	4710111400.....	3-17	4710143500.....	13-5	4710160404.....	19-4
4410140200.....	9-5	4710111600.....	3-8	4710143600.....	13-6	4710160600.....	19-5
4410140900.....	9-3	4710113400.....	41-8	4710143700.....	13-7	4710160700.....	19-6
4410141900.....	7-6	4710120300.....	5-3	4710143800.....	13-8	4710160800.....	19-8
4410142000.....	7-9	4710120400.....	5-4	4710143900.....	11-25	4710160900.....	21-1
4410142100.....	7-1	4710121000.....	5-7	4710144100.....	13-12	4710161000.....	21-2
4410142300.....	7-4	4710121100.....	5-8	4710144200.....	13-16	4710161100.....	21-3
4410142400.....	7-5	4710121300.....	5-9	4710144401.....	15-1	4710161200.....	21-4
4410142900.....	9-26	4710122000.....	5-10	4710144500.....	15-2	4710161300.....	21-5
4410143100.....	7-7	4710122100.....	5-11	4710144600.....	15-3	4710161400.....	19-10
4410143300.....	9-24	4710122304.....	5-12	4710144700.....	15-4	4710161600.....	21-6
4410143600.....	9-23	4710122500.....	5-13	4710144800.....	15-5	4710161700.....	19-11
4410143700.....	9-6	4710140100.....	11-1	4710144900.....	15-6	4710161800.....	21-7
4410143800.....	17-12	4710140400.....	11-2	4710145000.....	15-7	4710161900.....	21-8
4410143805.....	17-11	4710140500.....	11-27	4710145100.....	15-8	4710162000.....	21-9
4410145600.....	7-2	4710140500.....	11-3	4710150100.....	17-1	4710162100.....	19-12
4410150100.....	9-22	4710140700.....	11-4	4710150200.....	17-2	4710162200.....	21-10
4410150400.....	17-4	4710140900.....	11-5	4710150300.....	17-3	4710162300.....	21-11
4410150500.....	17-6	4710141200.....	11-7	4710150400.....	17-5	4710180100.....	23-4
4410151000.....	9-25	4710141300.....	11-8	4710150500.....	17-7	4710180300.....	23-5
4410151100.....	9-30	4710142000.....	11-14	4710150600.....	17-8	4710180500.....	23-6
4410152500.....	17-13	4710142101.....	11-15	4710150700.....	17-9	4710181300.....	23-16
4410160800.....	19-7	4710142201.....	11-16	4710150800.....	17-10	4710181400.....	23-8
4410161400.....	19-9	4710142301.....	11-17	4710151000.....	17-15	4710181800.....	25-1
4410181600.....	23-7	4710142401.....	11-18	4710151005.....	17-14	4710181900.....	25-2
4410270100.....	9-2	4710142500.....	11-19	4710151500.....	17-17	4710182000.....	25-3
4410270200.....	9-9	4710142600.....	11-20	4710151600.....	17-18	4710182100.....	25-11
4410270400.....	9-11	4710142700.....	11-21	4710151700.....	17-19	4710182200.....	25-4
4410272200.....	9-8	4710142800.....	11-22	4710151800.....	17-20	4710182300.....	25-5
4410272300.....	9-7	4710142900.....	11-23	4710151900.....	17-21	4710182400.....	25-6

N、零件号码与页数对照表 NUMERICAL PARTS-LIST (24)

零件号码 Part No.	页数 PAGE						
4710182500	23-1	4710311000	27-10	4710340400	33-4	LG1274-0A	11-34
4710182600	23-2	4710311100	27-11	4710340500	33-5	LG1275-0A	25-17
4710182700	23-3	4710311200	27-12	4710340600	33-6	LG4014-0	19-28
4710182800	25-7	4710311400	27-14	4710340700	33-7	LG4043-0A	11-28
4710182900	25-8	4710311605	27-15	4710340800	33-8	LG4043-0A	7-10
4710183000	25-9	4710312000	27-16	4710340800	41-7	LG4044-0A	19-27
4710183100	25-10	4710313000	31-2	4710341200	33-13	LG4044-0A	23-30
4710183200	23-9	4710313005	31-1	4710341400	41-6	LG7200-0A	41-26
4710183300	23-12	4710313100	31-3	4710820100	39-1	LG7201-0A	41-27
4710183600	23-10	4710320100	29-1	4710911000	41-12	RE000040	5-31
4710183700	23-11	4710320300	29-25	4710911005	41-10	RE000080	11-40
4710183800	23-12	4710320400	29-27	4710911100	41-11	RE000080	13-18
4710183900	23-13	4710320500	29-29	4710911200	41-13	RE000080	13-19
4710184000	23-14	4710320800	29-4	4710911300	41-14	RE000080	13-22
4710184200	23-20	4710320805	29-3	4710911400	41-17	RE000080	15-17
4710184210	23-17	4710320900	29-5	4710113300	27-25	RE000080	19-19
4710184220	23-18	4710321000	29-6	4710120101	5-1	RE000080	19-22
4710184230	23-19	4710321100	29-7	4710120201	5-2	RE000080	7-19
4710184240	23-21	4710321200	29-8	4710122601	5-14	RE000080	7-20
4710184250	23-22	4710321300	29-12	4710142201	7-3	RE000080	9-29
4710184260	23-23	4710321400	29-13	A1025-0A	27-2	S1013-0A	3-10
4710190100	5-25	4710321500	29-16	A1025-0A	31-5	WA059005	35-8
4710190200	5-26	4710321600	29-17	A7000-0A	41-20	WA10009	17-31
4710190220	5-27	4710321800	29-18	A7001-0A	41-1	WA110003	41-5
4710190230	5-28	4710321900	29-19	A7010-0A	41-22	WC049001	3-14
4710190300	5-29	4710322000	29-14	A7012-2A	41-21	WH208005	15-10
4710191301	5-5	4710322200	31-8	A7012-1A	41-2	XA200100	9-21
4710310100	27-1	4710322300	31-9	A7050-0A	37-1	XA200160	5-15
4710310400	31-4	4710335100	35-1	E1288-0A	13-17	XA300085	25-16
4710310400	27-4	4710335200	35-3	EH7141-4A	41-25	XB123001	27-13
4710310500	27-5	4710335300	35-4	EH7141-5A	41-23	YB040016	23-27
4710310600	27-6	4710335400	35-2	EH7141-6A	41-24	YB040045	5-18
4710310700	27-7	4710340100	33-1	IN794#230	11-6	YD025014	11-37
4710310800	27-8	4710340200	33-2	IN794#230	41-28	YD030020	17-32
4710310900	27-9	4710340300	33-3	IN794#230	9-4	YD050018	3-9

N、零件号码与页数对照表 NUMERICAL PARTS-LIST (3/4)

零件号码 Part No.	页数 PAGE						
ZMD16002.....	4-3	ZSA16010.....	11-29	ZSB12002.....	17-25	ZSG15046.....	33-12
ZMH06005.....	9-12	ZSA16010.....	7-11	ZSB12015.....	21-15	ZSG16024.....	19-16
ZMH06005.....	9-14	ZSA16025.....	15-12	ZSB12036.....	21-16	ZSG16025.....	33-16
ZMH06005.....	9-17	ZSA16025.....	5-24	ZSB12036.....	25-20	ZSG20012.....	5-30
ZMJ06010.....	9-13	ZSA16029.....	19-23	ZSB12045.....	3-11	ZSG22002.....	15-9
ZMJ06002.....	11-33	ZSA16029.....	23-31	ZSB15001.....	33-15	ZSH16001.....	11-32
ZMJ06002.....	15-13	ZSA16029.....	11-10	ZSB15001.....	33-9	ZSH16001.....	17-26
ZMJ06002.....	9-18	ZSB06008.....	29-9	ZSB15001.....	35-6	ZSH16001.....	5-17
ZMJ06004.....	19-21	ZSB08001.....	31-11	ZSB15004.....	31-13	ZSH16002.....	11-31
ZML08003.....	23-28	ZSB08008.....	29-28	ZSB15004.....	9-20	ZSH16005.....	17-23
ZML08003.....	25-13	ZSB09014.....	27-21	ZSB15005.....	13-21	ZSH16005.....	7-14
ZML16004.....	41-4	ZSB09047.....	27-22	ZSB15005.....	13-23	ZSH16005.....	9-16
ZMT05001.....	37-2	ZSB09047.....	27-24	ZSB15005.....	41-18	ZSI15001.....	25-21
ZMT05003.....	35-7	ZSB09047.....	3-13	ZSB15014.....	3-12	ZSI16001.....	17-29
ZSA08007.....	29-10	ZSB09047.....	31-12	ZSB15015.....	7-15	ZSK11037.....	33-14
ZSA09005.....	41-19	ZSB09047.....	41-16	ZSB15019.....	21-17	ZSK18018.....	21-12
ZSA11003.....	29-24	ZSB09061.....	17-27	ZSB15032.....	11-11	ZSK18019.....	13-10
ZSA15010.....	23-25	ZSB11008.....	35-5	ZSC09005.....	27-23	ZSK18019.....	13-11
ZSA15010.....	23-26	ZSB11011.....	27-20	ZSC11002.....	25-14	ZSK18019.....	13-20
ZSA15010.....	25-12	ZSB11011.....	29-2	ZSC11007.....	5-22	ZSK18019.....	15-11
ZSA15010.....	5-16	ZSB11011.....	17-	ZSC18001.....	5-20	ZSK18019.....	7-8
ZSA15013.....	11-9	ZSB11013.....	31-10	ZSD11010.....	25-18	ZSK18019.....	9-28
ZSA15013.....	17-24	ZSB11018.....	3-15	ZSD20003.....	5-23	ZSK18020.....	21-13
ZSA15028.....	11-30	ZSB011022.....	11-12	ZSD20009.....	7-17	ZSK20006.....	13-9
ZSA15028.....	11-35	ZSB11022.....	9-15	ZSD20011.....	15-14	ZSK20007.....	19-13
ZSA15028.....	11-36	ZSB11026.....	13-24	ZSD20011.....	7-16	ZSK20009.....	11-26
ZSA15028.....	15-16	ZSB11035.....	19-24	ZSF18001.....	13-14	ZSK20009.....	19-14
ZSA15028.....	19-25	ZSB11041.....	19-18	ZSG06004.....	23-15	ZSK20009.....	19-15
ZSA15028.....	25-15	ZSB11041.....	9-27	ZSG11057.....	29-21	ZSK20009.....	7-18
ZSA15028.....	29-30	ZSB11042.....	9-31	ZSG11058.....	13-13	ZSL06001.....	41-15
ZSA15028.....	5-21	ZSB11057.....	11-38	ZSG11059.....	29-15	ZSL08001.....	29-11
ZSA15028.....	7-12	ZSB11071.....	29-26	ZSG12046.....	27-18	ZSL09001.....	17-28
ZSA15028.....	7-13	ZSB11076.....	11-13	ZSG12047.....	23-24	ZSL11002.....	25-19
ZSA15037.....	19-20	ZSB11076.....	9-19	ZSG15045.....	33-10	ZSL11004.....	11-39
ZSA15037.....	19-26	ZSB11083.....	29-20	ZSG15045.....	33-11	ZSL11007.....	29-22

N、零件号码与页数对照表 NUMERICAL PARTS-LIST (4/4)

零件号码 Part No.	页数 PAGE	零件号码 Part No.	页数 PAGE	零件号码 Part No.	页数 PAGE
ZSL11007	29-23				
ZSL12003	41-9				
ZSL15002	27-19				
ZSL15004	41-32				
ZSL16004	19-17				
ZSL18001	21-14				
ZSL18001	5-19				
ZSL18001	5-32				
ZSL18003	13-15				
ZSL18003	23-29				
ZSL18003	27-17				
ZSL18003	31-7				
ZSL22001	15-15				
ZSN16004	27-3				
ZSN16004	31-6				