

GLOBAL

**LP 1971-7 (AUT)
series**

**Single needle postbed shoe machines with
oblique edge trimmer**

**Instruction manual &
Instructions for service manual**

Contents - part A - Instruction manual:

| | |
|---|----|
| 1. Proper use of the machine | 1 |
| 2. Description of the machine | 1 |
| 3. Machine sub-classes and sewing categories | 2 |
| 3.1 Sub-class | 2 |
| 3.2 Sewing categories | 2 |
| 4. Survey of equipment | 2 |
| 4.1 Equipment | 2 |
| 4.1.1 Needles | 2 |
| 4.1.2 Wheel feeders | 2 |
| 4.1.3 Top roller holders | 2 |
| 4.1.4 Top rollers | 3 |
| 4.1.5 Throat plate | 3 |
| 4.1.6 Throat plate inserts | 3 |
| 4.1.7 Trimer knives | 3 |
| 4.1.8 Gauge for knife setting | 3 |
| 4.1.9 Connecting cables of the head to the drive | 3 |
| 4.2 Optional equipment | 3 |
| 5. Technical data | 3 |
| 6. Operation of the machine | 5 |
| 6.1 Threading a thread | 5 |
| 6.2 Bobbin thread winding | 5 |
| 6.3 Inserting the bobbin and threading the lower thread | 5 |
| 6.4 Regulating the thread tension | 6 |
| 6.5 Needle replacement | 7 |
| 6.6 Regulation of pressing the top roller | 7 |
| 6.7 Lifting the top roller up | 7 |
| 6.8 Reverse stitching | 8 |
| 6.9 Stitch length adjustment | 8 |
| 6.10 Safety clutch | 8 |
| 6.11 Starting of the material trimming operation | 8 |
| 6.12 Control of the material guide regardless the engaged trimming | 9 |
| 6.13 Control of the material guide with regard to the engaged trimming device | 9 |
| 6.14 Setting of the material guide | 9 |
| 6.15 Replacement of the trimming knife | 10 |
| 6.16 Setting of the trimming device for trimming very small radii | 10 |
| 6.17 Setting of the trimming device for trimming thin, soft materials | 10 |
| 6.18 Change of the sewing category | 10 |
| 6.19 Sharpening of the knives | 10 |
| 7. Electronic control of the machine | 11 |
| 7.1 Control of sewing by means of control elements | 11 |
| 7.1.1 Via treadle | 11 |
| 7.1.2 Via control pushbutton panel | 11 |
| 7.1.3 Via control panel V810/V 820 | 11 |
| 7.2 Adjustment of automatic functions via control panel for stop motor | 12 |
| 7.2.1 By using stop motor Efka with panel V 810 | 12 |
| 7.2.1.1 Adjustment by means of buttons with fixed setting function | 12 |
| 7.2.1.2 Setting by means of parameters | 13 |
| 7.2.2 By using stop motor Efka with panel V 820 | 14 |
| 7.2.2.1 Adjustment by means of buttons with fixed setting function | 15 |
| 7.2.2.2 Setting by means of parameters | 15 |
| 8. Maintenance | 16 |
| Operating instructions for eventual trouble shooting | 17 |

Foreword

This instruction manual is intended to help the user to become familiar with the machine and take advantage of its application possibilities in accordance with the recommendations.

The instruction manual contains important information on how to operate the machine securely, properly and economically. Observation of the instructions eliminates danger, reduces costs for repair and down-times, and increases the reliability and life of the machine.

The instruction manual is intended to complement existing national accident prevention and environment protection regulations.

The instruction manual must always be available at the machine/sewing unit.

The instruction manual must be read and applied by any person that is authorized to work on the machine/sewing unit. This means:

- Operation, including equipping, troubleshooting during the work cycle, removing of fabric waste
- Service (maintenance, inspection, repair and/or)
- Transport.

The user also has to assure that only authorized personnel work on the machine.

The user is obliged to check the machine at least once per shift for apparent damages and to immediately report any changes (including the performance in service), which impair the safety.

The user company must ensure that the machine is only operated in perfect working order.

Never remove or disable any safety devices.

If safety devices need to be removed for equipping, repairing or maintaining, the safety devices must be remounted directly after completion of the maintenance and repair work.

Unauthorized modification of the machine rules out liability of the manufacturer for damage resulting from this.


Observe all safety and danger recommendations on the machine/unit! The yellow-and-black striped surfaces designate permanent danger areas, eg danger of squashing, cutting, shearing or collision.

Besides the recommendations in this instruction manual also observe the general safety and accident prevention regulations!

General safety instructions

The non-observance of the following safety instructions can cause bodily injuries or damages to the machine.

1. The machine must only be commissioned of the instruction book and operated by persons with appropriate training.
2. Before putting into service also read the safety rules and instructions of the motor supplier.
3. The machine must be used only for the purpose intended. Use of the machine without the safety devices is not permitted. Observe all the relevant safety regulations.
4. When gauge parts are exchanged (e.g. needle, presser foot, needle plate, feed dog and bobbin) when tread-ing, when the workplace is left, and during service work, the machine must be disconnected from the mains by switching off the master switch or disconnecting the mains plug.
5. Daily servicing work must be carried out only by appropriately trained persons.
6. Repairs, conversion and special maintenance work must only be carried out by technicians or persons with appropriate training.
7. For service or repair work on pneumatic systems the machine must be disconnected from the compressed air supply system. Exceptions to this are only adjustments and functions checks made by appropriately trained technicians.
8. Work on the electrical equipment must be carried out only by electricians or appropriately trained persons.
9. Work on parts and systems under electric current is not permitted, except as specified in regulations DIN VDE 0105.
10. Conversion or changes to the machine must be authorized by us and made only in adherence to all safety regulations.
11. For repairs, only replacement parts approved by us must be used.
12. Commissioning of the sewing head is prohibited until such time as the entire sewing unit is found to comply with EC directives.



IMPORTANT WARNING!

To the feeding network cord, it is necessary to connect the respective network plug which has been approved in the country of utilizing the machine. This operation should be performed by a worker acquainted with the electric safety rules being in force in the given country. The supplier is not responsible for any damages caused by defective plug or owing to incorrect assembly of the plug.

In spite of all safety measures made on the machines, inappropriate actions of the operator may lead to dangerous situations. In industrial sewing machines, attention should be paid to the following still remaining possible sources of injury:

1. Moving sewing needle
 - risk of injury when sewing with raised pressure foot or top roller, because the finger guard is then positioned too high.
2. Moving thread take-up lever
 - risk of injury when inadvertently or intentionally inserting the finger(s) between the thread take-up lever and its guard.
3. Moving pressure member
 - risk of injury when holding sewn work in immediate vicinity of the pressure member and beginning to insert under the pressure member a considerably thicker sewn work portion,
 - risk of injury when sinking the pressure member.
4. When switched off, the clutch motor slows down by inertia but would be reactivated by an accidental tread-ing down of the motor treadle. To avoid such risk, it is advised to hold the handwheel by hand and slightly to depress the motor treadle.
5. Moving work cutter knife and work guide at the work cutter start
 - injury danger at incidental finger insertion under the cutter knife.
6. Moving connecting rod of the work cutter at the work cutter start
 - injury danger at incidental finger insertion between the connecting rod and the body of the work cutter.
7. Moving work cutter motor at the work cutter start
 - injury danger at incidental finger insertion between the motor and the work cutter guard.

Part A - Instruction manual

1. Proper use of the machine

The machine is used in the shoemaking industry for sewing shoe uppers, for sewing on linings with simultaneous lining edge trimming under the angle of 20° in the manufacture of shoe uppers. In addition to this, the machine serves for assembling individual shoe parts, as well as for decorative stitching without edge trimming. The machine is suitable for other similar operations in the fancy goods industry. The machine is able to sew upper leathers, natural or synthetic leather, eventually in combination with textile materials. Trimming is always to be done with a sharp knife. The knife is driven by a self-contained motor and its rear edge is situated 6 mm behind the needle axis. It ensures a good quality trimming of the lining material both in inner and outer curves. When trimming soft materials, the operator should maintain them, in pulling the trimmed lining behind the needle, in a stretched condition to make the trimming operation easier.

The machine sews using a double-thread lock stitch. A combined feeding ensures a uniform feeding of all layers to be sewn together. The machine has got a standard outfit with the 134 KKL needles suitable for sewing leather. For sewing textile materials, the needle system 134 is being used. In general, only dry material may be sewn, which is not thicker than 6 mm after having been compressed by the roller presser foot. The material should not contain any hard objects, for the machine is not provided with any eye protector.

For sewing, textile threads up to the dimension 500 dtex x 1 x 3 (label No 20) are to be used, namely synthetic, cotton or core spun threads. When needing other special threads, one must take into account the respective risks and proceed to the necessary safety measures. When sewing very hard or consistent materials or when sewing with edge trimming, the sewing speed must be considerably reduced below the values given in the technical parameters of the machine.

These special machines may be installed and operated only in dry rooms kept in orderly conditions. When operating them in rooms which do not meet such conditions, there must be done some additional measures according to the EN 60204-31 standard. In our position of the manufacturers of industrial sewing machines, we start from the assumption that our products are operated by an at least initiated operator, so that all usual operating activities and their eventual risks can be supposed to be known.

Machine noisiness

Machine noisiness has been measured in accordance with the standards ISO 3746, ISO 11204 at maximum speed.

L_{aeq} = equivalent machine noise of the self-standing machine on the working place, converted to % machine employment (dB) - stated in the table

| Type of the machine | Noisiness dB | % machine employment |
|---------------------|--------------|----------------------|
| 4182i-XXX-100 | 82 | 20 |
| 4182i-XXX-200 | 79 | 20 |
| 4182i-XXX-300 | 73 | 20 |

2. Description of the machine

This is a one-needle post-bed sewing machine with a standard vertical hook situated to the right from the needle. The feeding is of a two-step type with a driven top roller presser foot and with a circular bottom feed combined with a needle feed during the first step of the workpiece feeding. The main mechanisms are mounted on antifriction bearings, swing shafts and pins are slidingly mounted. Feeding is derived from the mechanism of changing stitch length through a friction clutch on the bottom feeding shaft. From here the circular feeder is driven by means of a roller chain. The drive of the roller presser foot is derived from the bottom feeding shaft through an indented belt on the top feeding shaft through a bevel gearing on an articulated vertical shaft. The needle feeding is derived from the same mechanism as the circular feeding. The stitch length is set using a knob on the web of the machine arm.

The machine is provided with a thread trimming device, with an electromagnetic roller presser foot lifting, with an electromagnetic backward stitching. This backward stitching is controlled by a hand lever or by a microswitch in the event of having provided the machine with an electromagnetic backward stitching. The machine has got a sewing set mounted with changeable needle plate inserts according to the needle number and according to the distance of trimming from the needle. It is possible to choose the roller presser foot of 25, 35 or 45 mm. The standard vertical hook has got its own forced bobbin case opening. The hook is protected by a protective coupling against overload with an adjustable switch-off moment. There is a central pressureless wick lubricating system. The hook is excluded from this system, it is lubricated separately with its own lubricating regulation. Each machine has got a built-in hook thread friction winder mounted. The machine can be provided with a halogen lamp lighting, eventually with further possible outfit. When the machine has no electromagnetic roller presser foot lifting, this lifting is controlled by the knee lever or, in case of deliveries for the Czech Republic, by the left pedal.

The frame is fitted with a wedge. In accordance with the roller presser foot lifting outfit, the frame is fitted with one or two pedals. For the edge trimming operation, the machine is provided with an oblique top trimming device. The knife is driven by a leverage from a separate motor, which is situated on the machine arm. The knife is started by a lever and is automatically shifted into its working position. With machines provided with the EFKA stop motor, the motor of the trimming device is being switched on only at the beginning of the sewing operation and it is switched off with an adjustable delay after having ended the sewing operation. By returning the lever back, the lever movement is stopped and the knife moves upwards, outside from the sewn workpiece. Together with the machine there is supplied a tiltable material guide. Putting this guide in its working position is mechanically selectable either separately from the trimming operation or together with the trimming.

3. Machine sub-classes and sewing categories

3.1 Sub-class

Table 1

| Type of the machine | Top roller lift | | | | Reverse stitching | | Thread trimmer |
|---------------------|-----------------|---------|-------------------------------|----------------------------|-------------------|-------------------------------|----------------|
| | Via knee lever | Treadle | Via electro-mag. + knee lever | Via electro-mag. + treadle | Via hand lever | Via electro-mag. + hand lever | |
| 4182i-111-XXX | ● | | | | ● | | |
| 4182i-121-XXX* | | ● | | | ● | | |
| 4182i-147-XXX | | | ● | | | ● | ● |
| 4182i-157-XXX* | | | | ● | | ● | ● |

*for only Czech republic

3.2 Sewing categories

This code indication includes the equipment assembled on the machine head, both necessary equipment and optional equipment. The standard configuration of the equipment has been preset, according to the under mentioned table, in the factory which includes only necessary equipment. If the buyer demands a different configuration then the factory allocates a new code indication.

Table 2

Standard configuration - the numbers in brackets stand for ordering Nos. when ordering separately the Equipment in question.

| Type | Needle size | Top roller | Wheel feeder | Throat plate insert | Throat plate |
|----------------------------------|---------------|------------|----------------|---------------------|--------------|
| Class-sub-class -sewing category | 0.01mm | Diameter | Pitch of teeth | Width of hole | - |
| 4180i-1XX-100 | 80 | 35 | 0.4 | 1.2 | (M 091) |
| | (S548 134013) | (M 173) | (M 060) | (M 191) | |
| 4180i-1XX-200 | 100 | 35 | 0.4 | 1.5 | |
| | (S548 134001) | (M 173) | (M 060) | (M 192) | |
| 4180i-1XX-300 | 130 | 35 | 0.6 | 2.0 | |
| | (S548 000311) | (M 173) | (M 059) | (M 193) | |

4. Survey of equipment

This survey does not include the equipment assembled on the stand.

4.1 Equipment (at least one of each from the following group of equipment is assembled)

4.1.1 Needles

- M 020 - needle 134 LR size 80
- M 023 - needle 134 LR size 100
- M 021 - needle 134 LR size 130

4.1.2 Wheel feeders

- M 060 - wheel feeder with pitch of teeth 0.4 mm
- M 059 - wheel feeder with pitch of teeth 0.6 mm
- M 058 - wheel feeder with pitch of teeth 1.2 mm

4.1.3 Top roller holders

- M 156 - holder for the top roller \varnothing 25 mm
- M 157 - holder for the top roller \varnothing 35 mm
- M 295 - holder for the top roller \varnothing 45 mm

4.1.4 Top rollers

M 172 - top roller ø 25 mm
M 173 - top roller ø 35 mm
M 174 - rubberized top roller ø 25 mm
M 175 - rubberized top roller ø 35 mm
M 310 - smooth top roller ø 25 mm
M 311 - smooth top roller ø 35 mm
M 296 - top roller ø 45 mm - width 2.0 mm
M 297 - top roller ø 45 mm - width 3.8 mm

4.1.5 Sewing set

M 143 - sewing set

4.1.6 Throat plate inserts

M 191 - insert for throat plate (for needle 60-80; trimmed edge 0.8 mm)
M 192 - insert for throat plate (for needle 80-110; trimmed edge 1.2 mm)
M 193 - insert for throat plate (for needle 110-140; trimmed edge 1.5 mm)
M 320 - insert for throat plate (for needle 110-140; trimmed edge 2.4 mm)
M 321 - insert for throat plate (for needle 110-140; trimmed edge 3.0 mm)
M 323 - insert for throat plate (for needle 110-140; trimmed edge 2.0 mm)

4.1.7 Trimmer knives

S425 870237 - trimmer knife „A“ (hard metal)
S080 870235 - trimmer knife „A“ (steel)
S080 870238 - trimmer knife „B“ (steel)
S080 870239 - trimmer knife „C“ (steel)

4.1.8 Gauge for knife setting

M 268 - gauge

4.1.9 Connecting cables of the head to the drive

M 318 - connecting cable to the drive EFKA DC 1600/DA82GA; EFKA VD 552/6F82FA and EFKA VD 554/6F82FA
M 055 - connecting cable without any specified drive (with free cable end)

Note: For the machine provided with a minimotor, the cable is component part of the drive thereof.

4.2 Optional equipment


M 010 - built-in lighting (including transformer 230/12V)
M 269 - jig for knife sharpening
M 242 - setting gauge
4182 111001V - high mortality spare parts kit in plastic box for sub-class without thread trimmer
4182 147001V - high mortality spare parts kit in plastic box for sub-class with thread trimmer
S794 222012 - halogen lighting (12 V, 20 W - contains transformer)

5. Technical data

Table 3a

| Sewing category | Distance between the needle axis and the work trimmer line | Stitch length | Labelled number of polyester thread | | Number of needle | | Sewing speed (without trimming) | | Hook | Throat plate insert | Thickness of the top material | Play between the guide and the knife |
|-----------------------------|--|---------------|-------------------------------------|-------|------------------|---------|---------------------------------|---------|-------|---------------------|-------------------------------|--------------------------------------|
| | | | Standard | Range | Standard | Range | Standard | Maximum | | | | |
| | mm | mm | - | - | 0,01mm | 0,01mm | SPM | SPM | - | - | mm | mm |
| - 100 - light | 0,8 | 3 | 70 | 80-60 | 80 | 60-80 | 2500 | 3500 | R 816 | M191 | 0,8-1,2 | 0,2 |
| -200 - medium | 1,2 | 5 | 40 | 50-30 | 100 | 80-110 | 2500 | 3000 | R 816 | M192 | 1,2-1,6 | 0,3 |
| - 300 - medium -heavy | 1,5 | 5 | 20 | 30-20 | 130 | 110-140 | 1600 | 2000 | R 816 | M193 | 1,6-2,4 | 0,4 |

Table 3b

| |  steel |  hard meal |  steel |  steel |
|--|---|---|---|---|
| | S080 870235 | S425 870237 | S080 870238 | S080 870239 |
| Thickness of the material trimmed  | 1 - 4 | 1,5 - 4 | 1 - 2 | 0,2 - 0,8 |
| Minimum radius for the material being trimmed  | ~6 | ~6 | ~4 | ~6 |
| Knife stroke  | 2,4 | 2,4 | 1,2 | 2,4 |




Recommended speed at simultaneous work trimming

To observe: To obtain uniform stitch length, the sewing speed must be reduced. The recommended values apply to current leathers used in the shoe industry. For extremely soft or extremely hard leathers, tests should be carried out and the sewing speed should be adjusted accordingly.

| Stitch length | Sewing speed |
|---------------|--------------|
| mm | SPM |
| 1,5 | 2500 |
| 2,5 | 2000 |
| 4 | 1200 |
| 5 | 800 |

The recommended speed has been chosen so as to correspond to the assortment of the available pulleys.

| | |
|--|---|
| Stitch type | Double thread lock-stitch 301 |
| Hook | R 816 - standard, vertical |
| Needle | System 134; 134LR; 134 KCLR |
| Threads | max. 500 dtex x 1 x 3 |
| Stitch length | max. 5 mm ± 10% |
| Sewing speed | max. 3500 SPM (the maximum sewing speed with the simultaneous trimming is limited by the stitch length and by the hardness of the material being trimmed) |
| Top roller stroke | 5,5 ± 0,5 mm - via hand lever 12,5 ± 1 mm via electromagnet |
| Length of trimmed thread ends | 8...11 mm |
| Height of post bed | 173 mm |
| Opening space of machine head | 270 x 298 mm |
| Weight of the head | max. 55 kg (61 kg head with minimotor) |
| Weight of the stand | max. 60 kg (38 kg for head with minimotor) |
| Driving unit | Clutch motor (min. 0.35 kW) Stopmotor (min. 0.4 kW) |
| Dimension of bed plate | 178 x 518 mm |
| Input machine | max. 600 W |
| Trimmed material | max. thickness - 2,5 mm |
| Distance between the needle axis and the work trimmer line | 0,8 - 1,5 mm (according to sewing category) |
| Power output of the work trimmer motor | 25 W |
| Stroke frequency of the work trimmer knife | 3500 strokes/min (constant) |
| Stroke range of the work trimmer knife | adjustable to 2,4 mm |
| Layout dimensions of the machine (including the stand) | 1060 x 550 mm |
| Height of the machine (including the stand) | 1680 mm |

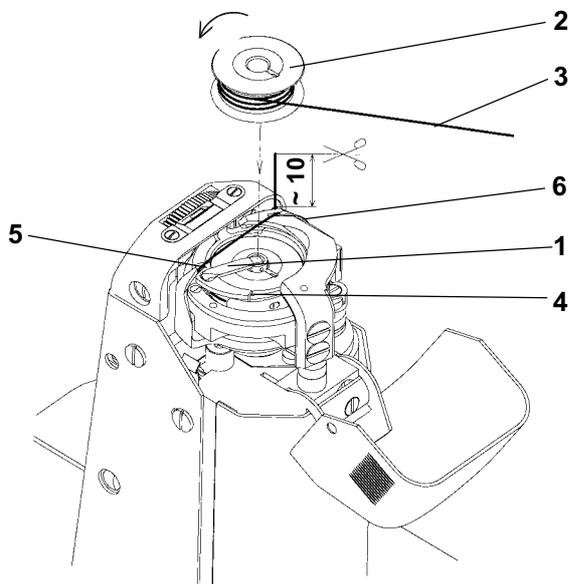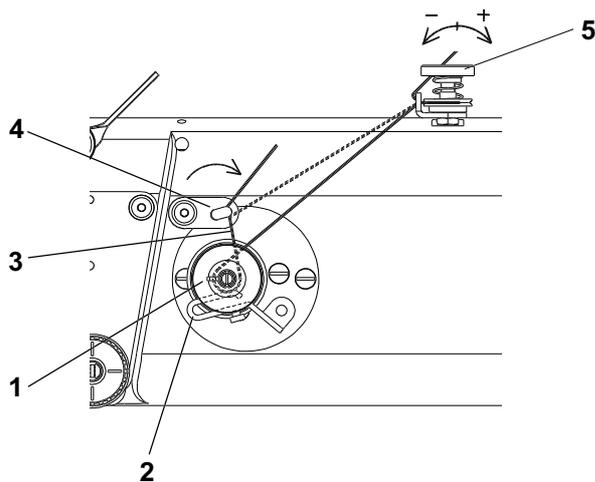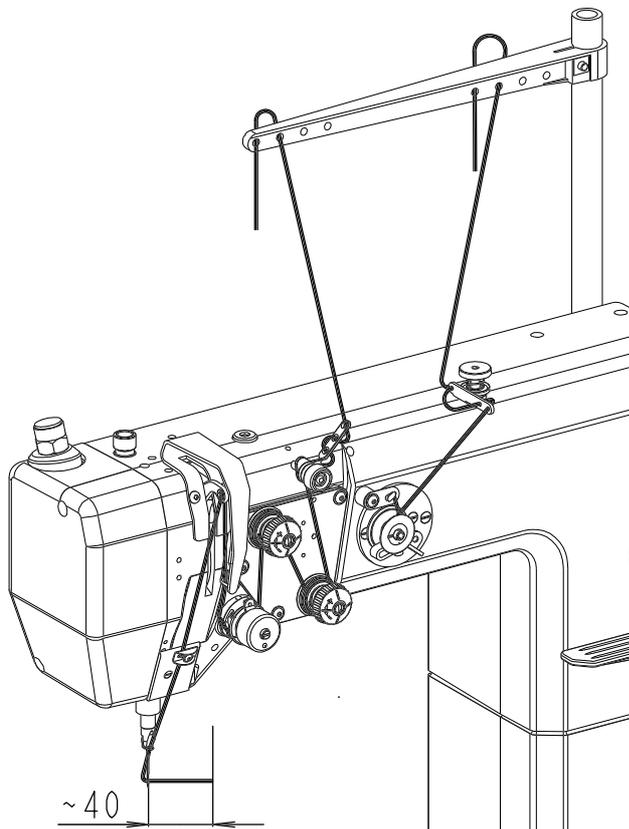

6. Operation of the machine

6.1 Threading a thread



Caution! Risk of injury!

Before threading a thread, turn the main switch off and wait until the machine stops!

Thread the threads as it is shown in picture.



Caution!

Not following the correct method of threading a thread may cause serious damage to the function of the machine.

6.2 Bobbin thread winding

- Insert the bobbin (1).
- Spool counter-clockwise manually onto the bobbin, minimum six threads of the lower thread (3).
- Insert the thread ends into the equipment (4) and cut off the ends.
- Press the lever (2) until it reaches its limit.
- Switch on the machine.
- The winder will automatically switch off after winding.
- Take off the hook bobbin and cut off the end in the equipment (4).
- The nut (5) is instrumental to thread tension control for winding. Turning clockwise sense the thread tension is increased and the single threads are more firmly fixed on the bobbin.
- The tension cannot be so extensive as far as slipping of the winder friction drive has occurred.

6.3 Inserting the bobbin and threading the lower thread




Caution! Risk of injury!



Turn the main switch off and wait until the motor stops!

- Tilt the shutter (1) up.
- Insert the bobbin (2) with thread end (3) in the direction as shown in the picture.
- Thread the thread through the notch (4) and the space (5) and place under the spring (6).
- Cut off the thread end as shown.

Fitting seam

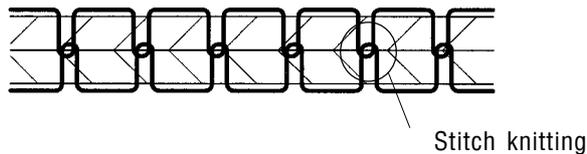

Decorative seam

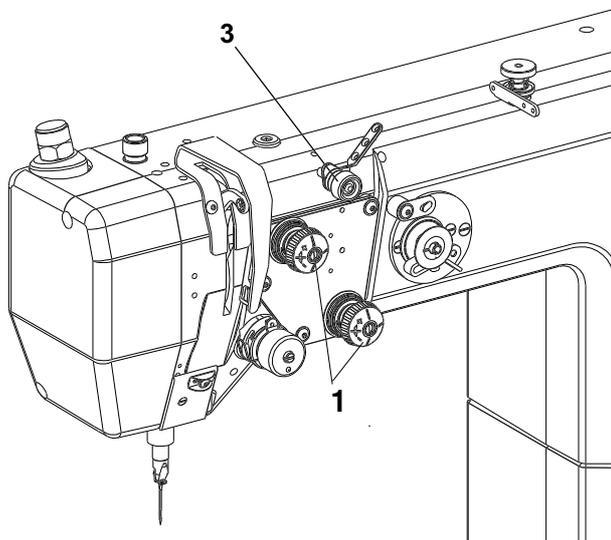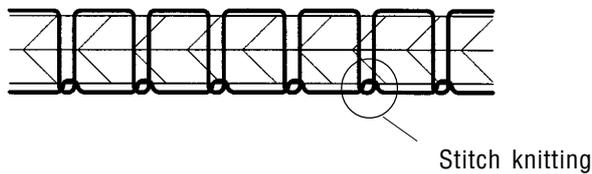

6.4 Regulating the thread tension

The thread tension must conform to the thickness of the sewn threads, thickness and hardness of sewn material (thin and soft material will fold with high tension) and the kind of seam. An ordinary fitting seam should be formed with stitches knitted in the middle of the sewn material.

A decorative seam is mostly used with rough threads (20) on thin material and it has tied up threads on the reverse side of the material for achieving a decorative appearance.

Thread tension adjustment is by standard sewing (par. 5, table 3) conditions in accordance with table No. 4.

If achieving of a decorative seam with stitch knitting on the underside is wished, it is necessary to decrease the upper thread tension, it is carried out by turning of nuts (1), in the counter-clockwise sense.

Thread tension

Table 4

| Sewing category | Kind of seam | Identified value upper thread tension | Maximum tension of lower thread |
|-----------------|--------------|---------------------------------------|---------------------------------|
| | | N | N |
| 1 | - | 3 | 1 |
| 2 | - | 4.5 | 1.5 |
| 3 | Fitting | 8 | 2 |
| | Decorative | 5 | |



If the maximum lower thread tension exceeds the values given in table No. 4, it may cause problems in the beginning of sewing after the previous thread trim.

Measurement of tension is done by dynamometer.

Warning:

The upper thread tensioner has been loosened automatically after every trimming and top roller lifting. In these cases the thread tension cannot be measured.

Regulating the thread tension



Caution! Risk of injury!


Before regulating the lower thread tension, turn the main switch off and wait until the motor stops.


The upper thread tension is adjusted with nuts (1). Its clockwise turning increases the tension.

The tension of the auxiliary tensioner (3) should be as low as possible but it should be on a level so that the upper thread would not pull out of the tensioner when the work is being removed.

The lower thread tension is adjusted with a screw (2). Its clockwise turning increases the tension.

Tension correlation rate defines the depth of the seam tied through. The result of raising the upper tension will be the decreasing depth of tie through. The opposite will apply with the lower thread.

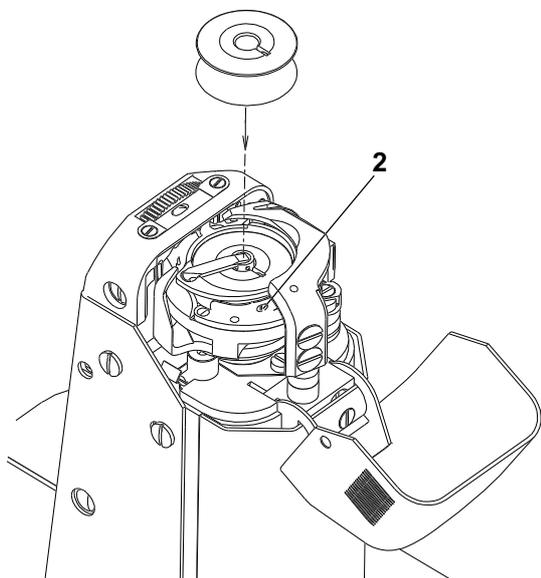

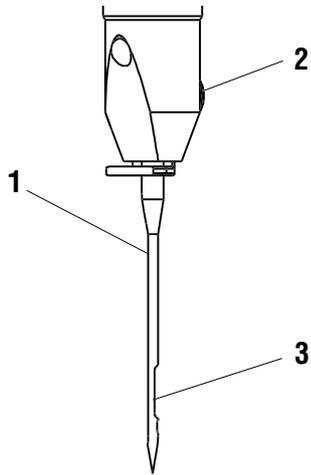

6.5 Needle replacement




Caution! Risk of injury!

Before removing and inserting the needle turn the main switch off and wait until the motor stops!

- Turn with the hand wheel as far as the top needle (1) position has been reached.
- Loosen the screw (2) and take the needle out.
- When inserting a new needle, care is to be taken that groove (3) above the needle's eye was in the same direction as the hook.
- Tighten the screw (2).




The inserted needle must respond to the sewing category according to paragraph No. 5, table 3. Otherwise it will cause damage to sewing, or eventually the machine could be broken.

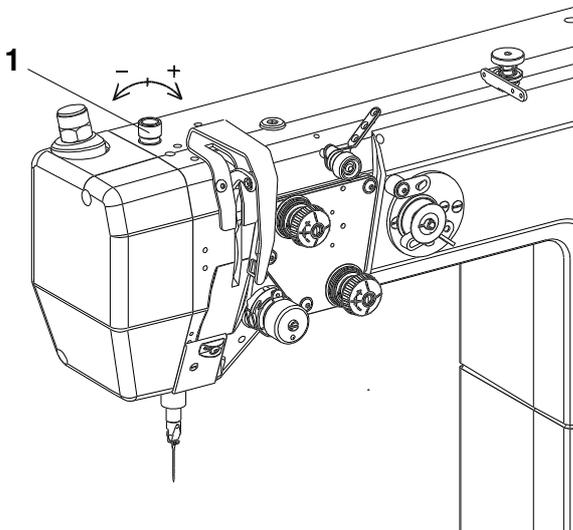

6.6 Regulation of pressing the top roller

The pressing of the top roller should be as low as possible but on a level so that the top roller would not fly over when needle comes off the material and that the feeding power got over the thread pull by stitch tightening.

By turning of the screw (1) clockwise pressing of the top roller has been increased, by counter-clockwise turning pressing of the top roller has been decreased.

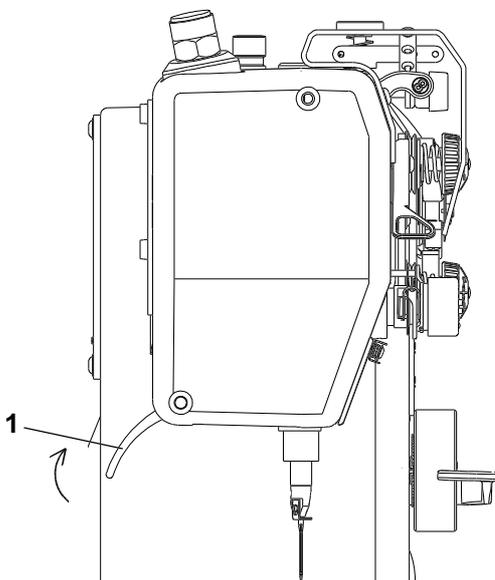


6.7 Lifting the top roller up

Mechanical lifting of the top roller is enabled by means of the hand lever (1), which contemporarily, after it has been lifted in the arrow direction, is locking the top roller in its top position and turning (adjustment) of the machine is possible. The top roller can be lifted via knee lever or left treadle - depending on the machine sub-class. Automatical lifting by means of electromagnet is described in the paragraph No. 7.



When lifting top roller via knee lever or the treadle or electromagnet, the needle must be in the upper position and the machine has to come to a full stop.

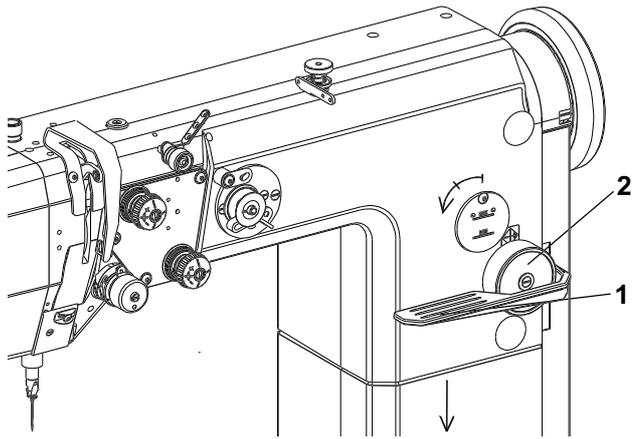


6.8 Reverse stitching

The change of direction of sewn work can be mechanically controlled via a reverse stitching lever (1) by its depression in the arrow direction (down). The sub-class defines whether the machine has electromagnetic reverse stitching – see paragraph No. 7.

6.9 Stitch length adjustment

Stitch length adjustment is by dial (2) by its turning. Turning clockwise stitch length is decreased, turning counter-clockwise stitch length is increased.

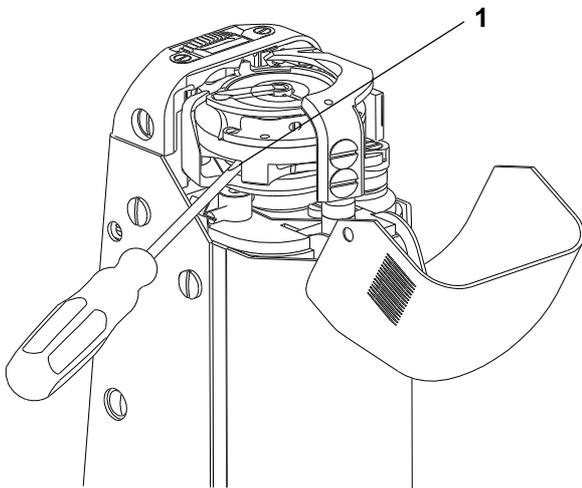

6.10 Safety clutch

The machine is provided with a safety clutch which disengages the driving unit, when the hook is blocked. Reconnection must be done in the following way:



Caution! Risk of injury!

Before assembly turn the main switch off and wait until the motor stops!

- Turn the manually operated wheel as far as you can reach the suitable point for inserting a screwdriver into the space(1).
- Continue turning the manually operated wheel in direction of the arrow located on it, until you feel the drop in of the safety clutch.

6.11 Starting of the material trimming operation

The trimming operation can be started at the beginning of the seam, but also at any moment during the sewing operation. In such case, the knife pierces the trimmed material and, starting from this spot, the trimming operation starts running.

- Put the material to be sewn under the presser foot.
- Engage the trimming device in depressing the engaging lever (1) downwards. The trimming knife (2) will move downwards into its working position.




Caution! Risk of injury!


When starting the trimming operation, do not put your fingers under the trimming knife.

- Sew a seam.
- Disengage the trimming device in pulling the engaging lever (1) upwards.



Especially when starting the trimming operation in the middle of the trimmed material, do not exceed its maximum permissible thickness = 2.5 mm. This may break the trimming knife. When applying the maximum sewing speed together with the maximum stitch length, a smooth trimming cut cannot be ensured. It is necessary to reduce one or the other in proceeding to a test on the material to be trimmed.

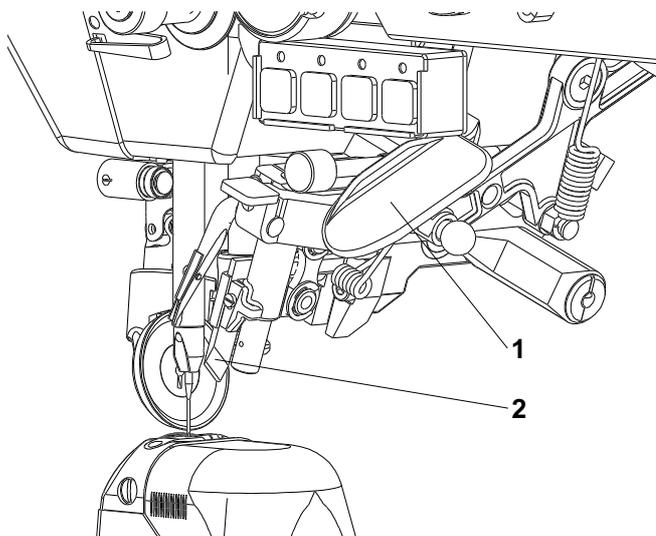

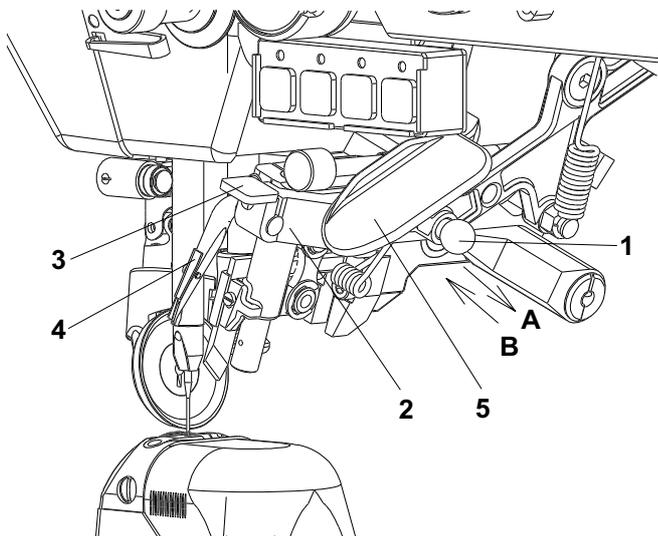

6.12 Control of the material guide regardless the engaged trimming device

- Pull the sphere (1) in the direction of the arrow (A), until its pin disengages from the engagement with the lever (2).
- In depressing the handrail (3) downwards, lower the guide (4) into its working position. Using the inverse procedure, lift the guide upwards.

6.13 Control of the material guide with regard to the engaged trimming device


- Disengage the trimming device by means of the lever (5) and lift the guide (4) in its top position
- Depress the sphere (1) in the direction of the arrow (B), until its pin fits into the recess in the lever (2).
- Engage the trimming device using the lever (5). The guide shifts in its working position. When disengaging the trimming device, the guide lifts too.

6.14 Setting of the material guide




Caution! Risk of injury!


Proceed to the guide setting only with the machine switched off!

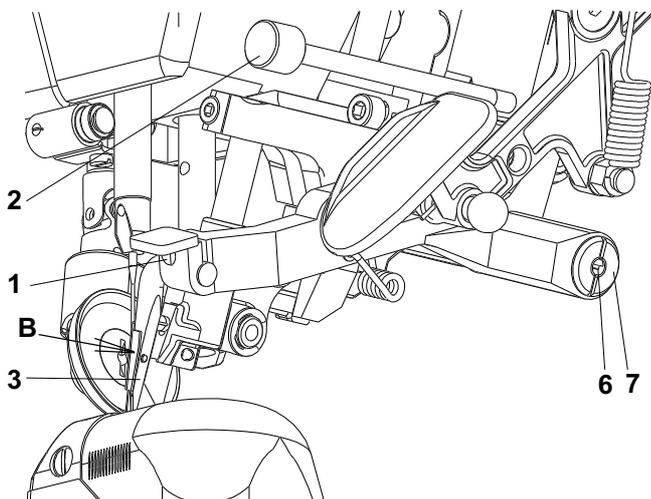



- Switch off the machine with the main switch.
- Engage the trimming device (lower the knife in its working position).
- Loosen the screw (1)
- Loosen the screw (2) until the guide (3) bears against the insert.
- Using a screw driver, turn the shaft (5) in such a way, so that the trimming knife is in its lowest position.
- Push the guide in the direction of the arrow (B), until it bears against the trimming knife, and tighten the screw (1).
- In tightening the screw (2), set the guide (3) in such a way, so that there is a space between the guide and the throat plate corresponding to the thickness of the material to be trimmed.
- Loosen the screw (6) inside the screw (7). Turn the screw (7) in the suitable direction, until the clearance "C" = 0.2 - 0.4 mm between the guide and the trimming knife is set - see table 3a, par. 5.

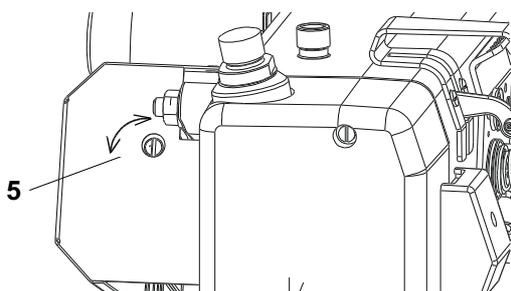

With an insufficient clearance "C", the knife strikes against the guide and will be soon destroyed. With an excessive clearance "C", the needle strikes against the guide.

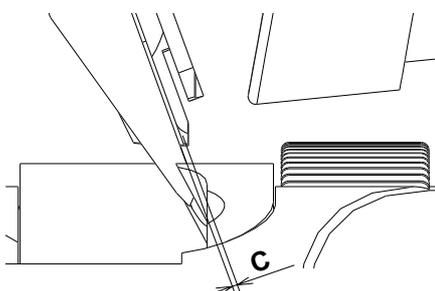

- Tighten the screw (6). In this way, the screw (7) will be blocked.
- The guide (3) may be set in height by means of the screw (2) even with the main switch switched on.

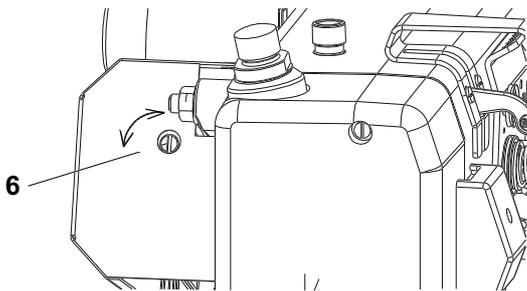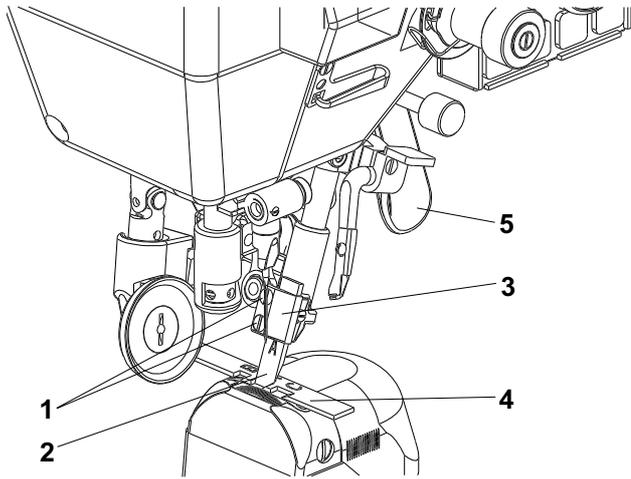

6.15 Replacement of the trimming knife



Caution! Risk of injury!

Replace the trimming knife only with the machine switched off!

- Switch off the main switch of the machine.
- Put the knife in its top position, loosen the screws (1) and shift the knife (2) downwards.
- Shift in the new knife, tighten only very slightly the screws to have the knife in its holder (3) still slidable.
- Place the gauge (4) on the throat plate in such a way, so that the recess number corresponds with the number on the knife.
- With a slow movement of the lever (5), lower the knife downwards.
- Using a screw driver, turn the shaft (6) in such a way, so that the trimming knife is in its lowest position.
- Push the free end of the trimming knife with a screwdriver, until it bears into the recess in the gauge (4) and tighten thoroughly the screws (1)
- Lift the trimming knife, remove the gauge, lower the trimming knife and check the movement of the trimming knife in turning the shaft (6).



The trimming knife must not strike in its bottom dead centre against the throat plate insert. In the top dead centre, the trimming knife must not leave the cutting edge on the throat plate insert.

6.16 Setting of the trimming device for trimming very small radii

For trimming very small radii, the trimming knife "B" is to be used, it can be additionally purchased. In such case, the setting inside the trimming mechanism must be changed. This setting change is described in the service book.

6.17 Setting of the trimming device for trimming thin, soft materials

For this type of trimming, the trimming knife "C" is to be used, it can be additionally purchased. In such case the setting inside the trimming mechanism must be changed. This setting change is described in the service book.

6.18 Change of the sewing category

When proceeding to this change, it is necessary to replace the throat plate insert (it can be additionally purchased). Together with the insert replacement, the width of the trimmed edge is changed - the side setting of the knife must be changed. It is described in the service book.

6.19 Sharpening of the knives

The knives of sintered carbide are to be sharpened using diamond abrasive material. A sharpening jig serving as a knife fastener for machine sharpening or directly for hand sharpening on a whetstone (only steel knives) can be additionally purchased. The sharpening procedure is described in the service book.


7. Electronic control of the machine

(it is valid for sub-classes equipped with stop motor)

7.1 Control of sewing by means of control elements

7.1.1 Via treadle (treadle positions and function possibilities)

The position of the treadle is read by the reader, which can recognise 16 levels. Its meaning is shown on the table.

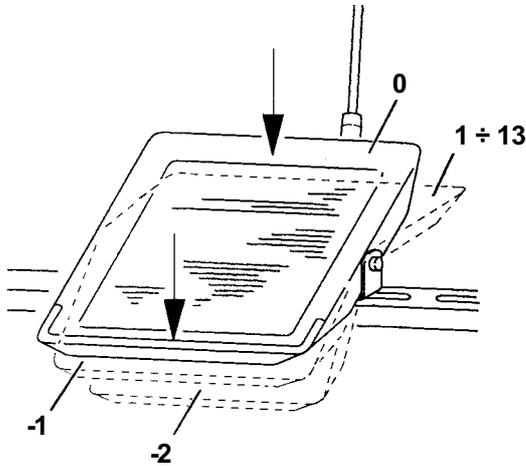


| Treadle position | Treadle | Meaning |
|------------------|----------------------|--|
| -2 | Foot full backwards | Command for thread trimming (seam finishing) |
| -1 | Foot slightly | Command lifting the top roller up |
| 0 | Neutral position | Note |
| 1 | Slightly forwards | Command releasing top roller |
| 2 | Continually forwards | Sewing at minimum speed (1. gear) |
| 3 | Continually forwards | Sewing at second speed level |
| : | : | : |
| 13 | Fully forwards | Sewing at maximum speed (12. gear) |

Note: It is possible to pre-adjust the needle position (up/down) and foot position (up/down) by stopping in seam (introducing the treadle in neutral position). Foot position (up/down) after seam finishing (pressing the treadle by foot fully backwards).

7.1.2 Via pushbutton panel

There are four built-in pushbuttons in the panel with fixed adjustable functions:

- T1 - bar operation (by pressing this pushbutton during sewing the sewn work is feed back)
- T2 - needle up/down (each press of the pushbutton changes the needle position)
- T3 - temporary cancelling (recalling) bar (in case) the bar is pre programmed at the start and end of the seam, by pressing the pushbutton down will uniformly switch off; if it is not chosen it will switch on by pressing the pushbutton
- T4 - revolutions limitation (valid for motor Efka DA82GA)
 - reduction of pressure of the presser foot for Mini-stop EFKA DA320 (see The instructions for assembling with Mini-stop, par. 5.2.4)

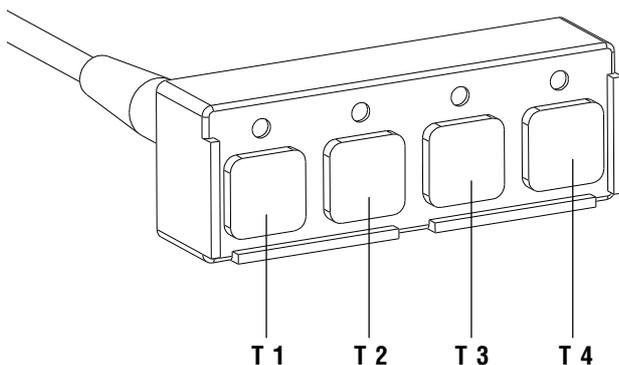


7.1.3 Via control panel Efka V 810/V 820

These functions are standardly assigned to the pushbuttons A, B:

- A - cancelling (recalling) the bar (the same function as T3 of the pushbutton panel)
- B - needle up/down (the same function as T2 of the pushbutton panel)

Note: function of the A, B pushbuttons can be changed by different adjustment of parameters 293, 294 (see the parameters list of driving unit Efka DA82GA).

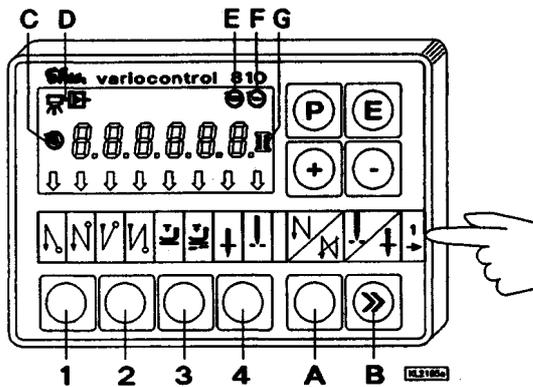

Foot position adjustment by stopping at the seam (by neutral position of treadle) and after finishing seam (by neutral position of treadle):

Setting is by means of pushbutton 3, arrow indication above the corresponding symbol.

Needle position adjustment by stopping at the seam:

Setting is by means of pushbutton 4.

7.2.1.2 Setting by means of parameters

Drive memory contains the parameters which enables sewing system tuning. These parameters have exact meaning and they are divided into 3 levels. Further parameters which are available only for operation will be quoted. Each parameter has its (sequence) number and value.

General procedure by changing parameters of operation level:

- switch the main switch on or finish the seam by pressing the treadle fully backwards down
- press pushbutton P on the panel V 810
- it will be displayed on the display F 000 (000 it is the number of parameter)
- by several times pressing + (or -) set the requested number of parameter
- push pushbutton E down and it will be shown the value of parameter on the display
- you can change the value by means of pushbutton + or -
- by pushing pushbutton E down you will change the sequence to the following number of parameter
- by pushing pushbutton P down you will leave the mode of changing parameters

- Note:*
1. For permanent memory storing of changed parameter, it is necessary to press treadle forwards down after changing of parameters.
 2. Mode of changing parameters is possible only after finishing of the seam.

Number of stitches in bars:


Number of stitches is stored in parameter's number.

| No. of parameter | Value range of parameter | Description of parameters |
|------------------|--------------------------|--|
| 000(080) | 0-254 | Number of stitches of start (fancy) bar forwards |
| 001(081) | 0-254 | Number of stitches of start (fancy)bar backwards |
| 002(082) | 0-254 | Number of stitches of end (fancy) bar backwards |
| 003(083) | 0-254 | Number of stitches of end (fancy)bar forwards |

Sewing according to sewing program:


Drive with panel V810 automatically enables sewing of 1 seam with setting number of stitches. It is necessary to set in corresponding number of stitches, and initialisation of sewing program.

| No. of parameter | Value range of parameter | Description of parameters |
|------------------|--------------------------|------------------------------------|
| 007 | 0-254 | Number of stitches |
| 015 | ON/OFF | ON/OFF sewing under sewing program |

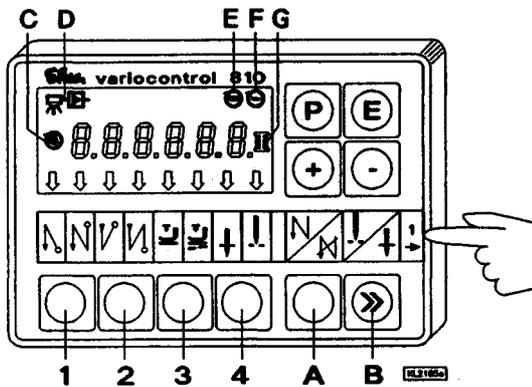

ON/OFF thread trimmer:


| No. of parameter | Value range of parameter | Description of parameters |
|------------------|--------------------------|---------------------------|
| 013 | ON/OFF | Thread trimmer ON/OFF |

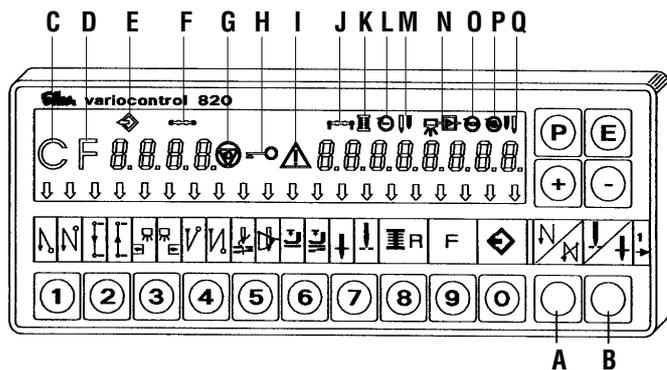

7.2.2 By using stopmotor Efka with panel V 820

Functioning pushbuttons engagement:

| | |
|--------------|--|
| Pushbutton P | Call and termination of programming mode |
| Pushbutton E | Confirmation when changing programming mode |
| Pushbutton + | Increasing the value displayed in programming mode |
| Pushbutton - | Reducing the value displayed in programming mode |
| Pushbutton 1 | Start bar SINGLE/DOUBLE/OFF |
| Pushbutton 2 | Stitch counting FORWARD/BACK/OFF |
| Pushbutton 3 | Light barrier function LIGHT-DARK/DARK-LIGHT/OFF |
| Pushbutton 4 | End bar SINGLE/DOUBLE/OFF |
| Pushbutton 5 | Function TRIMMING/TRIMMING+EJECTOR/OFF |
| Pushbutton 6 | Automatic top roller lifting after having stopped inside the seam ON/OFF Automatic top roller lifting after trimming ON/OFF Automatic presser foot lifting after thread trimming (end of seam) ON/OFF Automatic reduction of pressure of the presser foot ON/OFF (only for DC 1550/DA320; see The instructions for assembling with Mini-stop, par. 5.2.4) |
| Pushbutton 7 | Basic needle position UP/DOWN |
| Pushbutton 8 | Lower thread waste controlling ON/OFF |
| Pushbutton 9 | Operation pushbutton - programmable |
| Pushbutton 0 | Programming/processing of 40 possible sewing sections (seams) |
| Pushbutton A | For cancelling or calling the bar |
| Pushbutton B | For switching needle position UP/DOWN, resp. shifting pushbutton in the programming mode |
| Symbol C | Designating symbol C for code number |
| Symbol D | Designating symbol F for parameter number |
| Symbol E | Programme number in TEACH IN mode |
| Symbol F | Seam number in TEACH IN mode |
| Symbol G | Run blocking ON |
| Symbol H | Blocked insertion by pushbutton |
| Symbol I | Fault reporting |
| Symbol J | Insertion of stitch number in TEACH IN mode |
| Symbol K | Connected lower thread controller, flashing symbol when running out thread reserve on bobbin |
| Symbol L | Limitation of revolutions ON |
| Symbol M | Right needle disconnected |
| symbol N | Evening stitches for light barrier in the TEACH IN mode |

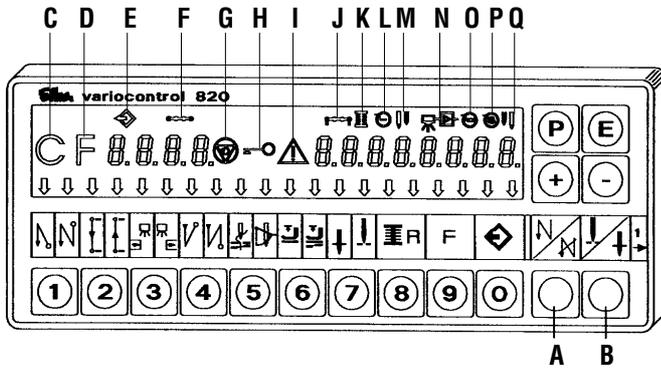

Symbol O Machine is running
 Symbol P Automatic revolutions ON
 Symbol Q Left needle disconnected

The arrows on the display indicate switching the functions which are displayed by symbols above the pushbuttons on.

7.2.2.1 Adjustment by means of buttons with fixed setting function

Note: It is important to finish the seam in order to reach effective button pressing (press the treadle fully backwards down).

Setting start bar:

Drive enables sewing start bar automatically. It is necessary to choose the type (single, double, off) and number of stitches which will be sewn forwards and backwards.

The arrow above its symbol shows the type of bar (chosen by gradually pressing pushbutton 1). It will be displayed following after pressing pushbutton 1.

Arv (SAv) XXX - number of stitches of start (fancy) bar forwards or

Arr (SAr) XXX - number of stitches of start (fancy) bar backwards for about 3 sec.

At this time you can change the number of stitches by gradually pressing the pushbutton + or -.

Setting end bar:

The same applies to the start bar (setting by the means of pushbutton 4).

Erv (SEv) XXX - end (fancy) bar number of stitches forwards

Err (SEr) XXX - end (fancy) bar number of stitches backwards

Note: The last section of end bar must have at least 3 stitches.

Foot position adjustment by stopping at the seam (by neutral position of treadle) and after finishing seam (by neutral position of treadle):

Setting is by means of pushbutton 6, arrow indication above the corresponding symbol.

Needle position adjustment by stopping at the seam:

Setting is by means of pushbutton 7.

Trimming switched ON/OFF:

To be set using pushbutton 5.

Sewing programme ON:

To be switched on using pushbutton 0.

Switching ON/OFF the function of the pushbutton F:

The pushbutton F on panel can have assigned one of the following functions: Sst - softstart

SrS - fancy bar

Frd - reverse angle after trimming

7.2.2.2 Setting by means of parameters

Drive memory contains the parameters which enables sewing system tuning. These parameters have exact meaning and they are divided into 3 levels. Further parameters which are available only for operation will be quoted. Each parameter has its (sequence) number and value.

General procedure by changing parameters of operation level:
 - switch the main switch on or finish the seam by pressing the treadle fully backwards down

- press pushbutton P on the panel V 820


- on the display there is no data shown

- by depressing the pushbutton E several times, set the required parameter (without having displayed the parameter number)

- you can change the value using pushbuttons + or -

- by depressing the pushbutton E you will pass in the given sequence to the following parameter

- by depressing the pushbutton P down you will leave the mode of changing parameters

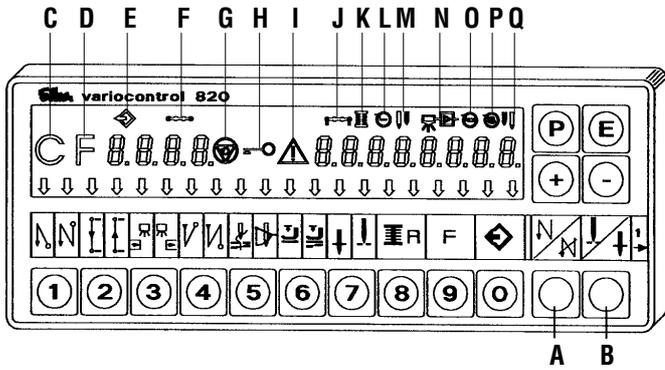

- Note:*
1. For permanent memory storing of changed parameter, it is necessary to press treadle forwards down after changing of parameters.
 2. Mode of changing parameters is possible only after finishing of the seam.

Number of stitches in bars:

Number of stitches is stored in parameter's number.

| No. of parameter | Value range of parameter | Description of parameters |
|------------------|--------------------------|---|
| 000(080) | 0-254 | Number of stitches of start (fancy) bar forwards |
| 001(081) | 0-254 | Number of stitches of start (fancy) bar backwards |
| 002(082) | 0-254 | Number of stitches of end (fancy) bar backwards |
| 003(083) | 0-254 | Number of stitches of end (fancy) bar forwards |

The drive with the panel V 820 enables sewing automatically up to 40 seams distributed up into eight programmes with the given stitch numbers and sewing direction (forwards/rearwards). For more detailed information see the original driving instructions.


8. Maintenance

Caution! Risk of injury!
Maintenance work can only be carried out when the machine is off and the motor stops.

Maintenance work which must be carried out and the intervals between them and set out in the following table.

| Maintenance work | Interval |
|--|----------|
| Removing throat plate and its cleaning. Cleaning of circular feed dog, hook and space around feeding wheel of material and thread residues. To clean it, use brush. It is prohibited to use compressed air for cleaning without protective guards preventing injury of persons with flying impurities. Hook lubrication - (one drop of oil). | 1 day |
| Checking the oil level in the hook lubrication oil tank. | 1 week |
| Checking the oil level in the oil tanks of the central distribution. Regreasing of the greasing spots of the trimming system (pins with felt). | 1 month |

For the lubrication of this machine Esso SP-NK 10, DA 10 or an equivalent quality lubricating oil is recommended (viscosity at 40° C: 10 mm²/s; flash point: 150°C).
The oil tanks (1, 2, 3) of the central distribution is to be filled the hole (4) up to the mark max.

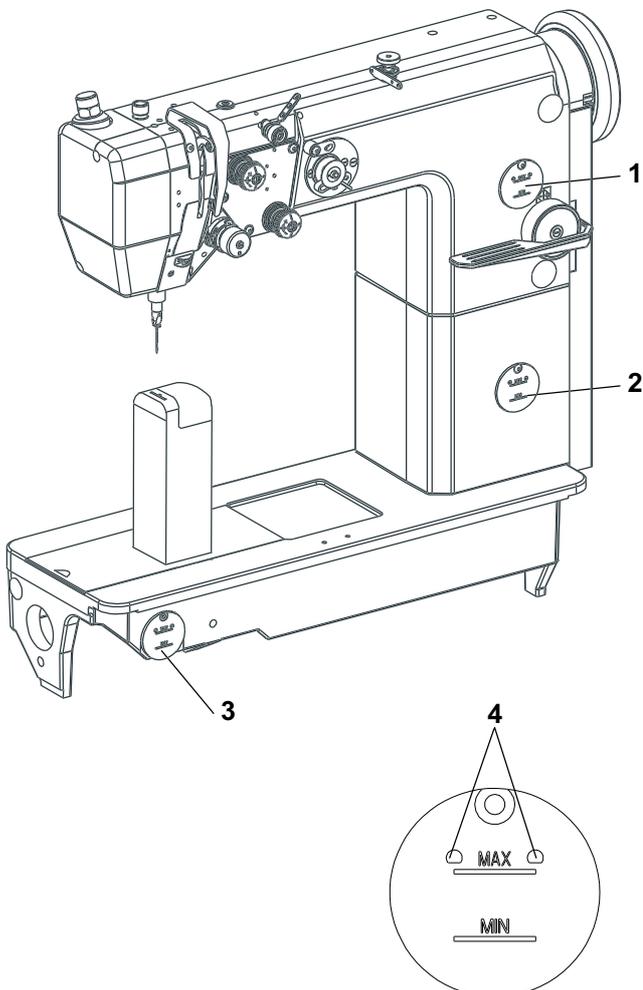

Operating instructions for eventual trouble shooting

Meaning of abbreviations: NP - Instruction manual
SK - Instructions for service

Note: When the machine is driven by a stop motor, it is indispensable to check up, before starting its repair, the setting of its parameters according to NP, part B, par. 5.

| Trouble | Cause | Method of troubleshooting |
|---|--|---|
| 1. Upper thread breaking. | 1.1 Incorrect threading of the upper thread. | Thread the upper thread according to NP, par. 6.1. |
| | 1.2 Excessive thread tension. | Set the tension according to NP, par. 6.4. |
| | 1.3 Needle incorrectly inserted or damaged. | Replace needle according to NP, par. 6.5. |
| | 1.4 Needle thickness does not suit to that of thread or sewn material. | Use a thicker needle. |
| | 1.5 Hook point sticks the thread. | Set distance between hook and needle according to SK, par. 3.1.3 and 3.1.5. |
| | 1.6 Needle thread excessively elastic. | Increase the hook timing and set the needle bar height according to SK, par. 3.2.3. |
| | 1.7 Low quality thread. | Replace thread. |
| | 1.8 Needle thickness unsuitable for the hole in the throat plate insert. | Replace insert. |
| | 1.9 Damaged throat plate insert. | Replace insert. |
| | 1.10 Incorrect setting of opening bobbin case lifter (little opening). | Set according to SK, par. 3.1.6. |
| 2. Lower thread breaking. | 2.1 Incorrect threading. | Thread according to NP, par. 6.3. |
| | 2.2 Damaged bobbin. | Replace bobbin. |
| 3. Skipped stitches at the seam beginning after previous thread trimming. | 3.1 Short thread end in needle after trimming (thread too tensioned in the moment of trimming). | Thread upper thread according to NP, par. 6.1. Reduce tension of pretension unit according to NP, par. 6.4. Accelerate slightly OFF position of main tensioner according to SK, par. 4.9; NP, part B, par. 5.2.2, 5.3.2; Mini-stop, par. 5.2.5 - parameter 192. |
| | 3.2 Excessive thread tension. | Set thread tension according to NP, par. 6.4. |
| | 3.3 Upper thread not squeezed, at the first needle piercing, between sewn material and rear edge of piercing hole. | Set needle feeding in such a way, so that, with the maximum stitch length, the needle almost touches the rear edge of throat plate insert according to SK, par. 3.2.5. Reduce height of wheel feeder according to SK, par. 3.5.3.2.1. Put nearer top roller to needle and shift it rearwards according to SK, par. 3.6.6.2. |
| | 3.4 Upper thread incorrectly caught by movable trimming knife. Lumps of thread remaining in hook space. | Set correctly hook opening according to SK, par. 3.1.6 and adjust setting of trimming cam according to SK, par. 4.3. |
| | 3.5 Needle too thick with regard to thickness of thread and sewn material. | Use thinner needle. |
| 4. Stitch skipping. | 4.1 Needle incorrectly inserted. | Insert needle according to NP, par. 6.5. |
| | 4.2 Too big distance between needle and hook point. | Set according to SK, par. 3.1.3 and 3.1.5. |
| | 4.3 Incorrectly set needle hook timing or needle height. | Set according to SK, par. 3.1.4 and 3.2.3. |
| | 4.4 Excessively elastic material or excessively elastic thread. | Increase timing as needed and set the needle bar height according to SK, par. 3.2.3. |
| | 4.5 Damaged hook point. | Replace hook. |

| | | |
|---|--|---|
| 5. Incorrect stitch locking. Threads are locked on top side of sewn material. | 5.1 Lower thread tension. 5.2 Incorrect threading and tension setting of upper thread. | Set according to NP, par. 6.4. Thread according to NP, par. 6.1 set according to NP, par. 6.4. |
| 6. Incorrect stitch locking. Threads are locked on bottom side of sewn material and increasing of tension is of upper thread no help. | 6.1 Upper thread out of tensioning dishes. 6.2 Opening bobbin case lifter incorrectly set (it opens too little). 6.3 Wheel feeder too low - difficult passage of thread between sewn material and throat plate. 6.4 Upper thread insufficiently tensioned when passing through hook. | Thread correctly according to NP par. 6.1. Set according to SK, par. 3.1.6. Set wheel feeder height according to SK, par. 3.5.3.2.1. Shift thread limiter to the top according to SK, par. 3.4.5 or by more than the value quoted there. |
| 7. Stitches insufficiently tightened and with irregular positioning. Thread unravelling. | 7.1 Low tension of upper and lower threads. 7.2 Upper thread insufficiently tensioned when passing through hook. 7.3 Thin needle with regard to thread thickness. | Set tension according to NP, par. 6.4. Shift thread limiter to the top according to SK, par. 3.4.5 or more than the value quoted there. Use a thicker needle. |
| 8. Sewn material wavy in seam. | 8.1 Thread tension too high for sewn material. | Reduce tension of both threads. |
| 9. Machine does not feed or is feeding slowly or in reverse sense. | 9.1 Overrun safety clutch against hook overload. | Engage correctly clutch according to NP, par. 6.10. |
| 10. Difficult and irregular machine feed. | 10.1 Wheel feeder too low (especially when sewing soft and thick materials). 10.2 Feeder teeth unsuitable (too fine) for sewn material. 10.3 Wheel feeder driving chain too tensioned - blocked feeding. | Raise feeder more from throat plate according to SK, par. 3.5.3.2.1. Use feeder with 0.6 mm teeth pitch. Replace according to SK, par. 3.5.3.2.2. Set chain tension according to SK, par. 3.5.3.2.1. |
| 11. Hook blocked. | 11.1 Incorrect lower thread threading when replacing hook bobbin - lower thread caught by hook point. 11.2 Upper thread out of tensioning dishes and 2x caught by hook point. 11.3 Insufficient gap between needle and piercing hole from hook side. | Thread lower thread according to NP, par. 6.3. Thread upper thread according to NP, par. 6.1. Set side position of the throat plate post according to SK par. 3.3.3. |
| 12. No upper thread trimming. | 12.1 Incorrectly threaded thread. 12.2 Upper thread excessively braked when moving upwards due to thin needle, thick elastic material, low feeder position, low thread tension. 12.3 Tensioner electromagnet cuts soon main tensioner during trimming. 12.4 Fixed trimming knife does not fit with all its width against movable knife. 12.5 Movable knife does not run over movable knife edge. 12.6 During trimming cycle, safety clutch against hook overload gets disengaged. | Thread the thread according to NP, par. 6.1. Insert thicker needle according to NP, par. 6.5. Lift wheel feeder according to SK, par. 3.5.3.2.1. Delay position of cutting the main tensioner according to SK, par. 4.9 and according NP, part B, par. 5.2.2, 5.3.2; Mini-stop, par. 5.2.5 - parameter 192. Set knives according to SK, par. 4.7. Set knife according to SK, par. 4.5. Increase clutch disengaging moment according SK, par. 3.9.2. |
| 13. No lower thread trimming. | 13.1 Incorrect movable knife path setting. | Set knife according to SK, par. 4.5. |

| | | |
|--|--|---|
| | 13.2 Short movable knife path. | Increase path by correct fork setting according to SK, par. 4.4. |
| | 13.3 Incorrect cam setting. | Set cam according to SK, par. 4.3. |
| | 13.4 Incorrect trimming knife height setting. | Set height according to SK, par. 4.6. |
| 14. Second and third stitches incorrectly locked at the beginning of sewing after previous trimming. | 14.1 Incorrect setting of lower hook thread retaining spring. | Set spring according to SK, par. 4.8. |
| 15. Pinched out cutting edge of cutting knife. | 15.1 Pinching out of cutting edge during the knife exchange: The fixing screws failed to be lightly tightened before the cutting edge has been set on the gauge. | Fix the knife according to NP, par. 6.15. |
| | 15.2 Faulty lateral position of the knife in relation to the throat plate insert: excessive pressure between the knife and the insert. | a) Switch off the machine, set the knife to its lower position, loosen the screws of the throat plate and retighten them. b) Set the lateral position of the knife as in SK. |
| | 15.3 The knife collides with the sewn work guide. | Adjust the guide according to NP, par. 6.14. |
| 16. Poor cutting quality. | 16.1 Play between the cutting edges of the knife and of the throat plate insert. | a) Loosen the throat plate screws, press the throat plate against the knife and retighten the screws. b) Set the lateral position of the knife according to SK. |
| | 16.2 Slow run of work cutter motor: faulty connection of supply transformer. | Change the branch of primary winding of the transformer according to NP, part B, par. 4.8. |
| | 16.3 Blunt knife. | Exchange the knife. |
| 17. Uneven stitch length of direct seam. | 17.1 Blunt knife. | Exchange the knife. |
| | 17.2 Sewing speed too great for the chosen stitch length. | Reduce the sewing speed according to NP, par. 5. |
| | 17.3 Insufficient height of lower wheel feed over the throat plate. | Lift the feed wheel according to SK, par. 3.5.3.2.1. |

Contents - part B1 - The instructions for assembling with standard drives

| | |
|--|----|
| 1. Safety instructions | 1 |
| 2. The way of machine supply | 1 |
| 2.1 Complete head with accessories | 1 |
| 2.2 Stand | 1 |
| 2.3 Motor | 1 |
| 2.4 Motor pulley | 2 |
| 3. Table top | 3 |
| 4. Machine assembly | 3 |
| 4.1 Stand frame assembly | 3 |
| 4.2 Assembly of components on the bottom of table top | 4 |
| 4.2.1 Power supply 1 x 230 V - DC motor | 4 |
| 4.2.2 Power supply 3 x 400 V - five wire power distribution, power supply 3 x 230 V - four wire or five wire power distribution | 5 |
| 4.2.3 Power supply 3 x 400 V - four wire power distribution plus 1 x 230 V - two wire cabel | 5 |
| 4.3 Assembly of a table top on a stand frame, assembly of oil tank | 6 |
| 4.4 Assembly of machine head onto a stand | 6 |
| 4.5 Assembly of motor pulley, belt, belt covers, hand wheel | 7 |
| 4.6 Assembly of treadle rod, setting rod and of position sensor, knee lever | 7 |
| 4.7 Electrical connection of machine head to the stopmotor | 8 |
| 4.7.1 Connecting cable | 8 |
| 4.7.2 The actual electrical connection | 9 |
| 4.7.3 Fastening upper cover belt, position reader, control panel of stopmotor and thread stand | 10 |
| 4.8 Wiring of the work trimmer | 11 |
| 4.8.1 For machines having the Efka stopmotor | 11 |
| 4.8.2 For machine having the clutch motor | 11 |
| 5. Basic setting of stopmotor and position reader | 12 |
| 5.1 Generally | 12 |
| 5.2 Stopmotor setting S359 600045 XXX - EFKA DC 1600/DA82GA | 12 |
| 5.2.1 Setting position reader | 12 |
| 5.2.2 Changes of setting parameters of stopmotor setting considering original producer setting | 13 |
| 5.3 Stopmotor setting S359 600052 XX - EFKA VD 552/6F82FA and S359 600056 XX - EFKA VD 554/6F82FA | 13 |
| 5.3.1 Setting position reader | 13 |
| 5.3.2 Changes of setting parameters of stopmotor setting considering original producer setting | 13 |
| 6. Examination of sewing | 13 |
| Supplement | 14 |

Part B1 - The instructions for assembling with standard drives

1. Safety instructions



Caution !

Assembly of the machine must only be carried out by appropriately trained technician.

Any operations to be performed on the electric installation of the sewing machine are to be done only by a competent electrician.

2. The way of machine supply

The contents of supply will be determined in agreement between the supplier and buyer. There are following possibilities:

2.1 Complete head with accessories

In this case the supply contains:

- Complete head.
- Chosen spare parts in the bag under the presser element (see parts indicated * in catalogue of spare parts).
- Standard accessories (it contains tools-see module in catalogue of spare parts).
- Special accessories (it contains some components of a stand and upper belt cover-see module in catalogue of spare parts).

The supply like this is not complete. Buyer will provide missing components himself or he can put in an extra order to get them according to the following paragraphs.

2.2 Stand

Delivery contains components of a stand, however, without components of a stand included in special accessories supplied with machine head (see par.2.1) and without any electrical components.

If it hasn't been agreed otherwise, the stand is supplied in separate pieces. If the assembled stand is asked, special accessories are used from head supply.

Stand (ordered number S400 010000) contains following items:

| | |
|-------------|--------------------------|
| MG55 000501 | Stand frame |
| MG53 002501 | Big treadle |
| MG53 007511 | Set of parts for a stand |
| S615 000320 | Table top |

Equipment for foot lifting by treadle:

| | |
|-------------|------------------|
| S058 000450 | Small treadle |
| S980 060028 | Foot lifting rod |

2.3 Motor

The supply contains its own motor, switch - circuit breaker, all cabling (except of the plug) and material for connection. It can contain a control panel according to the type of motor. If it hasn't been agreed otherwise, it is supplied in separate pieces. A machine without trimming is equipped with clutch lever motor. However if positioning is asked or electromagnetic foot lifting or electromagnetic reverse stitching (bartacking) the machine without trimming must be equipped with stopmotor.

Motors are chosen according to the following table:

| Machine subclass | Ordered number | Name | Diameter of pulley | Machine rev. max./min 50 Hz/60 Hz | Approx. specification |
|--------------------------|-----------------|---|--------------------|-----------------------------------|--|
| X11 X21 | S359 600030 63 | FIR 1148 | 63 | 2500/3000 | asynchronous clutch motor; switch-circuit breaker with cabling; connection material |
| | S359 600030 50 | 3 x 400/230 V, 2800 RPM, 50 Hz | 50 | 2000/2400 | |
| | S359 600030 42 | | 42 | 1600/2000 | |
| | S359 600031 75 | FIR 1147F | 75 | 1500/1800 | |
| | S359 600031 63 | 3 x 400/230 V, 1400 RPM, 50 Hz | 63 | 1200/1500 | asynchronous clutch motor; switch-circuit breaker with cabling; connection material |
| | S359 600031 42 | | 42 | 800/1000 | |
| X12 X22 X4X X5X | S359 600045 810 | Stopmotor EFKA DC 1600/DA82GA 1 x 230 V, 50/60 Hz | 58 | adjustable | DC motor (AC servo) control panel V810; mains switch with cabling; connection material |
| | S359 600045 820 | | 58 | adjustable | DC motor (AC servo) control panel V820; mains switch with cabling; connection material |
| | S359 600052 63 | Stopmotor EFKA * | 63 | 2500/3000 | asynchronous stopmotor with friction clutch and brake; switch-circuit breaker; connection material |
| | S359 600052 50 | VD 552/6F82FA | 50 | 2000/2400 | |
| | S359 600052 42 | 3 x 400/230 V, 2800 RPM, 50/60 Hz | 42 | 1600/2000 | |
| | S359 600056 75 | Stopmotor EFKA * | 75 | 1500/1800 | |
| | S359 600056 63 | VD 554/6F82FA | 63 | 1200/1500 | asynchronous stopmotor with friction clutch and brake; switch-circuit breaker; connection material |
| | S359 600056 42 | 3 x 400/230 V, 1400 RPM, 50/60 Hz | 42 | 800/1000 | |

* Control panel S359 600038/V810 or S359 600050/V820 it is possible to order for setting the stop motor, however, it is not included in supply of the stopmotor and it has to be ordered separately.



Above mentioned stop motors were tested in the machine and they meet functional requirements. Other types of stop motors can have but need not have suitable parameters. Producer does not recommend using the other stopmotor without testing.

2.4 Motor pulley

By stopmotor EFKA DC 1600/DA82GA is revolutions are set continuously by electronics.

The diameter of the motor pulley in mm must be by asynchronous motors according to the following quotation:

$$\text{Diameter of pulley} = 71 \times \frac{\text{sewing speed (st/min)}}{\text{motor revolutions (rev./min)}}$$

The smallest diameter of pulley is 42 mm considering used V-belt. Belt cover on the motor limits the biggest diameter of pulley to 127 mm.

The pulley for the maximum or other sewing speed will be supplied on express wish of the customer.

Motor pulley diameter

Sewing speed of machines: standard ¹⁾

Mains voltage frequency: 50 Hz

| Model | Sewing speed (SPM) | Ordered number/motor pulley diameter ²⁾ | | | | |
|--------------|--------------------|--|--|--|------------------------------------|-----------------------------|
| | | EFKA DC 1600/ DA82GA 3312 4000 RPM | EFKA VD 552/ 6F82FA 2800 RPM | FIR 1148/552/3 2800 RPM | EFKA VD 554/ 6F82FA 1400 RPM | FIR 1147F/554/3 1400 RPM |
| 4182-1XX-100 | 2500 | S359 600045 810/∅ 58 S359 600045 820/∅ 58 | S359 600052 63/∅ 63 S359 600052 42/∅ 42 | S359 600030 63/∅ 63 S359 600030 42/∅ 42 | - | - |
| -200 | 2500 | | | | | |
| -300 | 1600 | | | | | |

¹⁾ When the customer will not order anything else, he will get a pulley for standard sewing speed. Owing to a limited assortment of pulleys, the effective sewing speed may slightly differ from that declared and quoted in the column.

²⁾ The table gives effective pulley diameter which is by 4 to 5 mm lower than the outer diameter.


Note.: The effective diameter of the hand wheel pulley is 71 mm.

Sewing speed of machines: standard ¹⁾
Mains voltage frequency: 60 Hz

| | | Ordered number/motor pulley diameter ²⁾ | | | | |
|--------------|--------------------|--|--------------------------------|----------------------------|--------------------------------|-----------------------------|
| Model | Sewing speed (SPM) | EFKA DC 1600/DA82GA 3312 4000 RPM | EFKA VD 552/6F82FA 3360 RPM | FIR 1148/552/3 3360 RPM | EFKA VD 554/6F82FA 1680 RPM | FIR 1147F/554/3 1680 RPM |
| 4182-1XX-100 | 2500 | S359 600045 810/∅ 58 | S359 600052 50/∅ 50 | S359 600030 50/∅ 50 | - | - |
| -200 | 2500 | | | | - | - |
| -300 | 1600 | S359 600045 820/∅ 58 | - | - | S359 600056 63/∅ 63 | S359 600031 63/∅ 63 |

When the customer requires another sewing speed than standard, he may additionally order another pulley according to the following table:

| Motor | Sewing speed 50 Hz | Sewing speed 60 Hz | Diameter of pulley (mm) | Ordered number |
|-------------------------------|--------------------|--------------------|-------------------------|----------------|
| FIR 1148/552/3 EFKA VD552 | 1660 | 1990 | 42 | S980 045548 |
| | 1850 | 2220 | 47 | S980 045377 |
| | 1970 | 2370 | 50 | S980 045491 |
| | 2130 | 2560 | 54 | S980 045361 |
| | 2290 | 2740 | 58 | S980 045472 |
| | 2480 | 2980 | 63 | S980 045378 |
| | 2640 | 3170 | 67 | S980 045476 |
| | 2760 | 3310 | 70 | S980 045370 |
| | 2960 | | 75 | S980 045384 |
| | 3150 | | 80 | S980 045479 |
| | 3350 | | 85 | S980 045480 |
| FIR 1147F/554/3 EFKA VD554 | 830 | 990 | 42 | S980 045548 |
| | 930 | 1110 | 47 | S980 045377 |
| | 990 | 1180 | 50 | S980 045491 |
| | 1060 | 1280 | 54 | S980 045361 |
| | 1140 | 1370 | 58 | S980 045472 |
| | 1240 | 1490 | 63 | S980 045378 |
| | 1320 | 1590 | 67 | S980 045476 |
| | 1380 | 1660 | 70 | S980 045370 |
| | 1480 | 1770 | 75 | S980 045384 |
| | 1580 | 1890 | 80 | S980 045479 |
| | 1680 | 2010 | 85 | S980 045480 |
| | 1770 | 2130 | 90 | S980 045481 |
| | 1970 | 2370 | 100 | S980 045483 |
| | 2090 | 2510 | 106 | S980 045484 |
| | 2210 | 2650 | 112 | S980 045485 |
| 2500 | 3010 | 127 | S980 045337 | |

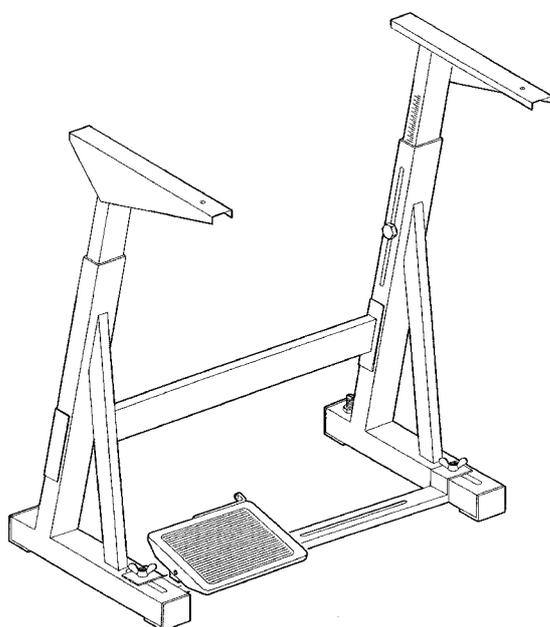

3. Table top

In case buyer will provide his own table top its drawing is shown in supplement.

4. Machine assembly

It is described machine assembly with stand here which is supplied in separate pieces. Otherwise use these instructions adequate.

4.1 Stand frame assembly

A frame is assembled according to the picture.

4.2 Assembly of components on the bottom of table top

- Put down antiskid (rubber) bands on the stand frame.
- Turn the table top up side down and put it down on prepared bands.
- By means of screws screw the drawer (1) down.
- Nail down the rubber stop (2).
- By means of screws fasten transformer for lighting (3) if available.
- By means of screws fastened transformer for trimming (4) if available.
- By means of screws fasten switch – circuit breaker (5).
- Screw the motor holder down (6) (possibly motor). Lever clutch motor is assembled into the holes (A). Stopmotor into holes (B).
- By means of clips (7) install transmission line of heavy current conductors. Connection is different from the type of motor, supply voltage and number of conductors of electric supply. In case of quad (four wire) supply 3 x 400 V, transformer for lighting must be supplied with separate supply cable 1 x 230 V.



Caution!

The voltage in the mains must be in conformity with the voltage indicated on the drive plate.




Caution!


The transformer of the bulb for the sewing area is not switched off by the main switch (EN 60204-3-1). Before proceeding to any repair operation in the transformer box (such as a fuse exchange) the plug categorically must be taken out of the socket. Such operations may be carried out only by persons with adequate electrotechnical skill.

Choose the suitable variant according to the pictures:


4.2.1 Power supply 1 x 230 V - DC motor

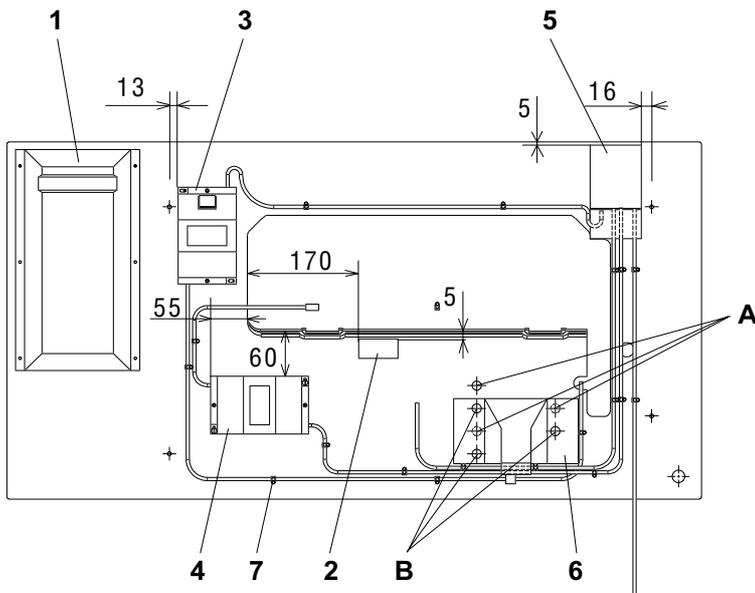


Circuit layout - Europe

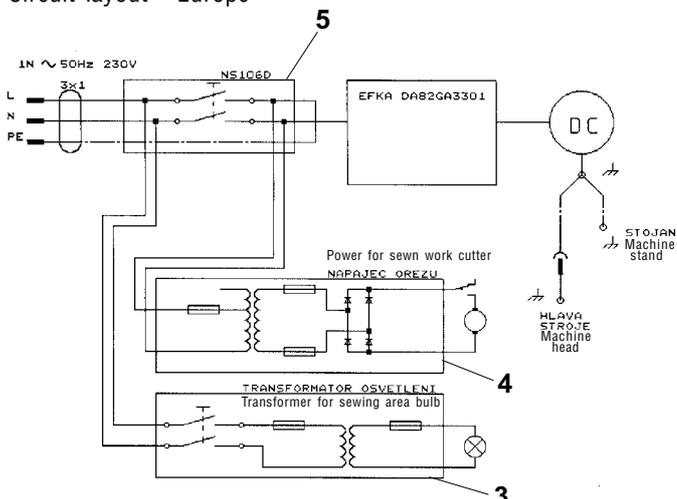


Circuit layout - America

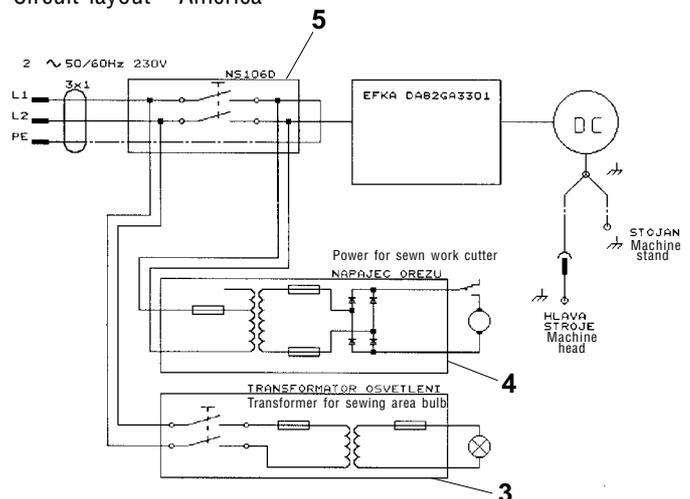


4.2.2 Power supply 3 x 400 V - five wire power distribution, power supply 3 x 230 V - four wire or five wire power distribution

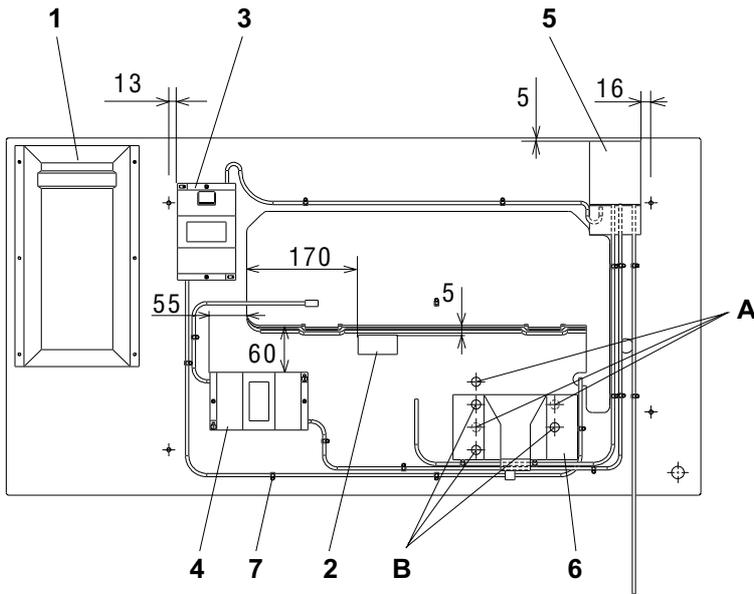


Circuit layout - Europe

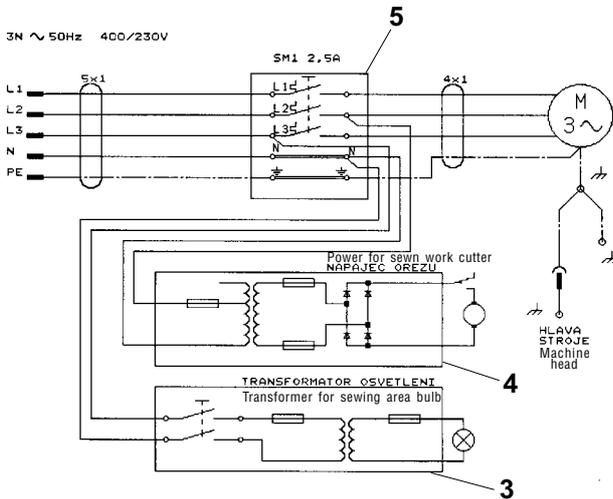


Circuit layout - America

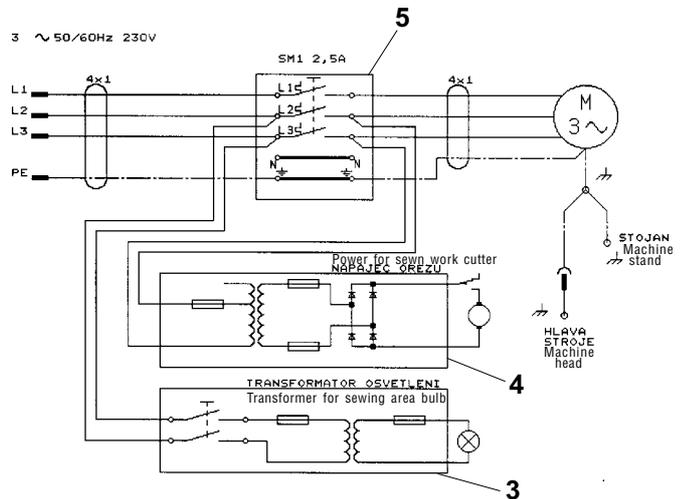


4.2.3 Power supply 3 x 400 V - four wire power distribution plus 1 x 230 V - two wire cable

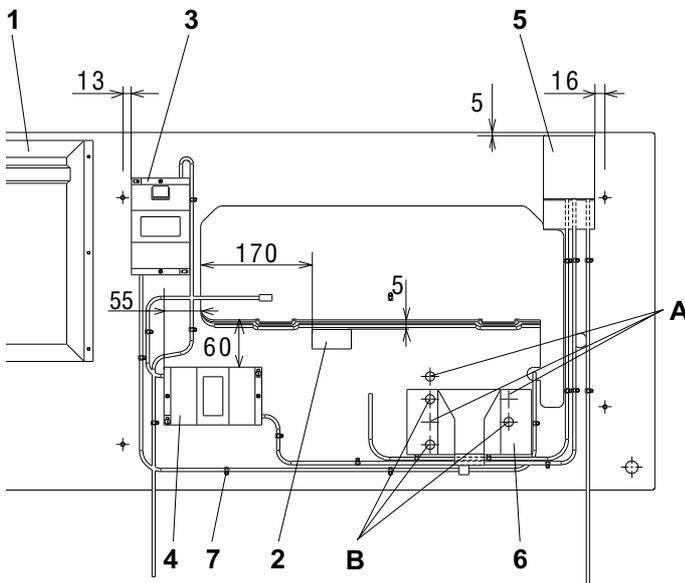


Circuit layout

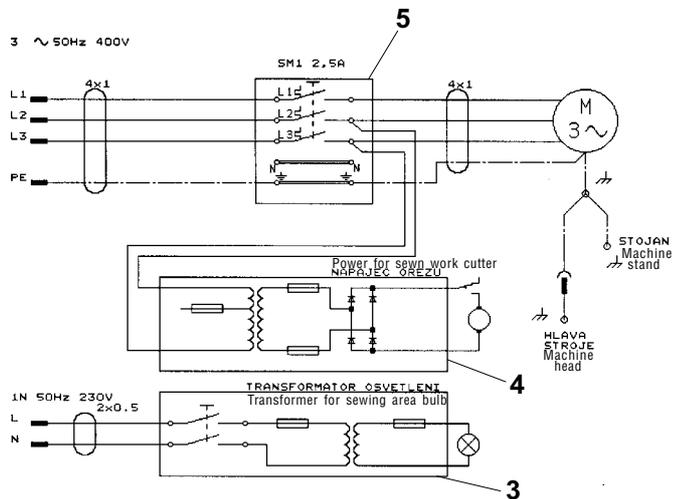


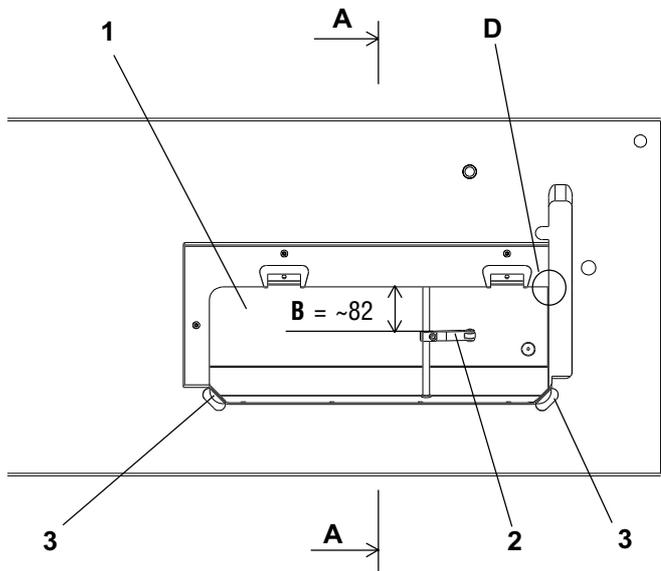

A - A

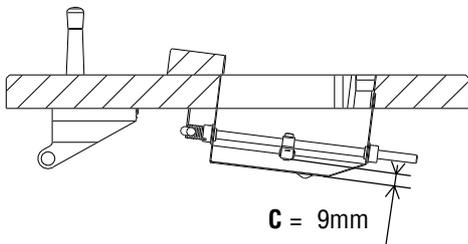


D

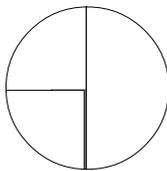


4.3 Assembly of a table top on a stand frame, assembly of oil tank

- Turn the table top around and screw it down to the frame by means of screw $\varnothing 8 \times 35$ mm.
- When applying a frame different from that recommended by the producer, be sure to adapt its position so as to ensure the stability of the machine head in its tilted state.
- Oil tank (1) with assembled lever (2) insert through the bottom part into the cut hole in the table top and put down as shown in detail (D) in that way, that the edge of the tank would fit in with the edge of the cut hole in the table top. Set the height of the tank according to the section A-A. Tank may not protrude out of upper surface of a table top. Nail down the tank with nails $\varnothing 2 \times 40$ mm.
- Adjust the lever (2) to the dimensions "B" and "C".
- Insert rubber inlays (3) into the groove in a table top.

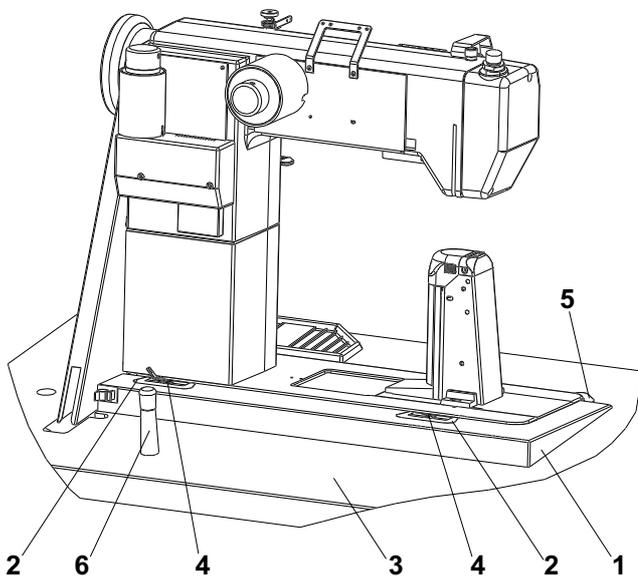


4.4 Assembly of machine head onto a stand

- Stick down rubber inlays (2) with glue into the groove in a wedge (1) and put the wedge down on the table top (3).
- Disassemble transported tank (cover) from the machine head and assemble hangers (4) on the head.
- Put the head down into the rubber inlays (2) and (5).
- Define space along circumference of basic machine plate. 2 mm forwards, 1 mm backwards (head will later move forward because of its own weight), along sides 1,5 mm up to 2 mm.
- Conforming with holes in a wedge (1) and in hangers (4) drill holes through the table top $\varnothing 3,5$ in length approx. 30 mm in the table top.
- Screw the wedge down to the table top with screws $\varnothing 5 \times 30$ mm.
- Screw the hangers down to the table top with screws $\varnothing 5 \times 40$ mm. Tighten the screws so that oscillating of the head on rubber inlays would not be reduced.
- Insert supporting pin (6).

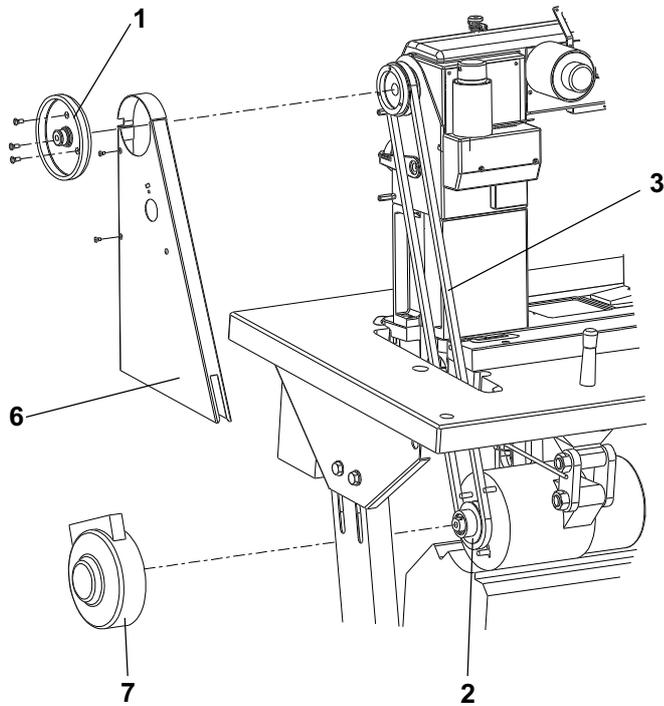


4.5 Assembly of motor pulley, belt, belt covers, hand wheel


- Disassemble hand wheel (1).
- Assemble motor pulley (2).
- Insert V-belt (3) and tighten it by leaning out of the motor. V-belt is tightened correctly when the opposite sides of belt are approaching to each other in distance of about 20 mm with power 10 having an effect in the middle of both sides. Stop motor should be leveled so that the bottom surface of its control panel would be horizontal.
- Adjust the stop (4) by bigger pulleys against falling the belt out of the pulley so that the distance from the belt will be 2-3 mm. Adjust pins by smaller pulleys (5) according to the detail (D).
- Assemble the bottom cover belt (7) on to the motor.
- Assemble upper cover belt (6) and hand wheel (1) by clutch lever motor.
- Assemble upper cover belt (6), hand wheel (1) and position reader by stop motor but only after electrical connection of the head to the stopmotor (see par. 4.7).

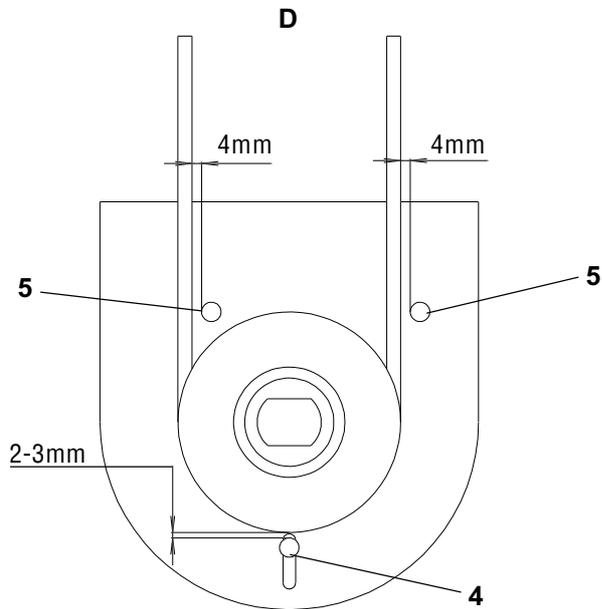


4.6 Assembly of treadle rod, setting rod and of position reader, knee lever

- Insert treadle rod (1) on pins.
- Adjust approx. length of rod by means of screw (2). If the ends of rod are too long, shorten them.
- Install the pin into the hole (3) by stopmotor EFKA. Adjust the lever (4) so that it would be approx. square angle at a rod (1) - take off the ring (5), loosen the screw (6), take of the lever (4) and assemble it into desirable position.

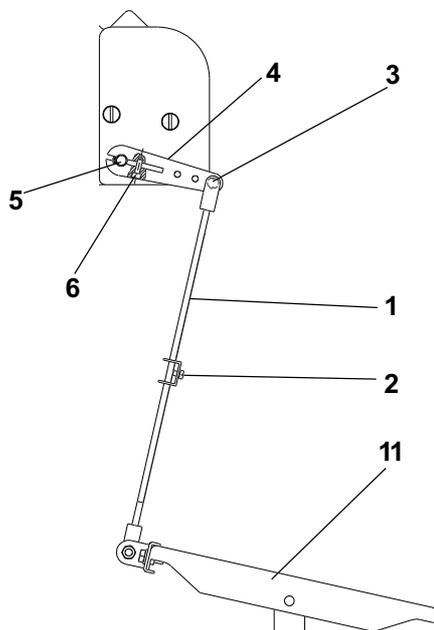

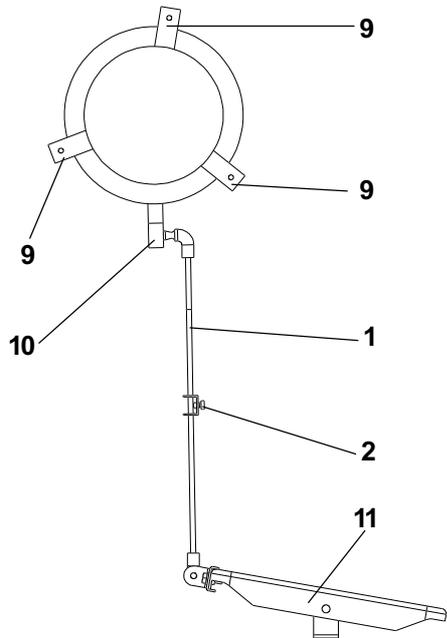

- Loosen the screws (9) by clutch lever motor and turn the motor with lever in such a way that the lever (10) would be in direction of the rod axis (1).
- Adjust angular turning of treadle (11). The position of treadle is correctly adjusted if there is a square angle at the shin-bone of the operator to the treadle.

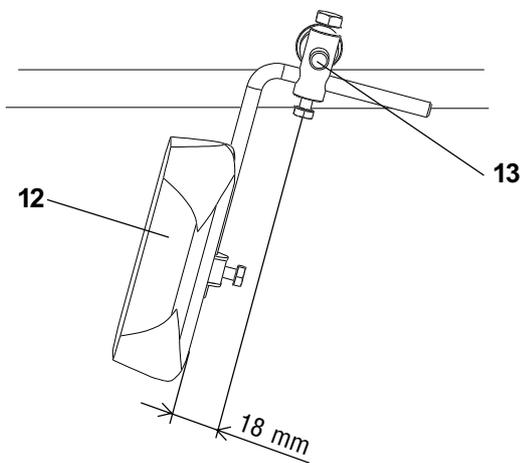

- Fasten knee lever (12) onto the shaft (13) and adjust it in a position that it is shown in the picture (slightly leant out).

4.7 Electrical connection of machine head to the stopmotor

4.7.1 Connecting cable

Together with the machine head there is supplied a connecting cable for the following drives:

EFKA DC 1600/DA82GA 3311 and higher

EFKA VD 552/6F82FA 2315 and higher

EFKA VD 554/6F82FA

When there is no drive specified, a cable without any connecting power plug is supplied (mind the caution 2.3).

For the information sake, there are given the respective circuit layout.


The colours are indicated with numbers in brackets (6 – green, 7 – blue, 8 – pink, 9 – black, 10 – white, 11 – violet, 12 – yellow, 13 – red, 14 – grey, 15 – brown). Included insulating covers PVC (5) are put on the bunches and they are put together with remaining part of cable insulation by means of contracted tube (4) (it is heated up with fire of lighter).



Power connecting cable is marked off with dotted line in circuit layout.

Stopmotor S359 600045 XXX - EFKA DC 1600/DA82GA

Stopmotor S359 600052 XX - EFKA VD 552/6F82FA


Stopmotor S359 600056 XX - EFKA VD 554/6F82FA

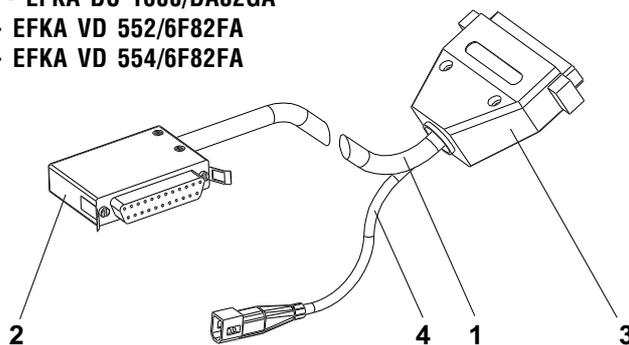

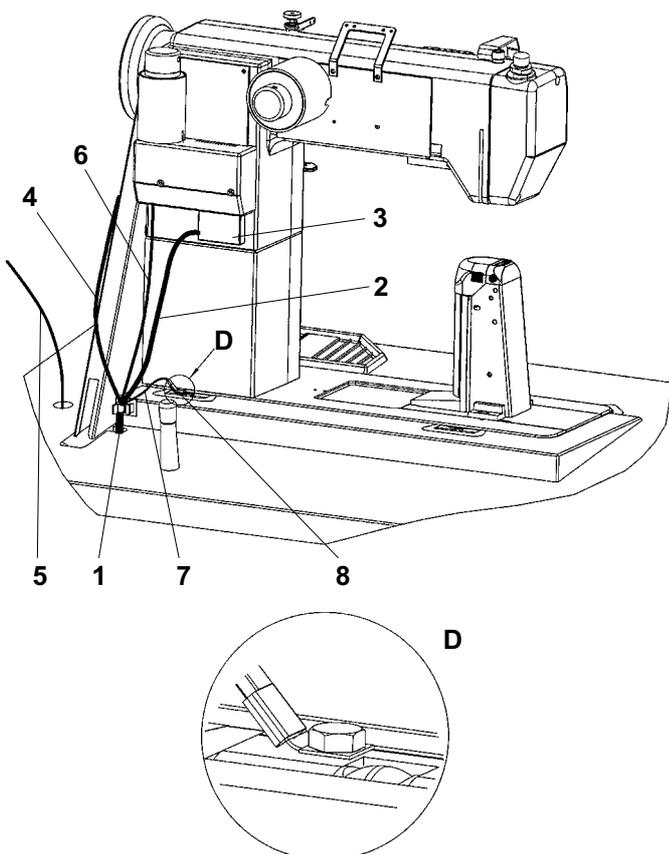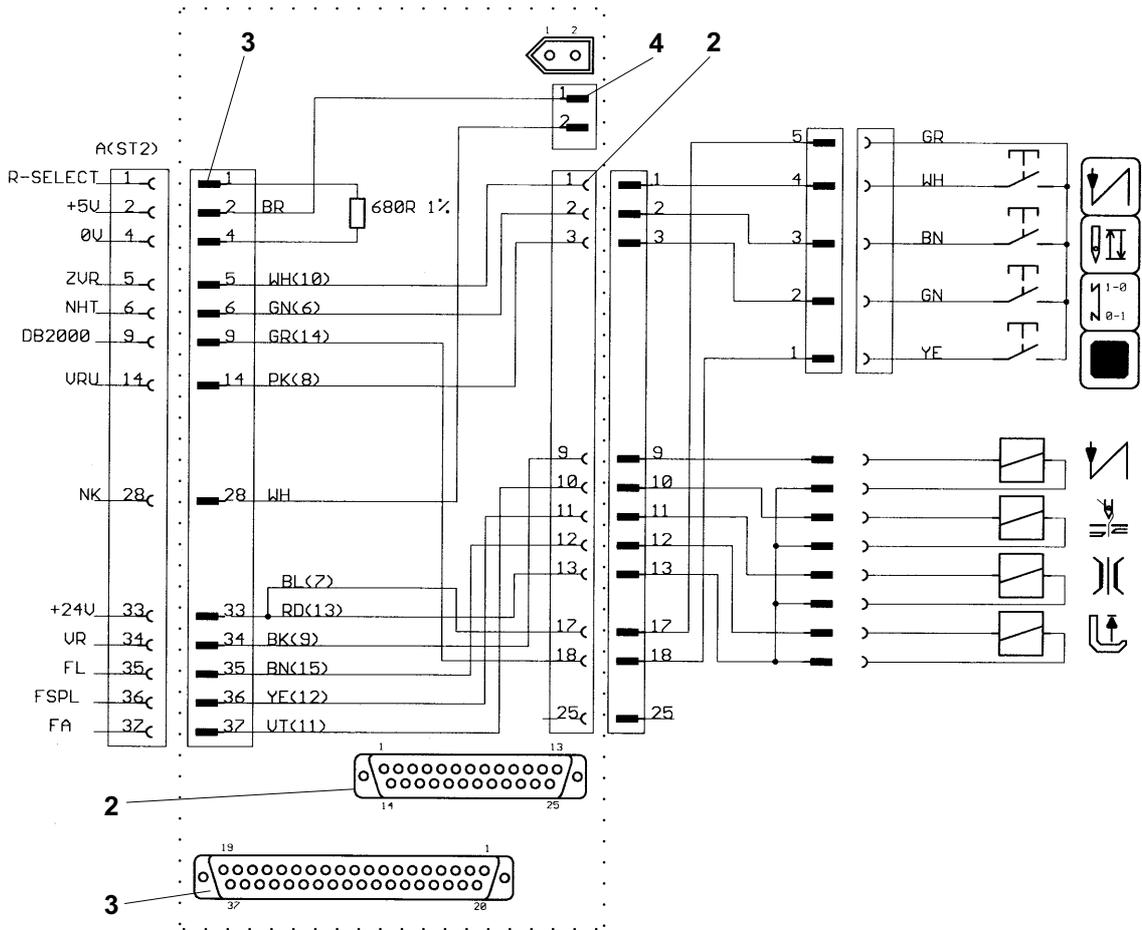


4.7.2 The actual electrical connection

- Stick the clip (1) on wedge (defat the contact surface!).
- Install the power supply cable (2) so that connector (3) is in the direction of a head. The other connector (connectors) is (are) connected into terminal box rack of the stop motor according to the pictographs that are situated on it.
- Install the cable of control panel (4) and connect it to the terminal box of stop the motor according to the pictographs.
- Pass the cable of position reader through (5) and connect it to the terminal box of the stopmotor according to the pictographs.
- Install lighting if available and connect its cable (6) to the cable of transformer.
- Install the earthing cable (7) one end to the hanger (8) and second end to the holder of stopmotor.

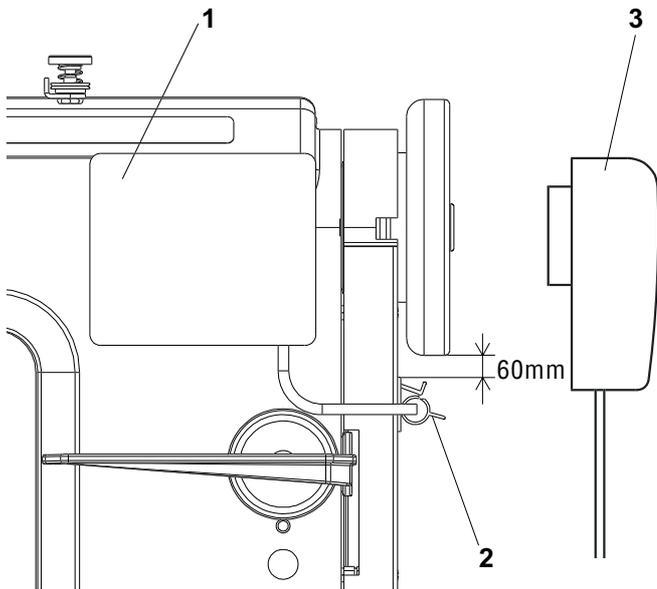


4.7.3 Fastening upper cover belt, position reader, control panel of stopmotor and thread stand

- Screw the stop to the belt guard.
- Assemble upper cover belt and hand wheel according to par.4.5.
- Set the position reader (3) on the handwheel pin so as to match the stop groove of the position reader with the stop (thus immobilizing the position reader).
- Fix the position reader by retightening the two hexagonal screws.
- Fix the control panel of stopmotor:
- Stick the panel V 810 (1) by stopmotor EFKA on the machine head (if any). Defat the contact surface properly. Stick the clip (2) on the cover belt.

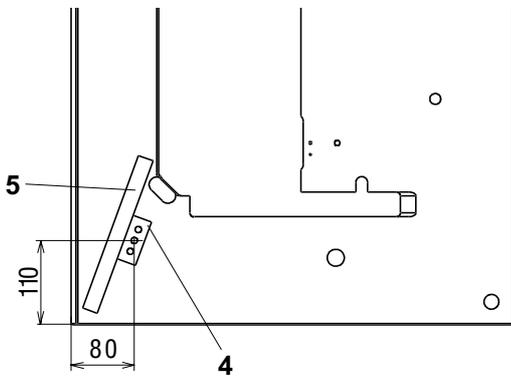


- With the Efka stopmotor, mount the holder (4) on the panel V820 (5) (if any) using screw and screw on the holder with the panel to the stand table.

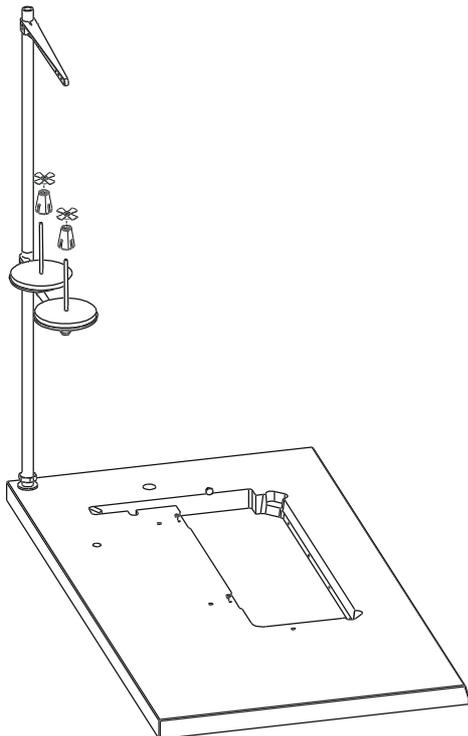

- Assemble the thread stand so that its arms would be parallel to the longer edge of a table top.

Wiring diagram of work trimmer and its supply

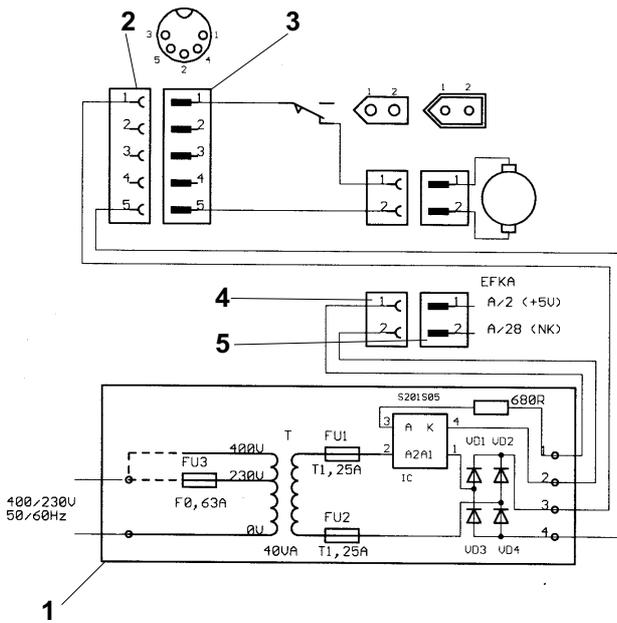


4.8 Wiring of the work trimmer

4.8.1 For machines having the Efka stopmotor

- Remove the cover of the work trimmer power supply (1).
- Check the connection of the power supply cable with the primary winding of the transformer and adapt it, if needed, as specified in par. 4.2. Mount the cover.
- Pass the connector (2) through the hole for the V-belt in the table top, fix the cable from the rear side to the machine head by the attached self-seal clip (be sure to degrease the seal area first).
- Connect the connector (2) to the plug situated under the motor of the work cutter.
- Check the sense of rotation of the work cutter shaft whose end fitted with a notch can be seen through the hole in the work cutter cover. The shaft must rotate clockwise. If this is not the case, reverse the polarity of the outputs 3 and 4 in the feeder (1).
- Connect the connector (4) into the connector (5) on the connecting cable.

Wiring diagram of work trimmer and its supply

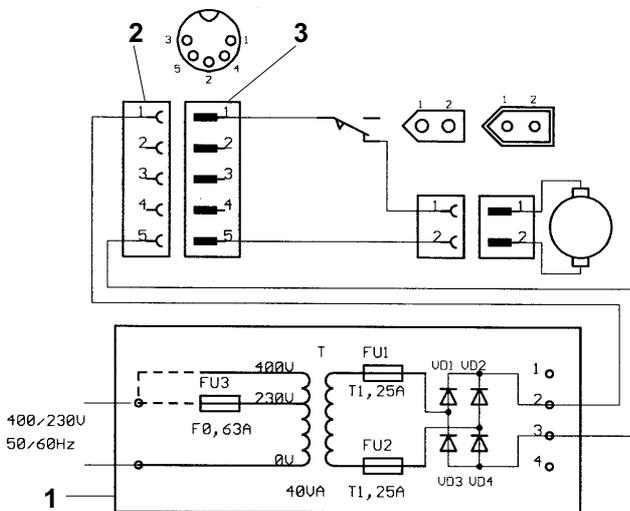

4.8.2 For machine having the clutch motor

- Remove the cover of the work trimmer power supply (1).
- Check the connection of the power supply cable with the primary winding of the transformer and adapt it, if needed, as specified in par. 4.2. Mount the cover.
- Pass the connector (2) through the hole for the V-belt in the table top, fix the cable from the rear side to the machine head by the attached self-seal clip (be sure to degrease the seal area first).
- Connect the connector (2) to the plug situated under the motor of the work cutter.
- Check the sense of rotation of the work cutter shaft whose end fitted with a notch can be seen through the hole in the work cutter cover. The shaft must rotate clockwise. If this is not the case, reverse the polarity of the outputs 2 and 3 in the feeder (1).

5. Basic setting of stopmotor and position reader

5.1 Generally

The procedure of setting parameters of the stopmotor S359 600045 XXX - EFKA DC 1600/DA82GA on the level of the operator is described in the first part of the Instruction manual - par. 7.2.1.2 (V810); par. 7.2.2.2 (V820).

A correct function of the sewing machine with drive is attained when changing some parameters of the drive, which are inaccessible for the attendance of the machine. Hereinafter there is a description of the possible procedures of changing all parameters.

Procedure of changing parameters of the drive Efka S359 600045 810 - DC 1600/DA82GA; S359 600052 XX - VD 552/6F82FA and S359 600056 XX - VD 554/6F82FA (panel V 810)

- depress the pushbutton **P** on panel and switch on thereafter the main switch
- on the display there will appear **C 0000**, the 1st digit flashes
- using pushbutton **+** - set the 1st digit on the value **3**
- depress the pushbutton **>>**, the 2nd digit flashes
- in the same way set the remaining digits in the way to get displayed on the display **C 3112** (the number of the code for the possibility of changing all parameters of the drive)
- depress the pushbutton **E**, on the display will appear **F 200** (parameter number **200**)
- using pushbuttons **>>**, **+**, **-** set the required parameter number and depress the button **E**
- using pushbuttons **+**, **-** set the required parameter value
- depress the pushbutton **E** (a parameter number following in the sequence will appear) or **P** (the same parameter number will appear)
- carry out the termination of changes in depressing the pushbutton **P** (return to the respective sewing mode)

You will find a detailed information in the original directions for use of the drive.

Note: To get the change of parameters permanently stored, it is necessary, after having changed the parameter, to depress the pedal in forward direction.

Procedure of changing parameters of the drive Efka S359 600045 820 - DC 1600/DA82GA; S359 600052 XX - VD 552/6F82FA and S359 600056 XX - VD 554/6F82FA (panel V 820)

- depress the pushbutton **P** on panel and switch on thereafter the main switch
- on the display there will appear **C 0000**, the 1st digit flashes
- using pushbutton **0 ÷ 9** set **C 3112** on the display (code number for possible changing of all drive parameters)
- depress the pushbutton **E**, on the display will appear **F 200** (parameter number **200**)
- using pushbutton **0 ÷ 9**, set the required parameter number and depress the pushbutton **E**
- using pushbutton **+**, **-**, set the required parameter value
- depress the pushbutton **E** (there will appear further parameter number in the given sequence) or **P** (return to the given sewing mode)
- the termination of changes is to be done in depressing the pushbutton **P** (return to the sewing mode)

A detailed information is in the original directions for use of the drive.

Note.: To get the change of parameters permanently stored, it is necessary, after having changed the parameter, to depress the pedal in forward direction.

5.2 Stopmotor setting S359 600045 XXX - EFKA DC 1600/DA 82 GA 3312

5.2.1 Setting position reader


- set parameter **170**, **Sr1** is shown on the display (reference position)
- depress pushbutton **>>**, **PoS 0** appears on the display and changing symbol of rotation
- turn the hand wheel until symbol of rotation disappears
- turn the hand wheel to angular value **105°** of hand wheel (thread tip is approx. in the level of throat plate)
- depress pushbutton **E**, changeover to parameter **171**
- set parameter **171**, **Sr2** is shown on the display (all positions)
- depress pushbutton **>>**
- **1 XXX** is shown on the display (value of first position of needle)
- turn the hand wheel until value **XXX** begins changing
- turn the hand wheel to the angular value of first position (**135°** on the hand wheel respective **30** on the panel)
- depress pushbutton **E**
- **2 XXX** is shown on the display (value of upper position of take-up lever)
- turn the hand wheel until value **XXX** begins changing
- turn the hand wheel to the angular value of upper position (**65°** on the hand wheel respective **450** on the panel)
- depress pushbutton **P** 2x (return to the sewing mode)
- step shortly treadle down forwards (entry to the memory)

5.2.2 Changes of setting parameters of stopmotor setting considering original producer setting

| Parameter No | Parameter value | |
|--------------|-----------------|--|
| 111 | - | Max. revolutions (according to a type of machine) |
| 116 | 180 | Trimming revolutions |
| 170 | - | Reference position |
| 171 | 30 | First position of needle |
| 183 | 500 | Switching off delay of the trimming device after having ended the sewing operation |
| 192 | 340 | Delay angle of tensioner switch on |
| 202 | 120 | Delay of start run after switch off the signal foot |
| 225 | 3 | Type of the machine |

5.3 Setting stopmotor S359 600052 XX-EFKA VD 552/6F82FA and S359 600056 XX-EFKA VD 554/6F82FA

5.3.1 Setting position reader

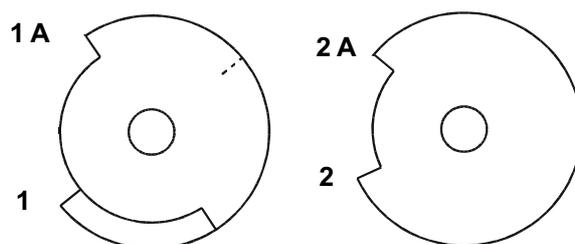

Positions are set by means of discs with cut outs directly in position reader.

Setting bottom position:

- Disassemble the cover of position reader
- Disconnect head power supply cable from drive
- Switch on the power supply switch
- Step treadle shortly down forwards (machine stops in first position of needle)
- Switch off the power supply switch
- Turn the beginning of cut out **1** of coinciding discs so that machine would stop at the value **135°** of the hand wheel
- Carry out check by repeating procedure

Setting upper position of thread lever:

- Step treadle down backwards (machine stops in upper position of needle)
- Switch off the power supply switch
- Turn the beginning of cut out **2** of separate disc so that machine would stop at the value **65°** of the hand wheel
- Carry out check by repeating procedure

5.3.2 Changes in parameters of stopmotor setting considering original producer setting

| Parameter No | Parameter value | |
|--------------|-----------------|--|
| 111 | | Max. revolutions (according to a type of machine) |
| 116 | 180 | Trimming revolutions |
| 136 | ON | Stitch by thread trimmer (back) |
| 183 | 500 | Switching off delay of the trimming device after having ended the sewing operation |
| 192 | 86 | Delay angle of tensioner switch on |
| 202 | 120 | Delay of start run after switch off the signal foot |








6. Examination of sewing



Caution! Risk of injury!

Before threading a thread switch the main switch off and wait until the motor stops.

- Check the sense of turning the hand wheel – according to the arrow situated on it.
- Thread a thread.
- Choose sewing material.
- Switch the desirable function on the control panel of stopmotor. Examination should be carried out with selection of fancy bar.
- First sew slowly then speed up the sewing.
- If the stitch does not meet requirements, follow the first part of instructions manual or service book.

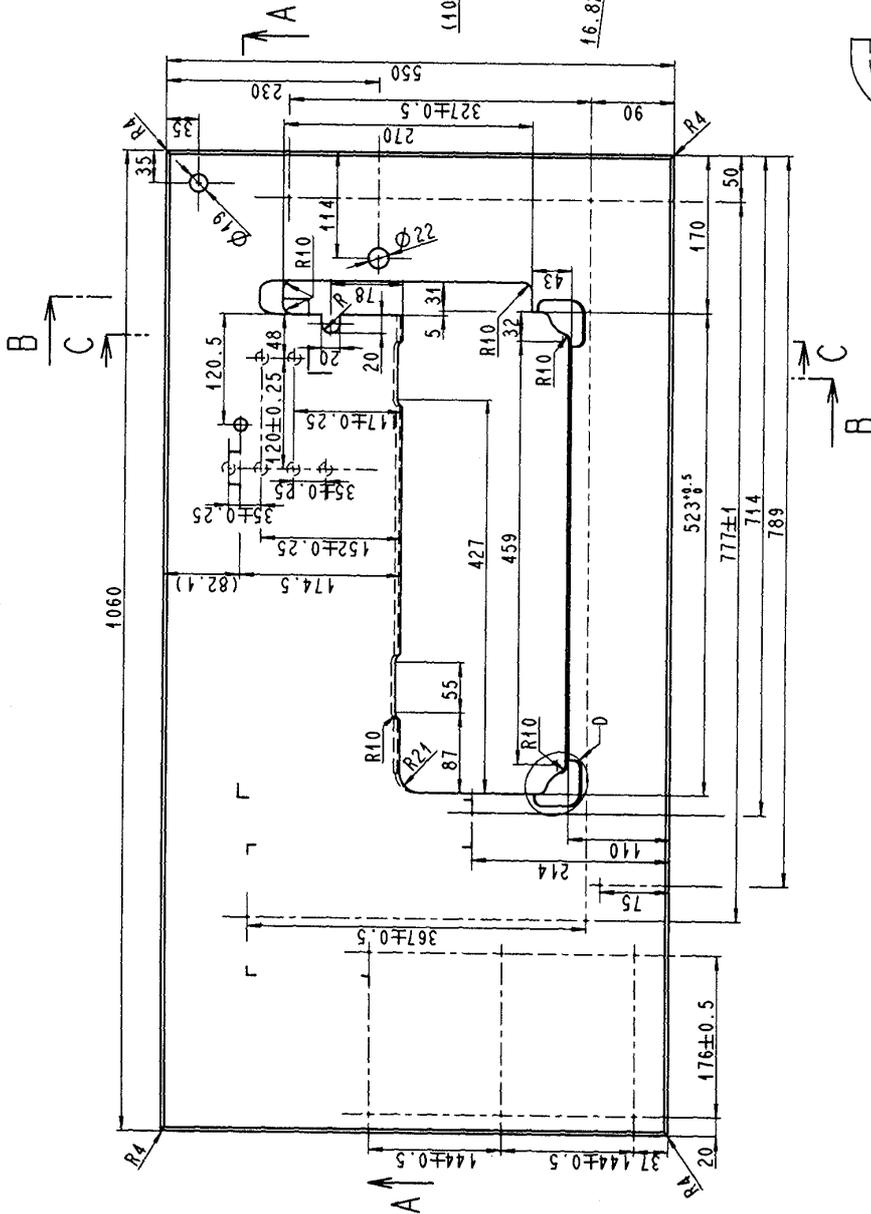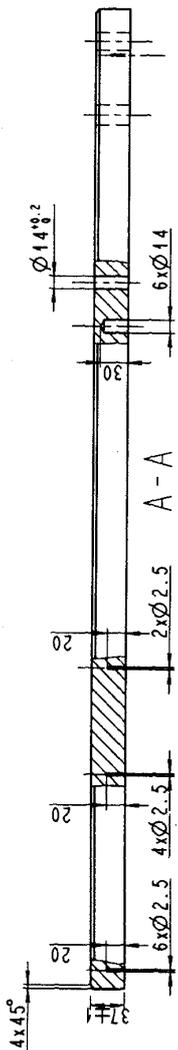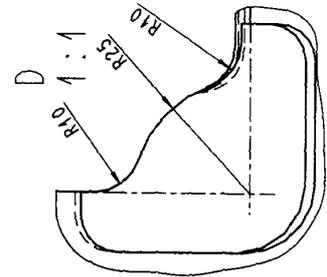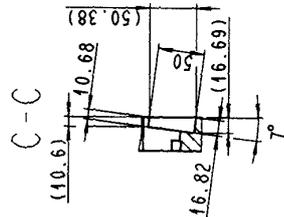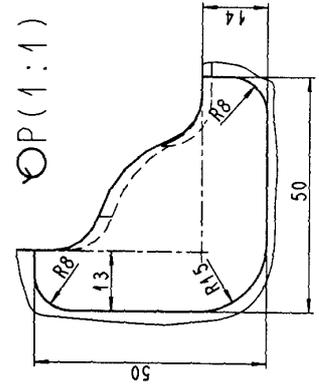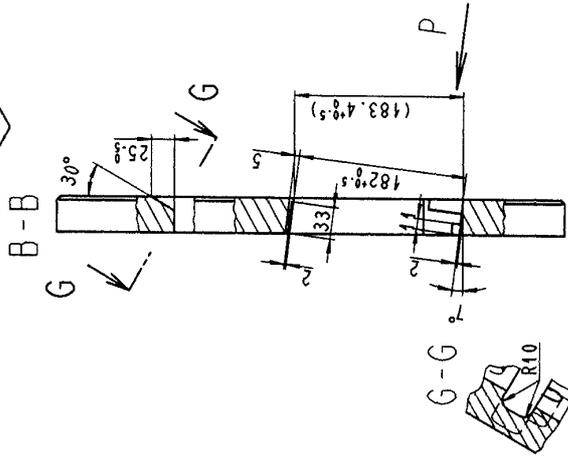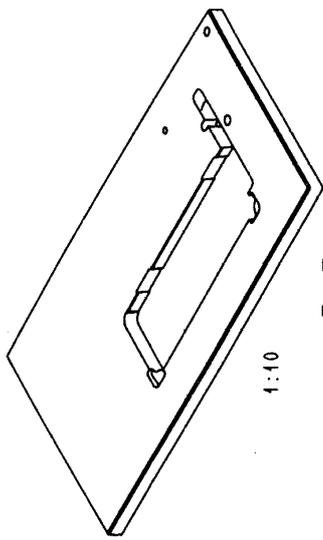

CONTENTS:

| | |
|---|----|
| 1. General safety instructions | 1 |
| 2. Introduction | 1 |
| 3. Head of the sewing machine | 2 |
| 3.1 Hook and hook post | 2 |
| 3.1.1 Description | |
| 3.1.2 Height setting of the hook | |
| 3.1.3 Setting the distance of the hook from the needle | |
| 3.1.4 Angular setting of the hook (timing) | |
| 3.1.5 Protection of the needle and of the hook point | |
| 3.1.6 Setting of the bobbin case opener | |
| 3.1.7 Setting the regulation of the hook lubrication | |
| 3.1.8 Replacement of the hook | |
| 3.1.9 Setting the gear | |
| 3.1.10 Dismantling of the hook post | |
| 3.2 Needle and thread mechanism | 5 |
| 3.2.1 Description | |
| 3.2.2 To check the handwheel angular adjustment | |
| 3.2.3 Height setting of the needle bar | |
| 3.2.4 Side setting of the needle bar holder | |
| 3.2.5 Setting the needle (the needle bar holder) in the direction of sewing | |
| 3.3 Throat plate and its post | 7 |
| 3.3.1 Description | |
| 3.3.2 Mounting and removing the throat plate and its insert | |
| 3.3.3 Side setting of the throat plate post | |
| 3.4 Thread tensioners and limiter | 8 |
| 3.4.1 Description | |
| 3.4.2 Setting the tension of main and auxiliary tensioners | |
| 3.4.3 Setting the tensioning mechanisms of the main tensioners | |
| 3.4.4 Setting the adapting spring | |
| 3.4.5 Setting the thread limiter | |
| 3.4.6 Setting the additional thread limiter | |
| 3.5 Feeding mechanism of the needle feed and of the lower feed wheel | 10 |
| 3.5.1 Description | |
| 3.5.2 <u>Stitch length mechanism</u> | |
| 3.5.2.1 Setting the upper eccentric | |
| 3.5.2.2 Setting the prop | |
| 3.5.2.3 a Forward and rearward stitch length distribution (rough) | |
| 3.5.2.3 b Forward and rearward stitch length distribution (fine) | |
| 3.5.2.4 Setting of the control knob (including the stitch length limitation) | |
| 3.5.3 <u>Lower feed wheel</u> | |
| 3.5.3.1 Feeding clutches | |
| 3.5.3.1.1 Description | |
| 3.5.3.1.2 Setting the lever of the second step of feeding(angle, position) | |
| 3.5.3.1.3 Setting of the lower eccentric | |
| 3.5.3.1.4 Setting the engagement and disengagement of the clutches | |
| 3.5.3.2 Wheel feeder and its post | |
| 3.5.3.2.1 Height setting of the feeder and tensioning of the chain | |
| 3.5.3.2.2 Replacement of the feeder | |
| 3.5.4 <u>Setting the top roller (pressing force, height)</u> | |
| 3.6 Feeding mechanism of the top roller | 15 |
| 3.6.1 Description | |
| 3.6.2 Side setting of the indented lower pulley | |
| 3.6.3 Side setting of the indented upper pulley | |
| 3.6.4 Setting the tensioning roller | |
| 3.6.5 Replacement of the indented belt | |
| 3.6.6 <u>Top roller</u> | |
| 3.6.6.1 Selection of the top roller diameter | |
| 3.6.6.2 Forward, rearward and side setting | |
| 3.6.6.3 Setting the gear clearance and in the mounting of the top roller | |
| 3.6.6.4 Replacement of the top roller | |

| | | |
|-------------|--|----|
| 3.7 | Setting the presser foot lift | 19 |
| 3.8 | Bobbin winder | 20 |
| | 3.8.1 Description | |
| | 3.8.2 Setting the bobbin winder stop | |
| | 3.8.3 Setting the friction gear | |
| 3.9 | Safety clutch | 21 |
| | 3.9.1 Description | |
| | 3.9.2 Setting the disengaging moment | |
| 3.10 | Indented belt transmission | 21 |
| | 3.10.1 Setting the tensioning roller of the indented belt | |
| | 3.10.2 Replacing the indented belt | |
| 3.11 | V-belt, motor - head | 22 |
| | 3.11.1 Tensioning | |
| | 3.11.2 Replacing the V-Belt | |
| 3.12 | Driving toothed belt | 22 |
| | 3.12.1 To exchange the driving toothed belt | |
| 3.13 | Lubrication | 23 |
| | 3.13.1 Description | |
| | 3.13.2 Refilling oil | |
| | 3.13.3 Multiple oil use | |
| 4. | Thread trimming | 24 |
| | 4.1 Description of the trimming mechanism | |
| | 4.2 Setting the pickup roller | |
| | 4.3 Setting the cam | |
| | 4.4 Setting the fork | |
| | 4.5 Setting the moving knife | |
| | 4.6 Setting the height of the fixed knife and of the retaining spring of the lower thread | |
| | 4.7 Setting the fixed knife | |
| | 4.8 Setting the retaining spring of the hook thread | |
| | 4.9 Setting switching of the electromagnets | |
| 5. | Material trimming | 27 |
| | 5.1 Setting of the eccentrics (basic) for the knives „A“ and „C“ | |
| | 5.2 Setting of the eccentrics for the knife „B“ | |
| | 5.3 Setting of the stop screw | |
| | 5.4 Setting of the knife position in the direction of sewing | |
| | 5.5 Setting of the knife side position (against the cutting edge of the throat plate insert) | |
| | 5.5.1 Setting of the lateral knife position to the sides | |
| | 5.5.2 Setting of the knife angle with regard to the throat plate insert (crossing) | |
| | 5.6 Setting of the microswitch of trimming device motor switching-on | |
| | 5.7 Sharpening of knives | |
| | 5.7.1 Hand sharpening (stoning) of the knives | |
| | 5.7.2 Machine sharpening of the knives | |
| 6. | Lifting the top roller by electromagnet | 30 |
| | 6.1 Description | |
| | 6.2 Setting the electromagnet pin | |
| | 6.3 Setting the electromagnet current | |
| | 6.4 Assembly of the top roller lifting electromagnet | |
| 7. | Backtacking using electromagnet | 31 |
| | 7.1 Description | |
| | 7.2 Electromagnet height setting | |
| | 7.3 Setting the position of push-buttons | |
| | 7.4 Change of the function of push-buttons | |
| 8. | Connecting the electric elements on the machine head | 32 |
| 9. | Drive, control panel, position sensor | 32 |
| 10. | Maintenance (table of operations) | 33 |
| 11. | Setting the machine according to the sewing category | 33 |
| | 11.1 Introduction | |
| | 11.2 Table of setting the machine according to the sewing category | |

1. General safety instructions

The non-observance of the following safety instructions can cause bodily injuries or damages to the machine.

1. The machine must only be commissioned in full knowledge of the instruction book and operated by persons with appropriate training.
2. Before putting into service also read the safety rules and instructions of the motor supplier.
3. The machine must be used only for the purpose intended. Use of the machine without the safety devices is not permitted. Observe all the relevant safety regulations.
4. When gauge parts are exchanged (e.g. needle, top roller, needle plate, feed dog and bobbin) when treading, when the workplace is left, and during service work, the machine must be disconnected from the mains by switching off the master switch or disconnecting the mains plug.
5. Daily servicing work must be carried out only by appropriately trained persons.
6. Repairs, conversion and special maintenance work must only be carried out by technicians or persons with appropriate training.
7. For service or repair work on pneumatic systems the machine must be disconnected from the compressed air supply system. Exceptions to this are only adjustments and function checks made by appropriately trained technicians.
8. Work on the electrical equipment must be carried out only by electricians or appropriately trained persons.
9. Work on parts and systems under electric current is not permitted, except as specified in regulations DIN VDE 0105.
10. Conversions or changes to the machine must be authorized by us and made only in adherence to all safety regulations.
11. For repairs, only replacement parts approved by us must be used.
12. Commissioning of the sewing head is prohibited until such time as the entire sewing unit is found to comply with EC directives.



It is absolutely necessary to respect the safety instructions marked by these signs.
Danger of bodily injuries !
Please note also the general safety instructions.

IMPORTANT WARNING

In spite of all safety measures made on the machines, inappropriate actions of the operator may lead to dangerous situations. In industrial sewing machines, attention should be paid to the following still remaining possible sources of injury:

1. Moving sewing needle
 - risk of injury when sewing with raised pressure foot or top roller, because the finger guard is then positioned too high,
 - risk of injury when inadvertently threading down of the motor treadle.
2. Moving thread take-up lever
 - risk of injury when inadvertently or intentionally inserting the finger(s) between the thread take-up lever and its guard.
3. Moving pressure member
 - risk of injury when holding sewn work in immediate vicinity of the pressure member and beginning to insert under the pressure member a considerably thicker sewn work portion,
 - risk of injury when sinking the pressure member.
4. Moving and also uncovered non-moving trimming knife
 - danger of accident when holding and guiding the sewn parts when sewing
 - danger of accident when handling the sewn parts even with the switched off trimming mechanism, without having switched off the main switch
5. When switched off, the clutch motor slows down by inertia but would be reactivated by an accidental treading down of the motor treadle. To avoid such risk, it is advised to hold the handwheel by hand and slightly to depress the motor treadle.

2. Introduction

This service book contains instruction for regulating the mechanisms of the sewing machine head.

The instructions for use and for putting the machine into operation and for the control of the stopmotor are not included in this service book, but they are supplied as separate publications.

This service book is universal for all subclasses of the machine - it contains setting procedures for all elements which may be placed on the machine of the given class. When the supplied subclass of this machine does not include some element, then it is possible to leave out the respective parts of the instructions. The optional equipments of the machine and the respective configurations of the subclasses of the machine are given in the operating instructions.

This sewing machine disposes of a large extent of its use. The machine should be set with respect to the parameters of the sewn material, the sewing thread etc. The setting for the individual categories is given in the chapter 11.2.

For setting the machine, simple setting aids are used which are included in the accessory of the machine. Besides these aids, universal measuring devices are used, such as slide calliper, feeler gauges and dynamometer for measuring the thread tension.

3. Head of the sewing machine

3.1 Hook and the hook post

3.1.1 Description

The hook (1) is mounted on the shaft (2) and is driven by the gear (3) from the shaft (4).



The shaft of the hook (2) is mounted on the top in a sliding bearing and, on the bottom, in a needle bearing.

The hook is provided with a lever (6) which is tilted when removing the bobbin (7). The protecting sheet (8) protects against the collision of the needle with the hook point. The bobbin case opener (9) is driven by the eccentric (10) on the shaft (2).

The lubricating tube (11), on which a lubricating wick is fastened in the tube (12), feeds oil for lubricating the sliding bearing (5) of the eccentric (10) and the hook path.

The screws (13) serve for taking up the clearance of the gear. The screws (14) fasten the post to the bedplate.

The lubricating felt (15) is connected by the wick (16) with the lubricating system and serves for lubricating the gear (3).

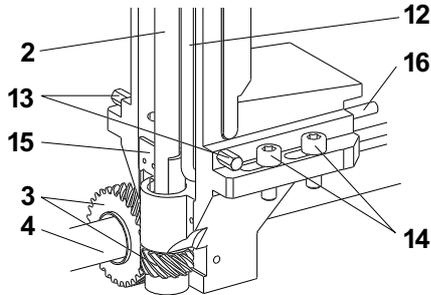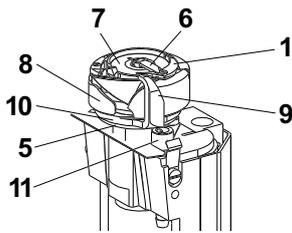

3.1.2 Height setting of the hook

The designated distance „A“ should be 5.3 mm.



Caution! Danger of injury!

Switch off the main switch ! Before starting the setting operation, wait until the motor stops!

- Loosen both screws (2).
- By turning the screws (3 and 4), set the required distance „A“. For setting up use the setting gauge (7) as per the repective figure. After having set it, tighten carefully the screws.
- By axial shifting of the gear wheel (5), set the axial clearance in such a way that this clearance is the least possible, but sufficient for turning easily the hook.
- Tighten carefully the screws (2). Caution ! One of these screws must bear on the flat of the shaft (6).

3.1.3 Setting the distance of the hook from the needle





The hook point (1) is set up to the maximum distance of 0.1 mm from the bottom of the needle recess (2). For the sewing categories 1 and 2, the needle size 100 is set, for the sewing category 3, the needle size 140 is set.




Caution! Danger of injury!

Switch off the main switch ! Before starting the setting operation, wait until the motor stops!

- Shift the plate (3).
- Loosen only one screw (4).
- Loosen the screws (5) and tighten them only slightly.
- Shift the hook post (6) at the determined distance between the needle and the hook point.
- Tighten carefully the screw (4) (be sure not to damage the threads!)
- Tighten duly the screws (5).
- Check up the setting using a narrow strip of thin paper and proceed to the eventual correction of setting.

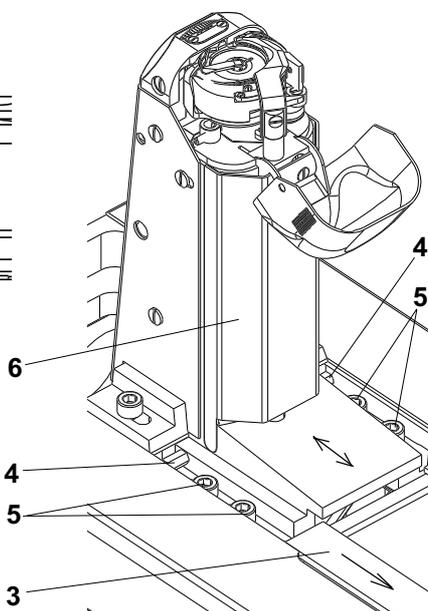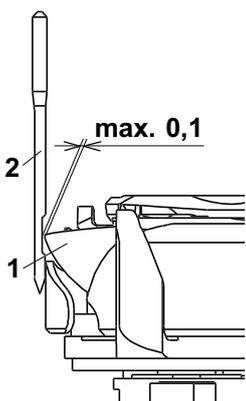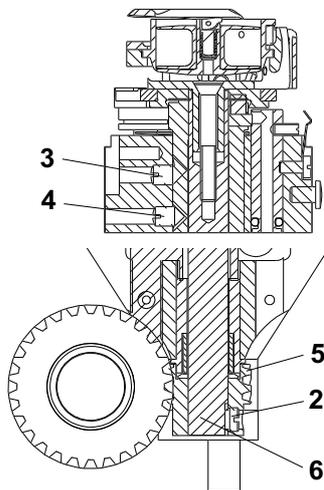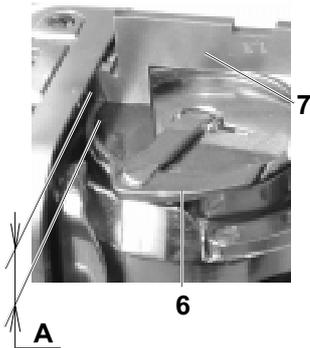

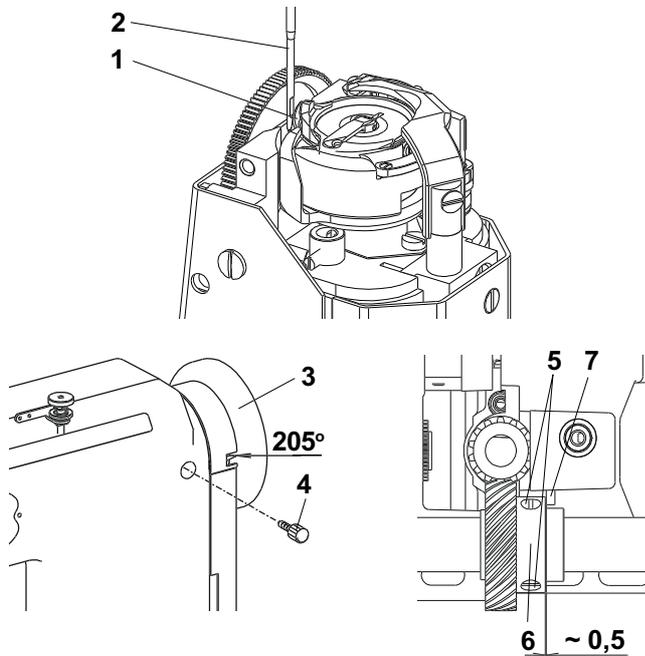

3.1.4 Angular setting of the hook (timing)


The hook is to be angularly set in such a way that the hook point (1) is opposite the needle at the moment, when the needle shifts by 2.5 mm from its bottom dead center. This corresponds to the 205° on the scale of the handwheel (3).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the throat plate.
- Turn the handwheel (3) to the 205° and fix it with the screw (4) which is component part of the accessory of the machine (tighten it carefully).
- Loosen the screws (5).
- Turn the hook into the required position.
- Set up the distance of about 0,5 mm between the gear wheel (6) and the pin (7).
- Tighten to the maximum the screws (5).

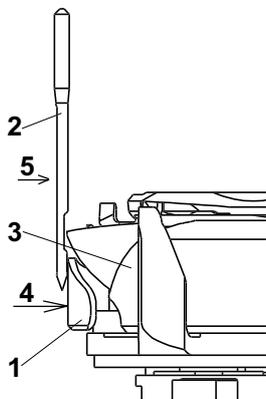

3.1.5 Protection of the needle and of the hook point


The protecting sheet (1) is to be set up in such a way that the clearance between the protecting sheet and the needle (2) is the least possible.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the throat plate.
- In deforming the protective sheet (1) set the required play between the sheet and the needle (2). After having introduced a suitable screwdriver between the protective sheet and the hook body (3) we shall reduce the play by levering, in applying the pressure on the protective sheet in the sense of the arrow (4), we shall increase the play.
- Check up the protecting effect in pushing against the needle in the sense of the arrow (5). The hook point must not catch the needle. If so, set up the protecting effect, correct eventually the setting of the distance of the hook point from the needle according to the paragraph 3.1.3.

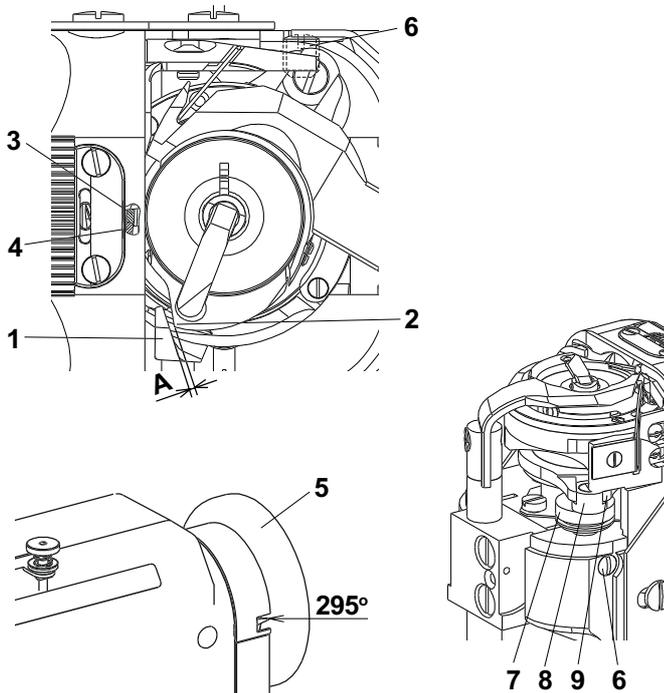

3.1.6 Setting of the bobbin case opener


The bobbin case opener (1) is to be set in such a way that, at the moment when the opener is in its dead centre, there would be a clearance „A“ between the opener (1) and the projection (2), whereas the finger (3) bears on the projection (4), „A“ = 0.7 mm for the sewing category 1 and 2, „A“ = 0.3 mm for the sewing category 3.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the sheet guard of the hook post.
- On the handwheel (5), set the angle of 295° (the hook is in its dead centre).
- Loosen the screw (6).
- Turn the eccentric (7) in such a way that the required clearance between the elements (1) and (2) is attained.
- Set the height of the eccentric (7) in such a way that it is in its highest position in retaining the minimum clearance between the slide (8) and the fork (9).
- Tighten duly the screw (6).

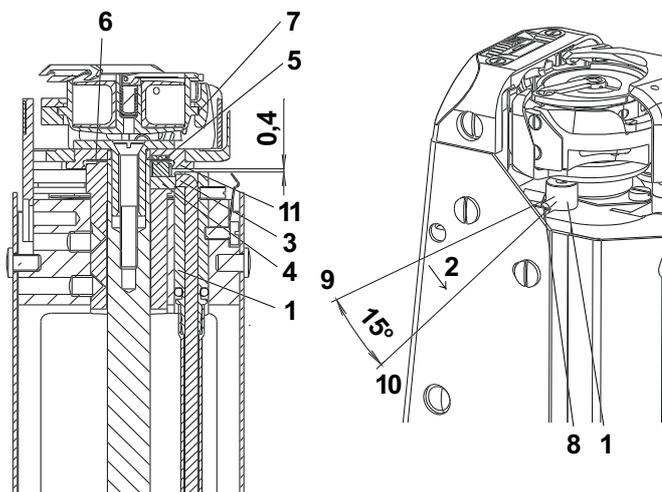

3.1.7 Setting the regulation of the hook lubrication

By turning the lubricating tube (1) in the sense of the arrow (2), the size of the contacting surface between the wick (3) and the felt insert (4) is regulated. In this way, the speed of the capillary lift of oil into the felt insert (5) is influenced, from which oil is wiped on the surface (6) and is driven by centrifugal force into the hook path (7).

Setting of full lubrication

- Turn the screw (8) into the position (9).

Setting of limited lubrication

- Turn the screw (8) into the position (10).

After having ended the regulation, set the height of the lubricating tube (1) at 0.4 mm from the eccentric (11).


3.1.8 Replacement of the hook



Caution! Danger of injury!

Switch off the main switch ! Before starting the setting operation, wait until the motor stops!

- Remove the throat plate and the trimming knife.
- Unscrew the screws (1) and remove the gib (2).
- After having suitably turned a bit the hook, remove the bobbin case (3).
- Unscrew thoroughly the screw (4).
- Remove the body of the hook (5) upwards.
- When mounting, the procedure is inverse.

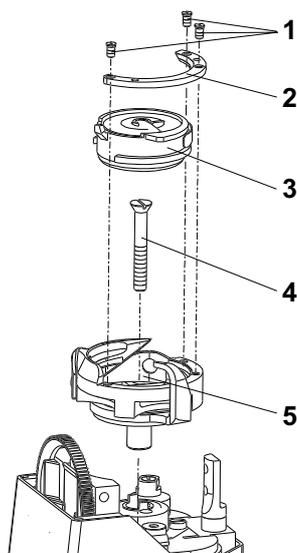

3.1.9 Setting the gear


The mutual angular orientation of the gear wheel (1) relative to the gear wheel (2) should ensure the accessibility of the screw (5) at the moment when the hook point comes to lie opposite the needle (4). The wheel (2) is to be set with its gear rim symmetrically to the centre of the gear wheel (1). The clearance between the gear wheels is to be the least possible.




Caution ! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the angle of 205° on the handwheel (6) and lock it with the screw (7).
- On the removed post of the hook (8), according to the paragraph 3.1.10, the hook point (3) is to be turned a bit according to the illustration.
- Turn the gear wheel (2) into the suitable position and insert the post of the hook into the machine according to the respective arrows. Check up, whether the screw (5) is accessible and, if not, repeat the procedure.
- Set the distance of the hook from the needle according to the paragraph 3.1.3.
- Set the precise angular displacement of the hook according to the paragraph 3.1.4.
- Loosen the screw (10) and tighten them slightly.
- Set the clearance in the gear in turning the screws (9). Check up, whether the gear has a clearance during the whole revolution of the hook. Turn the handwheel step by step by 15° and, with each step, grasp the hook and try, if there is an angular dead travel. Tighten carefully the screws (9).
- Tighten duly the screws (10) and try anew the clearance of the gear.

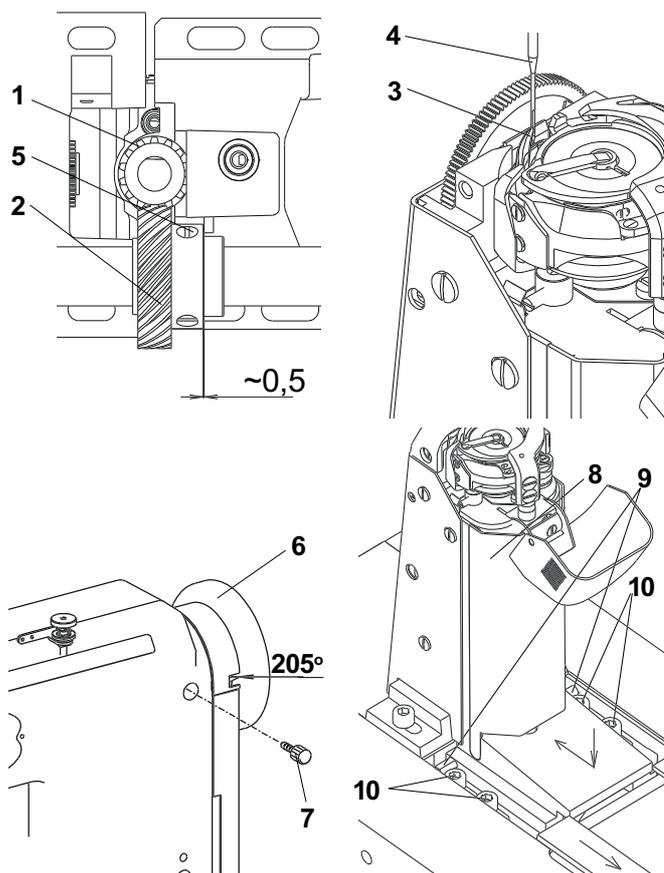

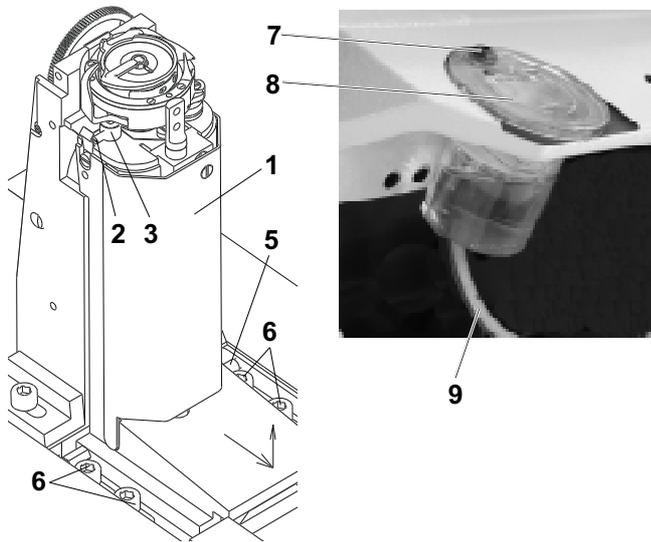

3.1.10 Dismantling of the hook post


When dismantling the post (1), the supplies of lubricating oil are to be disconnected first, the fastening screws unscrewed and, thereafter, the post is removed.



Caution ! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Unscrew the screw (2).
- Push the lubricating tube (3) downwards into the post.
- Unscrew the screw (7) from the oil tank (8) and pull the tank out from the machine.
- Disconnect the hose with the wick (9) from the oil tank (8).
- Loosen only one screw (5).
- Unscrew the screws (6).
- Shift the post in the sense of the arrows and remove it out from the machine.
- When mounting it, proceed inversely.

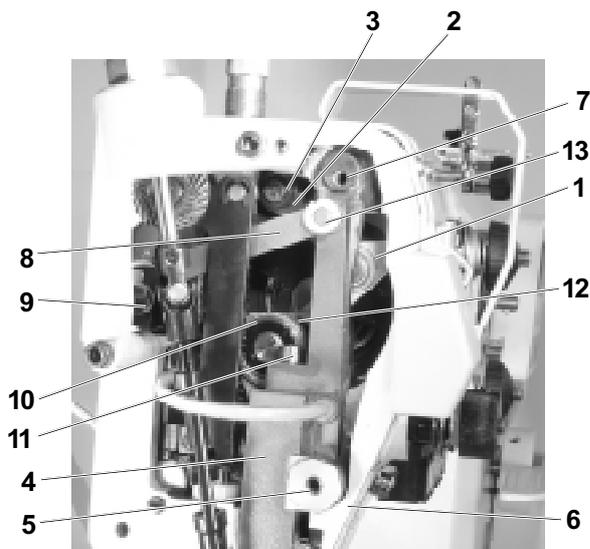


3.2 Needle and thread mechanism

3.2.1 Description

The take-up lever (1) is mounted in ball bearings, both at the spot of its suspending on the connecting rod (2) and in the mounting on the loop (12). The take-up lever is of aluminum and is provided with a stuck-in eye for two threads. The connecting rod (2) is mounted on the eccentric pin (3). The needle rod holder (4) is mounted through the pivot (5) in a rotating way in the arm (6). In its top part, the holder is guided by the guide pin (7). The movement for the needle feed is given to it by the connecting rod (8) driven by the feeding shaft (9). The connecting rod (8) is mounted by pin (13) with needle bar holder (4).

The connecting rod (10) of the needle bar (11) on the loop (12) is mounted in a ball bearing and it is slidingly mounted on the needle bar carrier. The mechanism is lubricated by means of a central-wick lubricating system.

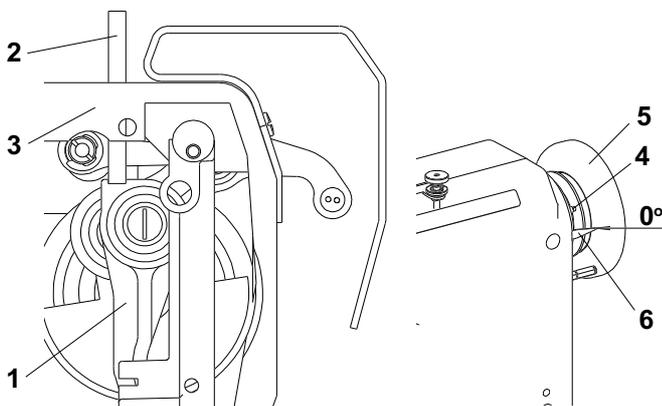

3.2.2 To check the handwheel angular adjustment

The handwheel (5) must be situated in its precise position relative to the needle and thread mechanism. This position is given by a pin (2), which locks the connecting rod of the needle rod (1) through a hole in the arm (3). In this position, the indicator (6) of the handwheel must show „0“. The position is fixed by the handwheel screw (4) contacting a small flat surface provided on the upper shaft.

The correct adjustment of the angular position has been carried out at the producer's.




Caution ! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

3.2.3 Height setting of the needle bar

At the moment, when the hook point passes around the needle, the upper edge of the needle eye must be about 1 mm below the hook point. In an opposite case, it is necessary to set the height of the needle bar as follows:

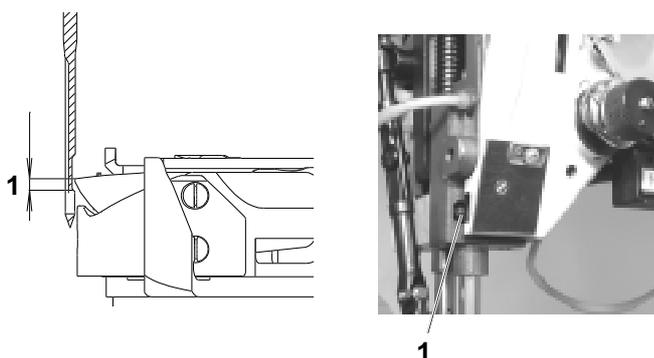

Caution ! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the front guard.
- Loosen the screw (1) of the needle bar carrier
- Set the correct height of the needle bar and tighten anew the screw (1).



Caution !

An incorrect setting of the needle bar height may cause the striking of the hook point against the needle.



3.2.4 Side setting of the needle bar holder



The correct position of this holder is in such case, when the needle bar is lined up with the presser-foot bar. The needle bar holder can be set as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (1) of the pin (2).
- Loosen the screw (3) of the guide pin (4).
- In shifting the pin (2) set the needle bar holder on the measure „A“ = 8 mm (distance between the front face of the arm and the front face of the safety bolt (5) of the needle bar holder) /at the same time the pin (4) shifts/.
- The guide pin (4) is to be set in such a way that the needle bar holder moves easily.
- Tighten the screws (1 and 3).

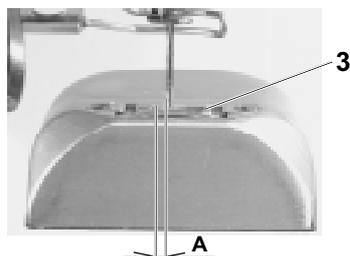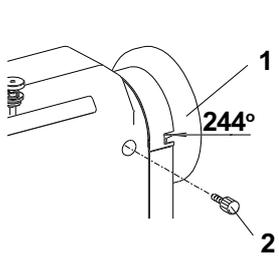

3.2.5 Setting the needle (the needle bar holder) in the direction of sewing


When shifting out the needle from the throat plate insert, at the moment, when the needle eye is at the level of the top surface of the throat plate insert (3), the distance between the needle and the wall of the throat plate insert must be „A“ = 0.2 mm.



Caution ! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the maximum allowed stitch length.
- Set the handwheel (1) to the angle of 244° and lock it with the screw (2).
- Loosen the screw (4) of the lever (5).
- By turning the needle bar holder (6) on the pin (7) set the required distance „A“ = 0,2 mm.
- Tighten up the screw (4) and check up the setting.

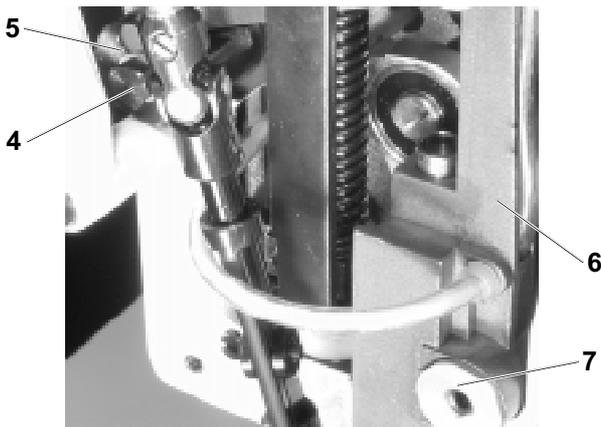

Caution!


A faulty setting may cause bending or breaking of needles against the throat plate insert.

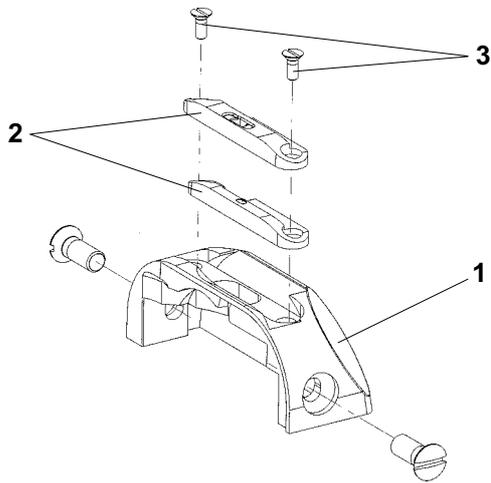

3.3 Throat plate and its post

3.3.1 Description

The throat plate (1) is equal for all categories of sewing. In the throat plate there is fixed by means of two screw (3) the exchangeable throat plate insert (2). Each category of sewing has its own insert of the throat plate which differ one from another by the length and width of the piercinghole.

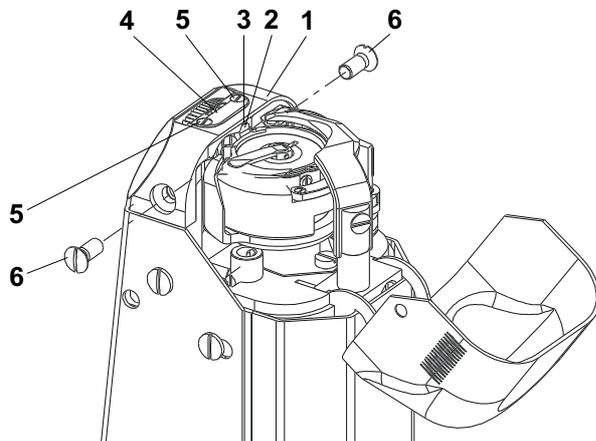

3.3.2 Mounting and removing the throat plate and its insert


When mounting the throat plate (1), the finger of the hook (2) must fit into the recess (3) of the throat plate. When demounting or replacing the throat plate insert (4), both screws (5) are to be unscrewed and the insert removed.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Place the insert (4) and screw in the screws (5).
- Turn slightly the finger (2) in the sense towards the throat plate (1).
- Place the throat plate (1) and screw in the screws (6).

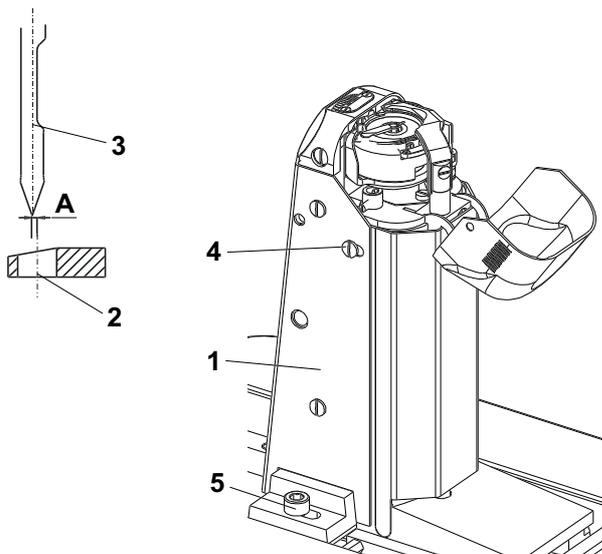

3.3.3 Side setting of the throat plate post


The post of the throat plate (1) is to be side set in such a way that the axis of the hole in the insert of the throat plate (2) is at the distance „A“ = 0.1 mm to the right from the axis of the needle (3).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screws (4 and 5) (from the rear side of the post as well).
- Shift the post (1) in the sense required for attaining the distance „A“ = 0.1 mm.
- Tighten the screws (4 and 5) and check up for the correct setting.

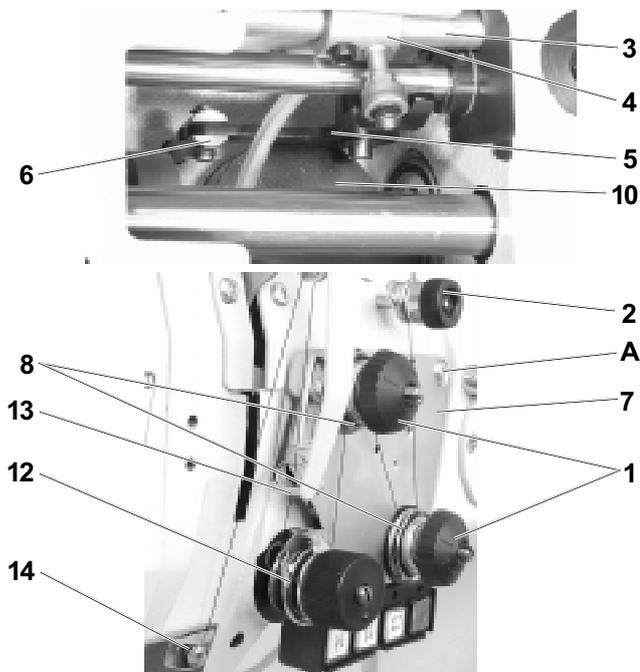

3.4 Thread tensioners and limiter


3.4.1 Description

The main tensioners (1) serves for creating the tension of the thread when tightening the stitch. The auxiliary tensioner (2) reduces the risk of pulling out of the thread after the thread trimming when removing the sewn material, when the thread is passed through this material and when the main tensioner is relieved. The main tensioner is relieved by the mechanism controlled by the shaft of the presser bar lifting (3) holding the lever (4) with a pulley. The motion is then transmitted by the lever (5) and the tie rod (6) on the thread tensioner plate (7) whose displacement (motion) relieves the thread tensioner springs (8). In machines provided with a thread trimming device, the main tensioners (1) are relieved as well upon the switching on of the electromagnet (10) whose electromagnetic field will attract the thread tensioner plate (7). The mechanism of the adapting spring (12) maintains the upper thread in its tensioned state when passing through the hook and when entering the needle into the sewn material. The thread limiter (13) limits the length of the thread fed by the take-up lever when moving from the upper to the bottom dead centre to get a controlled passing of the thread through the hook. The auxiliary guide (14) maintains the upper thread in front of the needle in a tensioned condition and helps against pulling the thread from the needle after thread trimming.

3.4.2 Setting the tension of the main and auxiliary tensioners

The tension of the main thread tensioners is regulated by means of the nuts (1). The force of tensioning the thread is measured by the dynamometer (2) as it is shown on the illustration. The size of this force differs according to the category, and its orientation value is indicated in the par. 11.2.


The tension of the auxiliary tensioner is regulated using the nut (3). It should be the least possible, but sufficient for unthreading the thread from the sewn material when removing the sewn material from the pressing element without leaving the tensioner.

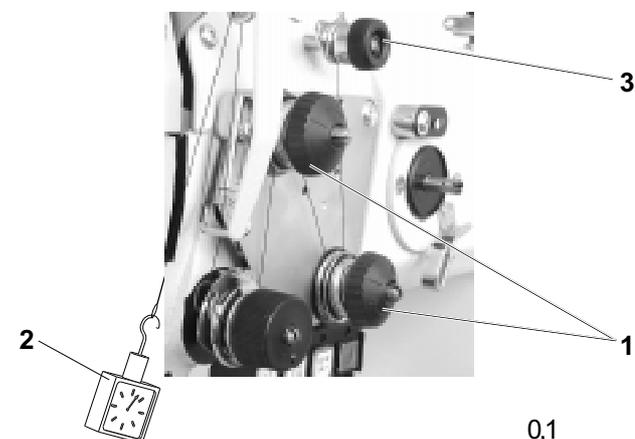

3.4.3 Setting the tensioning mechanisms of the main tensioners

In the rest position of the tensioners, when pushing the plate of the tensioners on the spot "A" 3.4.1, this plate must have the so-called dead travel of about 0,5 mm. At this lifting, the tension discs of the tensioners must not be relieved. This can be attained by a suitable shaping of the relieving disc of the tensioners-this has been set up in the manufacturing factory. In the maximum opened position of the tensioners, the plate of the tensioners, when pushing it at the spot "A" 3.4.1, must still have the minimum lifting. This can be attained when axially shifting the lever (3) with the roller (5) on the shaft (4).






The disengagement of the main tensioners must be coordinated with the top roller lift. To achieve this, turn the lever (3) with the roller (5) on the shaft (4). The movement of the roller (5) on the slanting surface (6) of the lever (7) disengages the tensioners. In this way, also a lag of the upper thread tension disengagement after the top roller lift can be obtained.

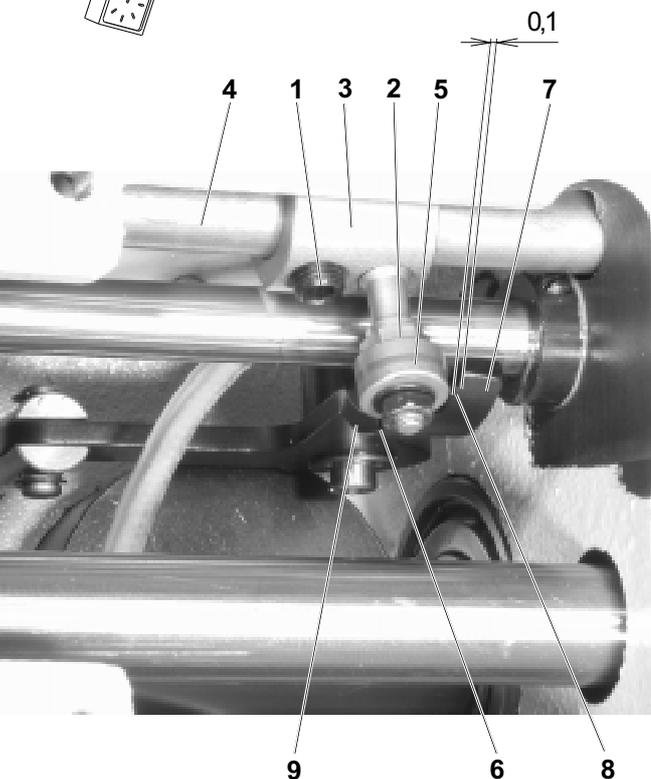

Caution ! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the rear cover with the top roller lift magnet.
- Loosen the screws (1) and (2) of the lever (3).
- In the rest state of the machine (with not relieved tensioner discs) set the lever (3) in turning it slightly on the shaft (4) to a position in which the roller (5) of the lever (3) is in contact with the slanting surface (6) of the lever (7) and is about 0.1 mm distant from the flat surface (8) of the lever.
- At the maximum lift of the top roller, the roller (5) moves on the flat surface (9) of the lever (7); in this condition, there must be a minimal play at the tensioner plate lift (when pushing qat the spot "A" (3.4.1), the plate must still have a minimum lifting - between the roller (5) and the surface (9) there is a minimum clearance). Retighten the screws (1) and (2), check the play, and correct it in case of need.

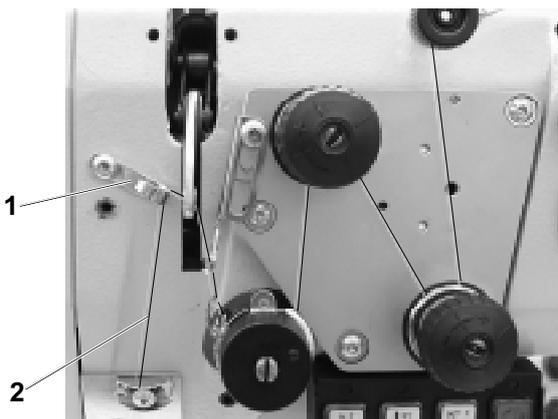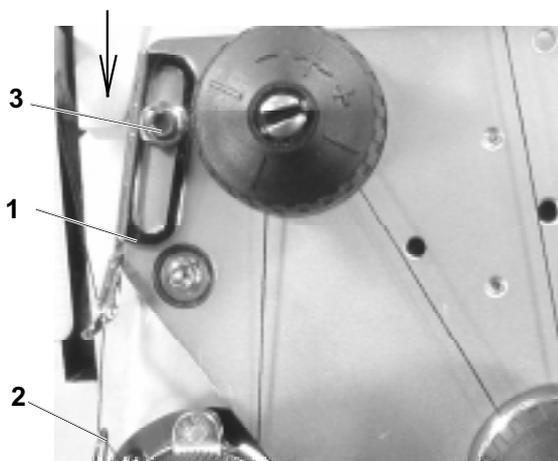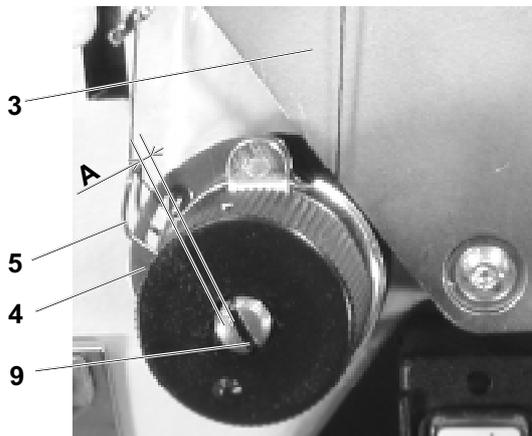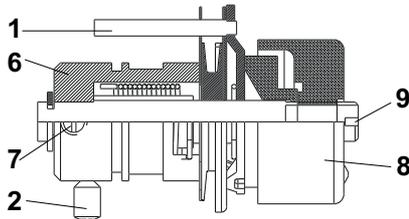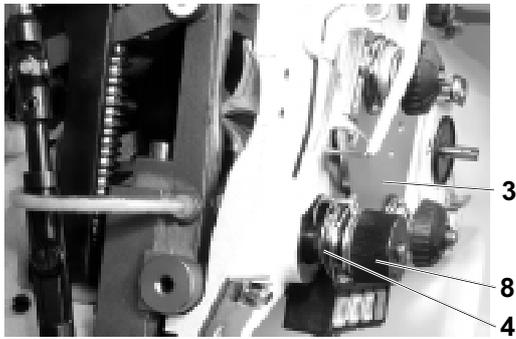

3.4.4 Setting the adapting spring

The mechanism of the adapting spring is in the machine arm set by the pin (1) and fixed by the screw (2). The axial adjustment shall ensure that the surfaces of the parts (3) and (4) are aligned (the threaded thread must in no place break on edges). The initial position of the adapting spring (5) shall ensure that "B" = 1 to 1.5 mm (see the Figure).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (2) and take the mechanism out of the machine arm.
- Turning the body (6) relative to the pin (1), set the required initial position of the adapting spring /the screw (7) has been set at the producer's so as to permit the turning movement of the body (6) the screw must not be fully tightened/.
- During the installation of the mechanism into the machine arm take care of the axial adjustment of the mechanism.
- Retighten the screw (2) and check the adjustment.
- Loosen the nut (8) of the mechanism, insert a screwdriver into the notch of the screw (9) and set the required value of the adapting spring. By turning the screw clockwise you increase the spring force, and vice versa.
- Retighten the nut (8) and check the function of the adapting spring.

3.4.5 Setting the thread limiter

The thread limiter is to be set in such a way that, when sewing and passing the thread through the most distant point of the hook, the spring (2) shifts by about 1/4 to 1/2 length of its total length. This means that the thicker will be the sewn material and the longer will be the stitch length, the more will be the limiter shifted in the sense of the arrow and inversely. Under standard sewing conditions, the thread limiter is set in its tested positions depending on the sewing category in accordance with the chapter 11.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Tighten the screw (3).
- Set the thread limiter (1) so as to ensure a minimum motion of the adapting spring (2) when the thread passes around the bottom of the hook.
- Tighten the screw (3).

3.4.6 Setting the additional thread limiter


For improving the uniformity of stitch interlocking with some (e.g. too thin) materials, the machine is provided with an additional thread limiter which is to be set as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the stitch length to the required value.
- Sew an approximately 5 cm long seam along the edge of sewn work, switch off the machine, and tilt away the hook cover.
- Rotate the handwheel until the thread taken up by the hook will be stretched across its bottom, i.e., across the full diameter of the hook.
- Adjust the position of the additional limiter (1) so as to obtain an almost complete stretching of the thread (2) at that moment, as shown in the drawing.
- Sew next stitch and check the adjustment.

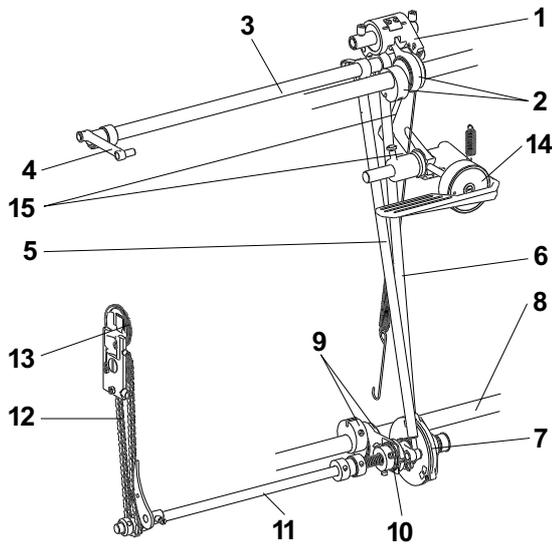

3.5 Feeding mechanism of the needle feed and of the lower feed wheel

3.5.1 Description

The feeding mechanism is formed by the leverage (1) which is driven from the main shaft through the eccentric with connection rod (2). The feeding motion is transmitted by the shaft (3) on the clutch of the bottom feed (7).

The engaging and the disengaging function of the clutch (7) is controlled from the lower shaft (8) through the eccentric with the connecting rod (9) and through the wedge coupling (10).


The feeding movement is transmitted by the shaft (11) through the chain transmission (12) onto the wheel feeder (13).

The stitch length is set by the knob (14) through the leverage (15) to the feeding mechanism (1).

3.5.2 Stitch length mechanism

3.5.2.1 Setting the upper eccentric


The eccentric (1) must be set in its angular position in such a way that the horizontal component of the needle motion is in a phase delay from the vertical component of this movement. This refers to the angle of 90° on the handwheel (2), when the setting stick (3) is engaged into the eccentric (1) and leans from above against the feeding shaft (4).

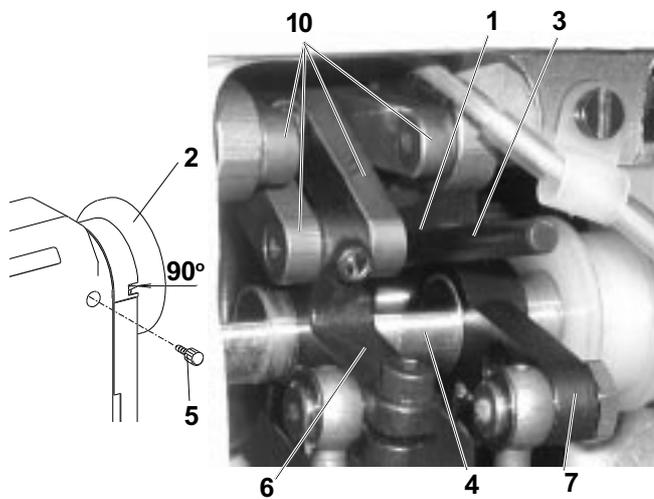

Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the angle 90° on the handwheel (2) and fix it with the screw (5) which is component part of the accessory of the machine (tighten it with care).
- Loosen the gripping joints of the levers (6) and (7).
- Turn the feeding shaft (4) in such a way, so that the recesses (flats) point towards the bedplate (owing to the unambi-guous setting of the eccentric by means of the setting bar).
- Insert the setting bar (3) into the hole in the eccentric (1) and prop it from above against the feeding shaft (4).
- Shift axially the eccentric (1) on the shaft into its extreme positions and place it in the middle.
- Tighten the screws of the eccentric (1) to the maximum (one screw first and, after having turned slightly the hand-wheel, the second screw as well).
- Turn the feeding shaft (4) back into the position for setting the leverage in such a way, so that the levers (10) of the mechanism pass in the spots of the recesses.
- Tighten the gripping joints of the levers (6) and (7).
- Test the sufficient clearance in the recesses of the feeding shaft (4) and, using the levers (10) with the maximum stitch length forward and rearward – push against the reverse stitching lever.
- Correct eventually the position of the feeding shaft.

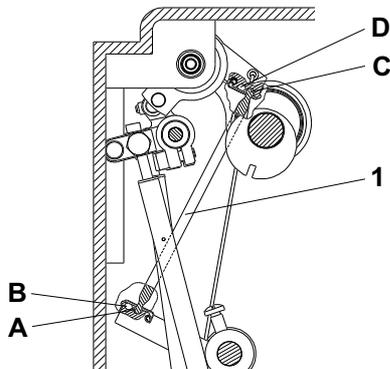


3.5.2.2 Setting the prop

In this machine with a wheel feed, the prop (1) is mounted in the pits (A and C) as per the drawing.

3.5.2.3a Forward and rearward stitch length distribution (rough)


The cam (1) is to be set at the respective angle in such a way that the stirrup (6) is oriented in such a position, so that the connecting rods (7 and 8) are in a line with a thoroughly screwed in knob (9) and with turning the handwheel at 0°. This setting can be done only after having set the top eccentric according to the paragraph 3.5.2.1.

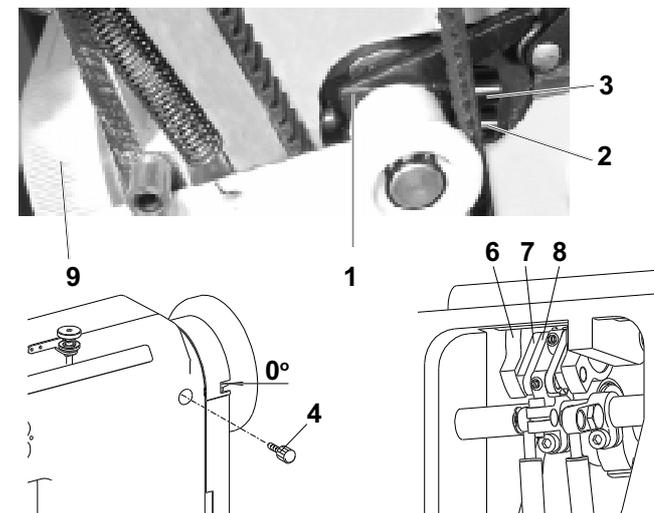

Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the zero stitch /screw in the knob (9) to the bottom of the cam (1).
- Set the angle 0° on the handwheel and lock it with the screw (4).
- Turn the screw (3) in the respective sense in such a way that the connecting rods (7 and 8) are in a line and tighten the screw (2).

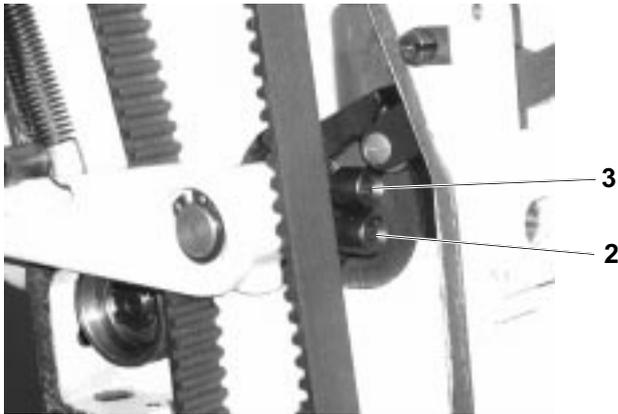

3.5.2.3b Forward and rearward stitch length distribution (fine)


When setting the maximum length of the stitch, the forward and the rearward stitch length must be equal with the maximum error of $\pm 5\%$. This setting can be done only after having set the needle bar holder in the direction of sewing (par. 3.2.6) and the wheel feed (par. 3.5.3.1.2).



Caution! Danger of injury!

switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the maximum stitch length .
- Place a suitable material under the presser foot and mark therein the forward and the rearward stitch length.
- With an unequal length of the stitch, proceed to the correction of setting by turning the screws (2 and 3). When tightening the screw (3), the forward length of the stitch is shortened and inversely. When tightening the screw (2), the forward stitch length is lengthened.
- Each time first loosen one screw and then retighten the other one.

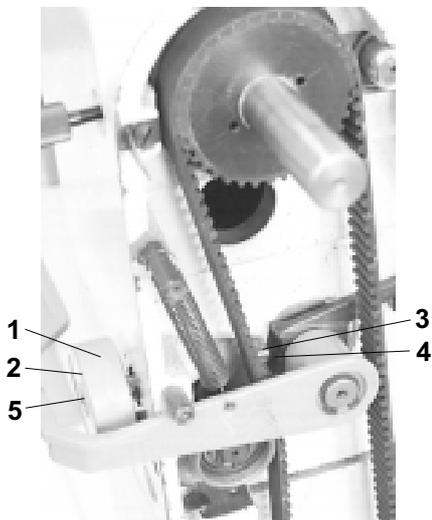

3.5.2.4 Setting the control knob (including the stitch length limitation)



The control knob (1) is to be set up in such a way that, when turning it in counterclockwise sense up to the stop, the maximum stitch length valid for the given sewing category is attained (cat. 1: 3 mm, cat. 2 and 3 : 5 mm). The scale of the control knob is to be oriented in such a position, so that the scale end corresponds to the maximum stitch length, excepting the first sewing category, where the stitch length of the indicator is 3 mm.




Caution! Danger of injury

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Screw in the screw of the control knob in such a way, that the spherical surface of the screw (3) bears on the seat of the cam (4).
- Loosen the screw (5) and turn the control knob in the clockwise direction, until the pin (6) of the knob (1) bears on the pin (7). Tighten firmly the screws (5).
- Turn the knob in the counterclockwise direction up to the stop, when the pin (6) of the knob (1) bears on the pin (7).
- In a sewing test check up the length of the stitch, if this corresponds to the maximum stitch length valid for the given sewing category.
- If the stitch is longer, loosen then the screws (5) and turn the knob in the clockwise direction and inversely. Tighten firmly the screws (5).
- Insert a screwdriver into the hole (8) of the scale (2) and adjust the scale in such a way that the maximum length on the scale is against the marking of the stitch length on the machine arm.
- For the sewing category 1, set the control knob (1) on the stitch length of 3 mm and check it by a sewing test.
- Loosen the screws (5) and turn the control knob (1) in the counterclockwise direction, until the pin (6) of the knob (1) bears on the pin (7). Tighten firmly the screws (5).
- Put a screwdriver into the hole (8) of the scale (2) and adjust the scale in such a way that the value of the stitch length on the scale against the marking on the arm is 3 mm.

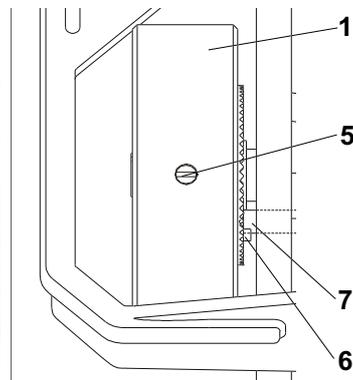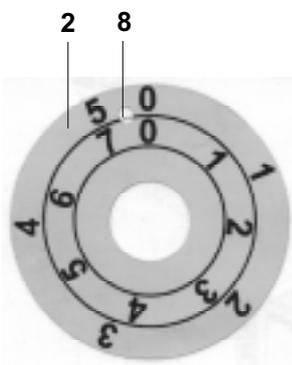

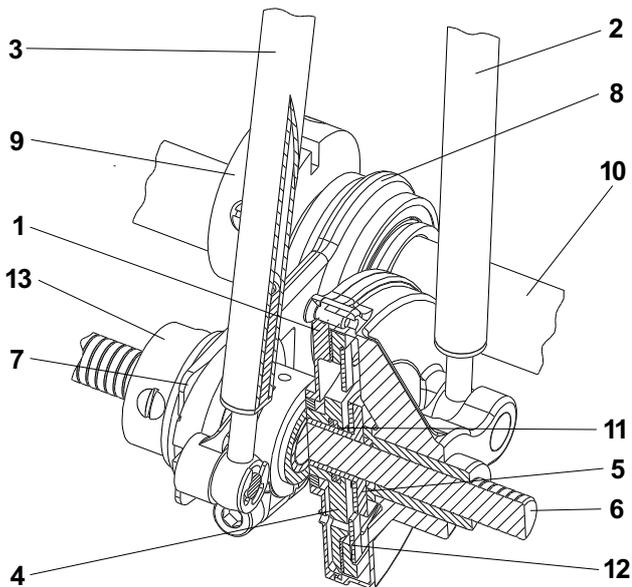

3.5.3 Lower feed wheel


3.5.3.1 Feeding clutches

3.5.3.1.1 Description

The feeding clutch is formed by the clutch cover (1) driven from the connecting bar (2), by the clutch star (4) driven from the connecting rod (3) and by the carrier plate (5) firmly connected with the shaft (6). Of the clutch give the connecting rods (2 and 3) an opposite direction swinging movement. The clutch is coupled by means of the wedge (7) on the connecting rod (8) through the eccentric (9) which is placed on the lower shaft (10).

In the position, when the wedge is disengaged, the star (4) is shifted out from the frictioning engagement with the lining of the carrier plate (5) by means of the spring washer (11). The plate (5) lining is then pushed by means of a flat profiled spring (12) against the cover of the clutch (1).

In the position, when the wedge is disengaged, the star (4) is pushed against the plate (5) lining and, at the same time, the friction connection with the cover of the clutch (1) is disconnected. Within a short instant, when engaging and disengaging with the carrier plate (5), there are in a friction engagement both the cover (1) and also the star (4), namely in the dead centre of the connecting rods (2 and 3). The setting of the change-over of clutches is done by tightening or by loosening the nut (13).

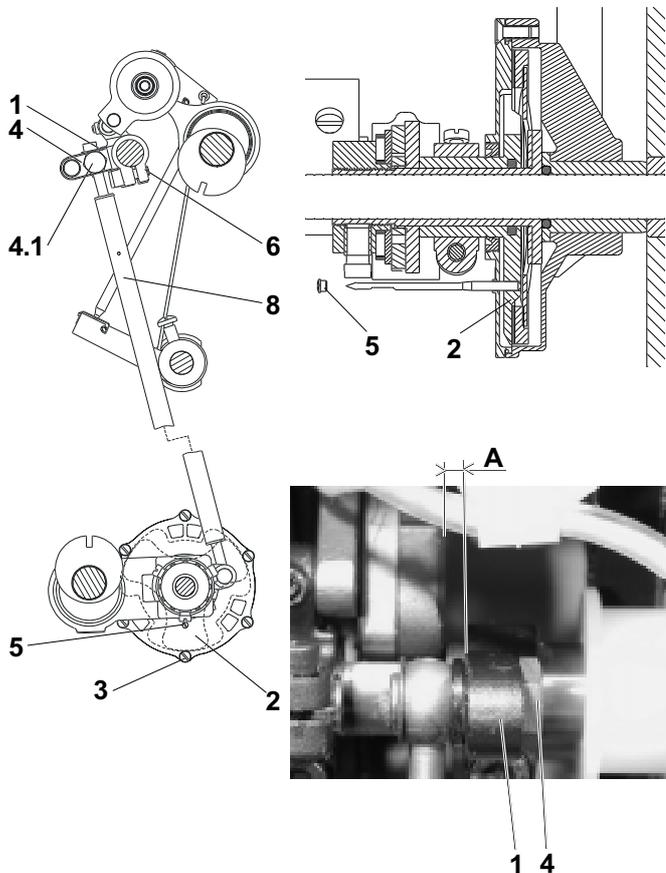

3.5.3.1.2 Setting the lever of the second step of feeding (angle, position)

The lever of the second step (1) must be set in such a way that, in the bottom dead centre of the needle, the axis of the spider part (2) lies in the screw axis (3). The pin screw (4) can be mounted into the position - 4.1 - corresponds to the maximum stitch length of 5 mm.




Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

Lever (1) displacement.

- Loosen the screw (6).
- Set the maximum stitch length.
- Set the angle 180° on the handwheel.
- Unscrew the screw (5) and put the needle shank in its hole.
- Turn the lever (1) until the needle drops into the clutch disk (2).
- Side set the lever (1) to the measure „A“ = 0.5 to 1 mm.
- Tighten the screw (6).
- Screw in the screw (5) and seal it with the Loctite cement.

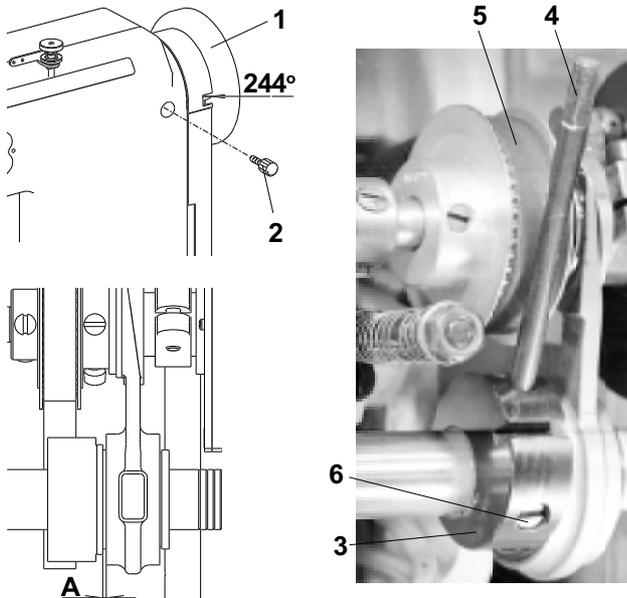

3.5.3.1.3 Setting of the lower eccentric


The rotation of the eccentric (3) must be delayed in phase by 1/4 revolution against the rotation of the eccentric of the stitch length. This corresponds to the angle of 244° on the handwheel (1), when the setting pin (4) is put into the eccentric (3) which is in contact with the indented belt (5).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set 244° on the handwheel (1) and lock it with the screw (2), which is included in the accessory of the machine (tighten it carefully).
- Put the setting stick (4) into the hole in the eccentric (3) and prop it from below against the indented belt (5).
- Set eccentric (3) axially.
- Tighten it the utmost the screws of the eccentric (6).
- By means of the handwheel, turn the eccentric (3) into the marked position and check in this position the clearance „A“ = 0.05, proceed eventually to its correction by a new side setting of the eccentric.

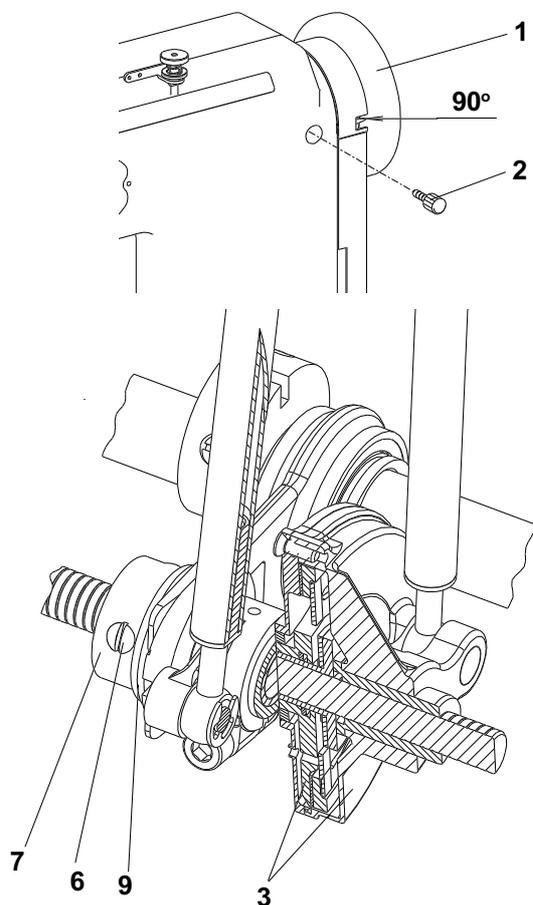

3.5.3.1.4 Setting the engagement and disengagement of the clutches

The nut (7) is to be side set in such a way that the shifting of the clutches is done at the moment when the clutch disks (3) do not move, which means, when they are at the dead center of their oscillating movement. This corresponds to the angle 90° on the handwheel.



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screws of the indented pulley of feeding and shift it to the left.
- Set the maximum stitch length.
- Set the angle 90° on the handwheel (1) and lock it with the screw (2), which is included in the accessory of the machine (tighten it carefully).
- Loosen three screws (6) in the nut (7) and unscrew it by 2 mm to the left.
- Tighten slowly the nut (7), until it strikes against the axial bearing (9). (At this moment, the tightening moment increases in jumps) and tighten the screws (6).
- Set the the handwheel on 85° and push the backtacking lever, the feeder is to turn against the movement of the needle. Set then the handwheel on 95°, the feeder is to be turned in the sense of the needle movement. If not being so, correct the side setting of the nut (7). When the clutches shift too soon, turn a bit the nut (7) to the right and inversely.
- Tighten the screws (6).
- Return the indented pulley in its original place according to the paragraph 3.6.2.

3.5.4.2 Wheel feeder and its post

3.5.4.2.1 Height setting of the feeder and tensioning of the chain


The wheel feeder (1) is to be set in such a way that the points of its teeth overtop the insert of the throat plate by „X“ = 0.3 to 0.7 mm. When sewing soft and thick materials, it is necessary to increase the value „X“, until a good quality of feeding is attained, but only to the measure of not deteriorating the beginning of sewing after the carried out thread trimming. Set the height of the feed dog using a setting gauge. With every correction of the teeth height, the tension of the chain (2) is to be corrected.

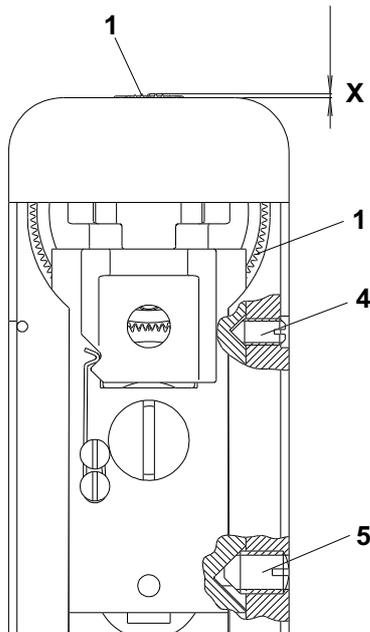


Caution! Dangers of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (3).
- Loosen the screw (4).
- Loosen or tighten the screw (5) and push simultaneously with finger the feeder (1) downwards, until the required height of the teeth „X“ of the wheel feeder is attained.
- Tighten then still the screw (5) by 45° (1/8 revolution).
- Tension the tensioner (6) up to the stop. Be careful in side shifting it to the centre of the chain. Tighten the screw (3).
- Loosen the screw (5) by 45° (1/8 revolution), into its original position. In this way, the optimal clearance of the chain transmission is attained.
- Tighten the screw (4).
- Correct the set height of the top roller according to the par. 3.5.4.

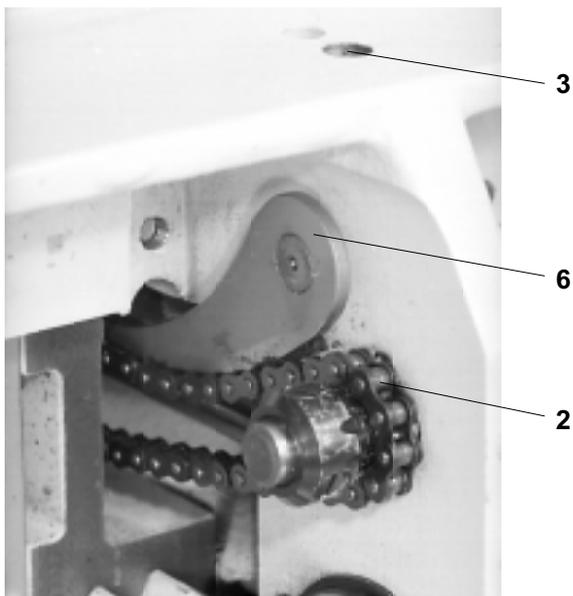

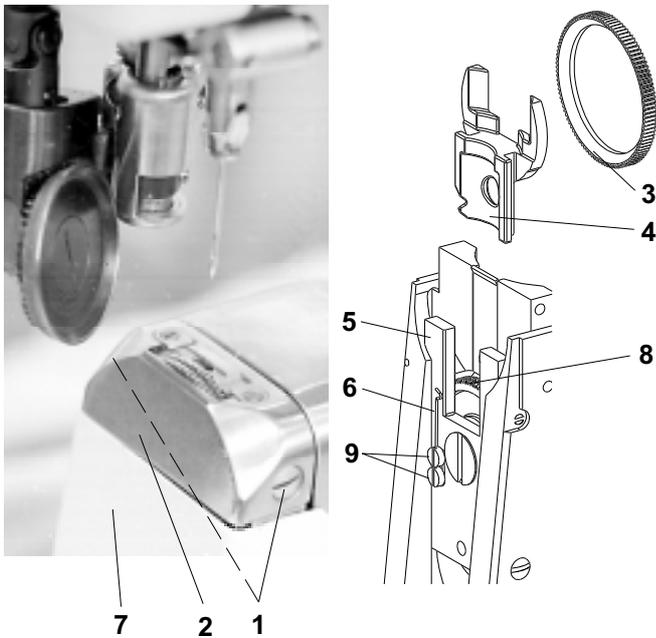

3.5.3.2 Replacement of the feeder



For the replacement of the wheel feeder (change of the wheel feeder according to the machine setting - see par. 11.2 - setting of the machine - feeder - pitch of the teeth).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Unscrew the screws (1) and remove the throat plate (2).
- Unscrew the guard (7).
- In pulling upwards (securing by a spring), pull out the feeder (3) with the guide (4).
- Replace the feeder (3).
- Insert the feeder with the guide into the groove of the holder (5).
- Mount the throat plate (2) and tighten up the screws (1).
- Check up, if the spring (6) pushes the guide (4) with the feeder (3) against the wheel (8).
- In the opposite case, loosen the screws (9), tense up the spring (6) in such a way, so that the guide (4) with the feeder (3) is pushed against the wheel (8) and tighten the screws (9).
- Mount the guard (7) and tighten the screws.

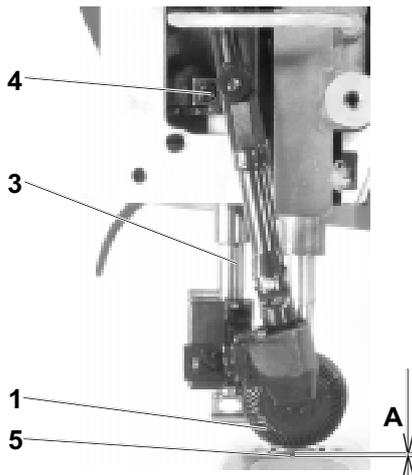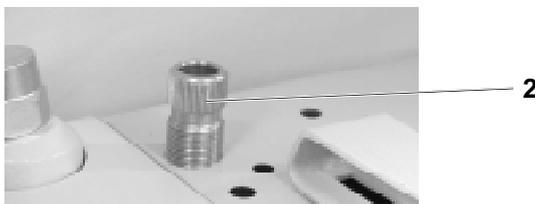

3.5.4 Setting the top roller (pressing force, height)


When lowering the top roller (1), set the clearance „A“ between the feeder (5) and the top roller to the maximum of 0.2 mm. Set the pressing force of the top roller (1) so as to avoid the slippage of the sewn material when feeding it.

Method of setting the height of the top roller:

- Lower by hand the presser bar (3) with the top roller (1) above the wheel feeder (5).
- Loosen the screw (4) and set the required value „A“=0.2 mm.
- Tighten the screw (4).

Setting the force of the top roller (1).


- In screwing in the screw (2), the force of the top roller is increased and inversely.

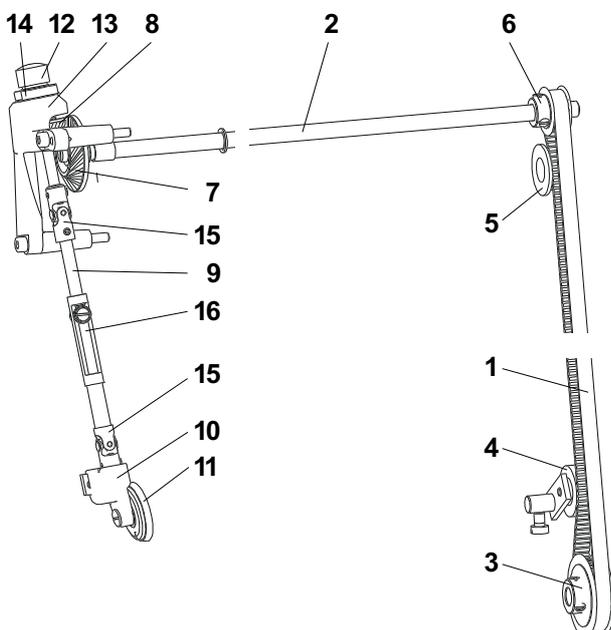

3.6 Feeding mechanism of the top roller

3.6.1 Description

The starting movement for the drive of the top roller feeder is the bottom feeding shaft. From this shaft, the movement is transmitted by the indented belt (1) onto the top feeding shaft (2). A component part of the transmission by indented belt is the pulley (3), the tensioning roller (4), the roller (5) and the pulley (6). Starting from the shaft (2), the movement is further transmitted through the wheels (7 and 8) onto the articulated shaft (9). From this articulated shaft, the movement is transmitted by a cone transmission, situated in the holder (10), onto the feeder wheel (11). The shaft of the wheel (8) is mounted in the screw (12) on bearings. The articulated shaft (9) contains two joints (15) and a telescopic part (16). Both these elements secure the lifting and the tilting of the top roller.

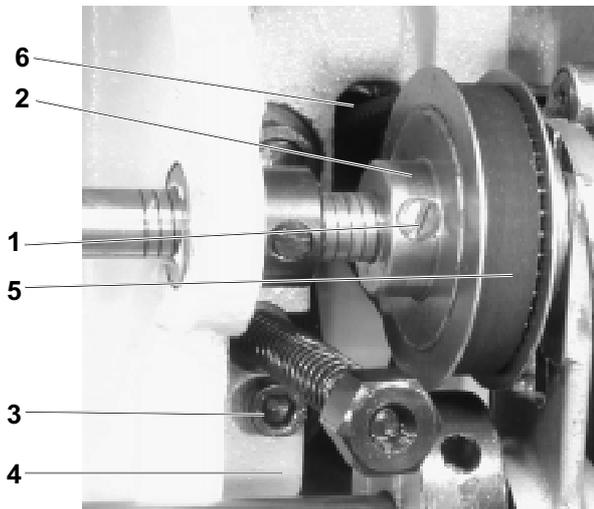

3.6.2 Side setting of the indented lower pulley


The pulley must be set up in such a way that the belt passes through the centre of the passing hole in the bedplate. The setting operation is to be done as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screws (1) of the pulley (2).
- Loosen the screw (3) of the tensioning roller (4)
- Set the pulley (2) in such a way that the belt (5) passes through the centre of the passing hole in the bedplate (6).
- Tighten the screws (1).
- Set the tensioning roller (4) axially in such a way that the belt (5) is set at the middle of the tensioning roller (4).
- Set the tensioning roller (see par. 3.6.4).
- Tighten up the screw (3) of the tensioning roller (4).

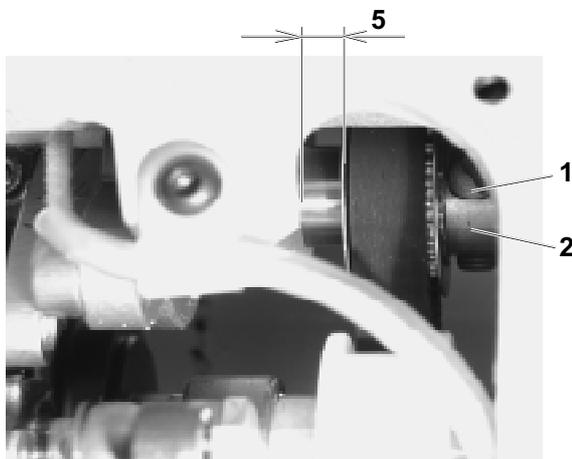

3.6.3 Side setting of the indented upper pulley


The pulley is to be set in such a way that the indented belt is not crossed and the pulleys are in line. The setting thereof is to be done as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screws (1) of the pulley (2).
- Set the pulley (2) in such a way that the distance of 5 mm is attained in accordance with the illustration.
- Tighten the screws (1).

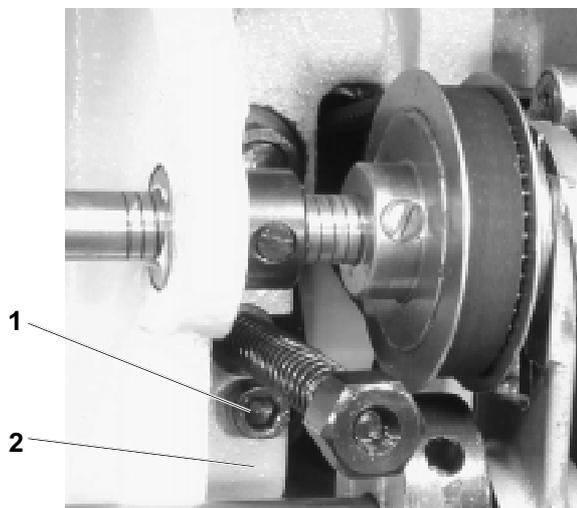

3.6.4 Setting the tensioning roller




The tensioning roller of the indented belt of the top feeding is mounted in a rotary way on the bedplate. The belt must be tensioned as needed in such a way that there is ensured the correct function of the transmission. Insufficient tension can cause skipping of the teeth, on the contrary, excessive tensioning enormously loads the mounting of the top shaft. The setting thereof is to be done as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (1) securing the lever of the tensioning roller (2).
- Tension the belt as needed (theoretically, in applying the force of 10 N in the middle of the belt with the deflection of 4 mm).
- Tighten the screw (1).

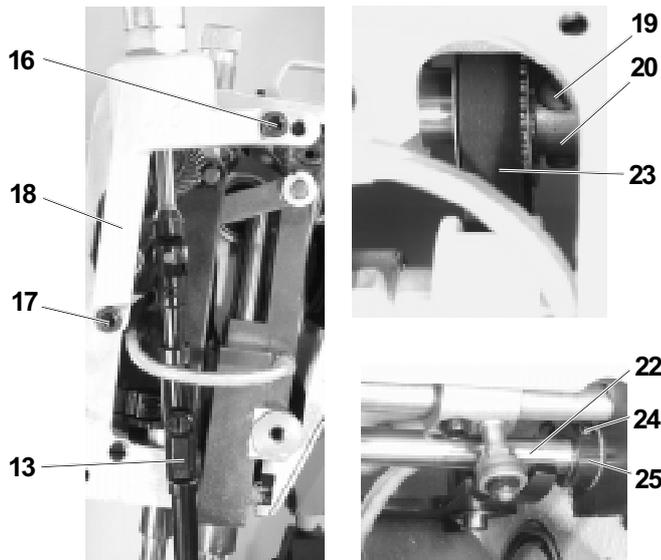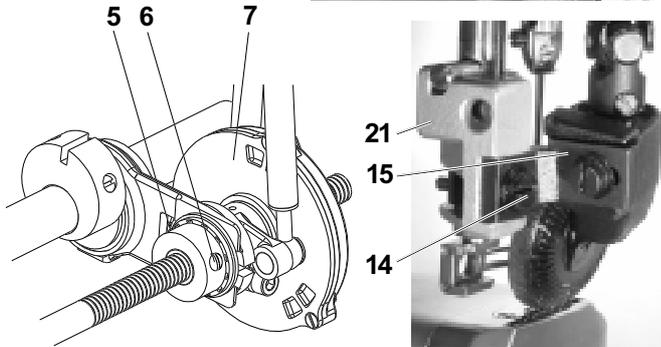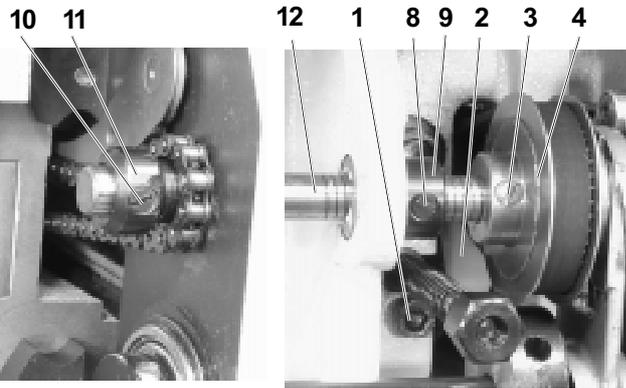

3.6.5 Replacement the indented belt

Before replacing the indented belt, the bottom feeding shaft is to be removed. The procedure is as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (1) of the tensioning roller (2) and loosen it.
- Loosen the screws (3) of the pulley (4) and shift it to the left in such a way that the screws (5 and 6) of the feeding clutch (7) are accessible.
- Loosen the screws (5 and 6).
- Loosen the screws (8) of the axial ring (9).
- Loosen the screws (10) of the chain wheel (11).
- Push the shaft (12) to the left in such a way that it is out of the pulley (4).
- Remove the pulley (4).
- Remove the front guard.
- Loosen and unscrew the screw (14) of the holder of the wheel (15) and remove it from the holder (21).
- Loosen the screws (16 and 17) of the holder (18).
- Remove the holder (18) together with the holder (15) and articulated shaft (13) from the machine.
- Loosen the screws (19) of the pulley (20).
- Loosen the screw (24) of the ring (25).
- Hold the pulley (20) and pull out the feeding shaft (22) from the arm in such a way that it is possible to remove the indented belt (23) from the arm of the machine.
- Replace the belt with a new one and proceed to the assembly (inverted procedure of dismantling).
- Proceed to the setting operation according to the par. 3.6.2, 3.6.3 and 3.6.4.

3.6.6 Top roller

3.6.6.1 Selection of the top roller diameter

The machine can be supplied with two types of top roller, namely with the diameter of 25 mm and with the diameter of 35 mm. The suitability of the diameter used depends on the type of sewing and on the concrete technological operation.

There are in general valid the following principles for the selection of the wheel diameter:

- ∅ 25 mm - for sewing small radii
- ∅ 35 mm - for sewing straight sections or big radii
- for sewing with great passages to thicker materials

3.6.6.2 Forward, rearward and side setting

The top roller must be in a defined position in relation to the needle:

a) view (see Fig. 1) - the value „X“ depends on the diameter of use top roller (∅ 25 - 6.5 mm; ∅ 35 - 10.5 mm), it is measured from the the needle bar up to the roller edge when turning the handwheel to the 180° of the scale against the indicator

b) view (see Fig. 2) - the wheel edge must fit with the edge of the needle operture at the spot of the needle punch.

These values are to be set as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (1).
- By shifting the holder (2) with the top roller (3) in the groove of the holder (4) set the required value „X“ and tighten the screw(1).
- Loosen the screw (5)
- By shifting the holder (2) in the holder (6) set the bottom edge of the roller to the edge of the needle operture.
- Tighten the screw (5).

Fig. 1


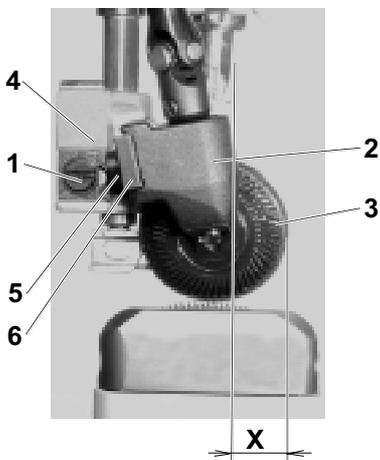


Fig. 2

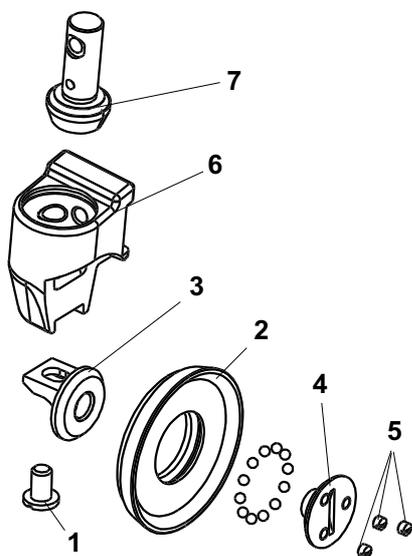

3.6.6.3 Setting the gear clearance

and in the mounting of the top roller

In the cone gear of the drive of the top roller foot, the minimum clearance must be set. A too small clearance will increase the friction resistance of the gear, the excessive clearance will influence the inaccuracy of feeding. The top roller itself is mounted on balls. With this type of mounting, it is also necessary to set the minimal possible radial clearance.

The given clearances are set as follows:



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

Clearance in the wheel mounting

- Loosen three screws (5) /only slightly/.
- Using the screw (4) set the minimum clearance in the top roller mounting (2) /it must easily rotate without any rubbing and with a minimum clearance/.
- Tighten the screws (5), check the set up clearance, eventually, repeat the setting procedure.

Clearance in the conic gear

- Loosen the screw (1), in shifting the wheel, resp. the holder (3) in the holder groove (6), set the minimum clearance, the pinion (7) must be pushed up to the holder bottom (6).
- Tighten the screw (1), check the set up clearance.

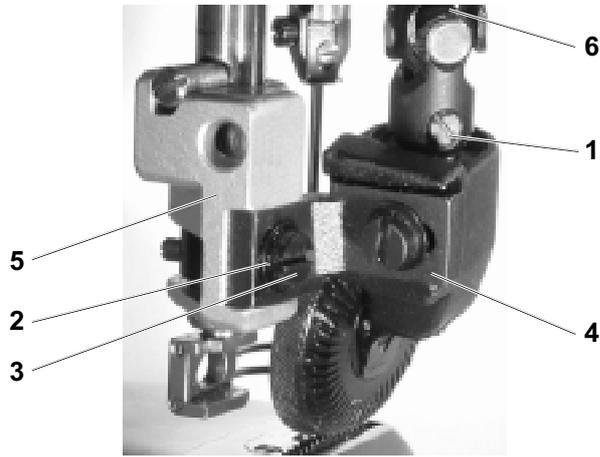

3.6.6.4 Replacement of the top roller


When replacing the top roller, proceed as follows:



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Unscrew the screw (1).
- Unscrew the screw (3) with the washer (2).
- Remove the driven top roller with the holder (4) from the holder (5) and from the articulated shaft (6).
- Mount another top roller in inverted procedure to dismantling.
- Set the top roller according to the par. 3.6.6.2.

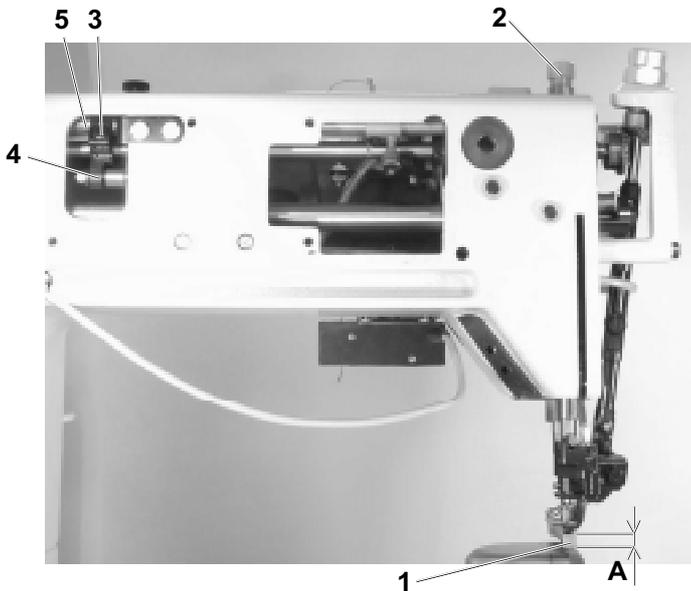

3.7 Setting the presser foot lift

The maximum lift of the presser foot when lifting the foot with knee lever or with electromagnet is to be „A“ = 12.5 mm.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Place a cube (1) having the height of „A“ = 12.5 ± 0.7 mm under the presser foot.
- Screw in thoroughly downwards the screw (2).
- Tighten slightly the screw (3) in such a way that the lever (4) turns on the shaft (5) with a certain friction moment.
- Push with the screwdriver on the lever (4), until it attains the wall inside the arm of the sewing machine.
- Return the lever (4) back by about 1 mm and tighten the screw (3). With the maximum top roller lifting, the lever will not strike into the machine arm.
- Check the axial clearance of the shaft (5) which should be the least possible.
- Using the screw (2) set the normal pressure force of the presser foot.

3.8 Bobbin winder

3.8.1 Description


The winder (bobbin winder) winds a reserve of the hook thread. It is driven by a spring-mounted friction gear, which stops after having filled the bobbin.

An ideal winding is attained with a sufficient pretension of the thread obtained on the thread guide (4) and with 1 mm under the diameter of the bobbin. The shaft is mounted in a swinging way and the friction gear is put into engagement by means of a pickup lever (1) and a cam. The winder is fixed on the machine arm by two screws (3). The thread is passed through according to the illustration, the thread is cut off after having stopped the winding operation using the cutting device (5).




3.8.2 Setting the bobbin winder stop

The moment of interrupting the winding is determined by the mutual position of the pickup lever (1) and the cam (5) on a common shaft. The cam is locked in its functional position by the screw (6). The mutual position is to be set on a not incorporated winder in such a way that in the moment, when the pickup lever leaves the space of the bobbin, the pressing function of the cam on the winders shaft is interrupted and it moves in the sense of the arrow. A fine setting is to be done on an incorporated condition in the machine. Using the screw (2), the position of the friction part of the pickup lever (1) is adapted. In opening the lever, the stopping function is accelerated. Its inverse function delays it. A test is to be done after having inserted the bobbin, when passing the thread through the device and when winding at the running of the machine.

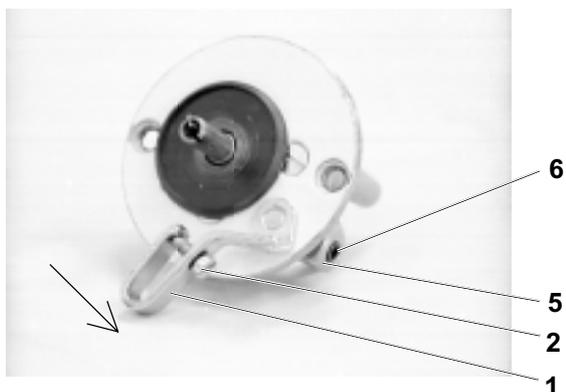

3.8.3 Setting the friction gear


The friction gear is formed frontally by the disk (8) on the main top shaft of the machine and by the disk (7) with a rubber ring on the shaft of the winder.




Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Proceed to the setting operation with a removed rear guard.
- The winder is in its stopped position.
- Loosen two screws (9) in the disk (8) through the hole in the arm.
- By shifting axially the disk in the sense A, B, set the disks of the winder (7) at the distance of 0.5 mm from the rubber ring.
- Tighten the screws (9) in the disk (8).
- Put the winder in its working position and proceed to a winding test.
- Mount the rear guard.

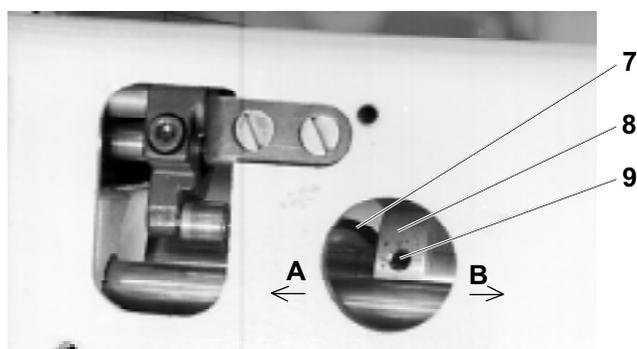

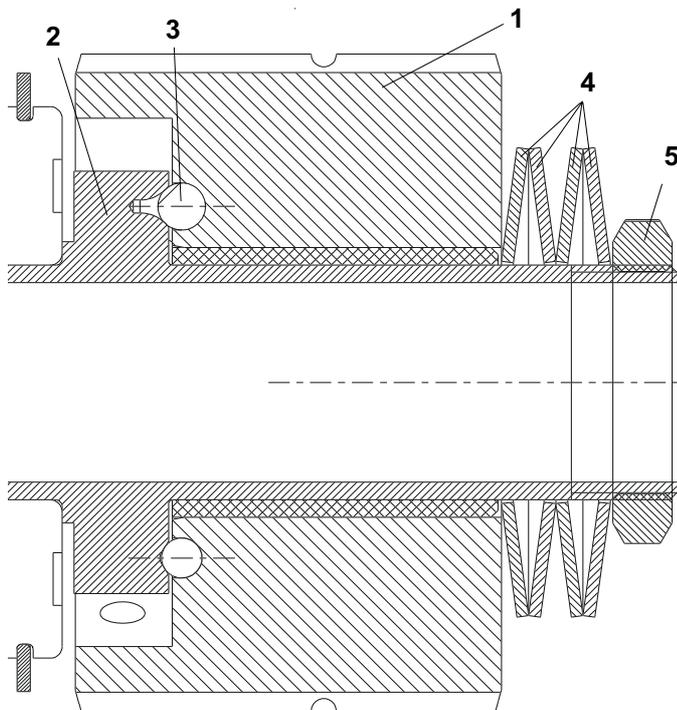

3.9 Safety clutch

3.9.1 Description

The machine is provided with a safety clutch which enables the turning through of the lower belt wheel (1) on the hub of the lower shaft (2), when the hook is blocked. This blocking occurs due to the penetration of thread into the hook path. With current running, this clutch should not disengage during the normal running. The mutual coupling of the belt wheel (1) and the hub (2) is effected by means of the bills (3) which are firmly connected with the belt wheel (1). The bills fit in the conic holes of the hub (2) and are pushed therein by means of the springs (4).

Putting the clutch in its working position, eventual checking its correct position are to be done in blocking the hook using a screwdriver and in turning a bit the handwheel.

3.9.2 Setting the disengaging moment



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

The correct value of the tensioning moment (8 Nm) has been set up by the manufacturer. when this value is lower, in a current running, the clutch may disengage. In an opposite case (the moment is higher), the clutch will not disengage. In both cases it is necessary to proceed to a correction of the moment. In turning the nut (5) to the right, the moment will increase and on the contrary. The value of the tensioning moment is very sensible to the turning of the nut (5). When setting it, it is necessary to proceed very carefully, set it up only in emergency cases! Check the moment using a torque-limiting wrench.



Caution!

The clutch guarantees only one mutual position of the hub of the lower shaft (2) and that of the belt wheel (1). No checking according to the gauge marks is needed. Putting the clutch out of operation by excessive tightening of the nut (5) can cause, when blocking the hook, the destruction of the gear within the drive of the hook.

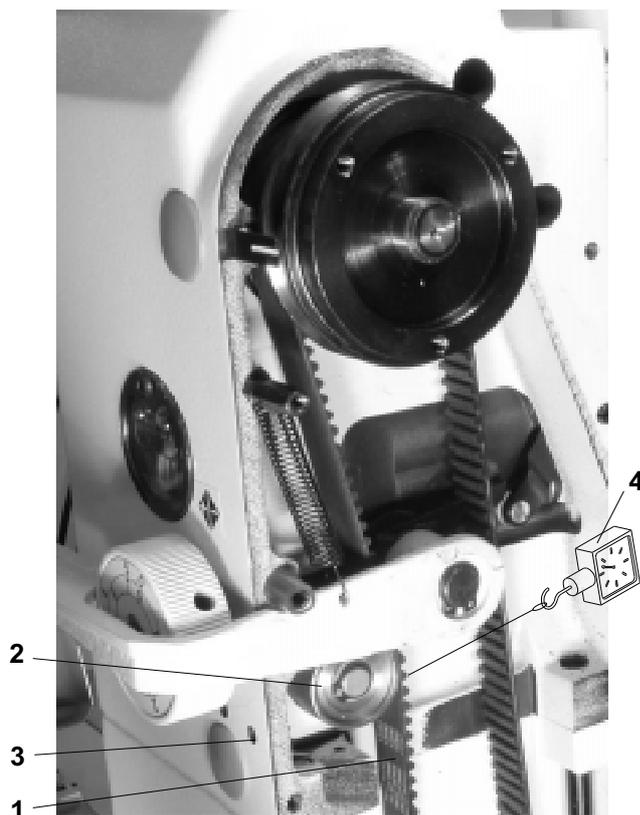

3.10 Indented belt transmission

3.10.1 Setting the tensioning roller of the indented belt


The optimum tension of the indented belt (1) is attained in setting the tensioning roller (2) in such position, when the roller applies the pressure of $F = 20 \text{ N}$ against the belt. The roller must be side set in such a way that the edge of the indented belt does not overlap over the edge of the roller.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the handwheel and the belt guard, remove the V-belt.
- Unlock the fastening of the loop, on which the roller (2) is mounted in such a way that the loop turns freely.
- Lift the roller (2) upwards and, thereafter, using the dynamo-meter (4), pull horizontally the roller in applying the force of 20 N. In this position, tighten the fastening screw (3).
- Check the side shifting of the roller.

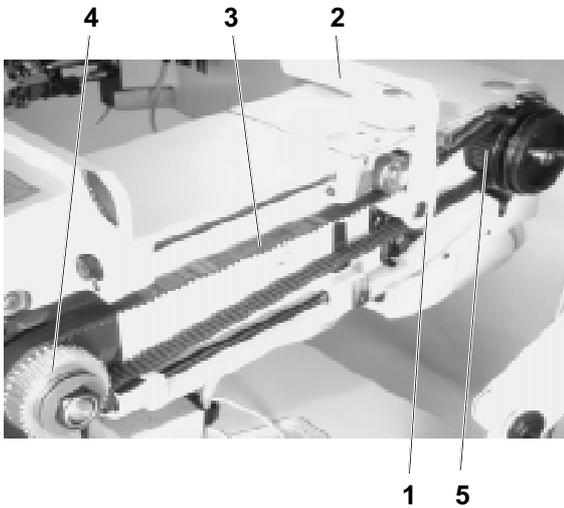

3.10.2 Replacing the indented belt

To observe: in machines with Mini-stop first remove the driving toothed belt as instructed in par. 3.12.

When replacing the indented belt, the mutual position of the pulleys (4 and 5) should be maintained.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the handwheel, the belt guard and the V-belt.
- Remove the retaining ring (1) and remove the backtacking lever (2).
- Mark with a pencil the instantaneous position of the indented pulleys against the machine head in any position.
- Remove the indented belt (3) from the bottom indented pulley (4) first, and then remove the whole belt.
- Apply a new indented belt on the top indented pulley (5) first.
- Turn both indented pulleys in the formerly marked positions and apply the indented belt on the indented pulley (4).
- Tension the belt and mount the dismantled components in the inverse order.

3.11 V-belt, motor - head


3.11.1 Tensioning



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

The belt is correctly tensioned, when the opposite sides of the belt approach one to another by up to 20 mm in applying the force of 10 N. The belt is tensioned in turning respectively the motor in its holder.

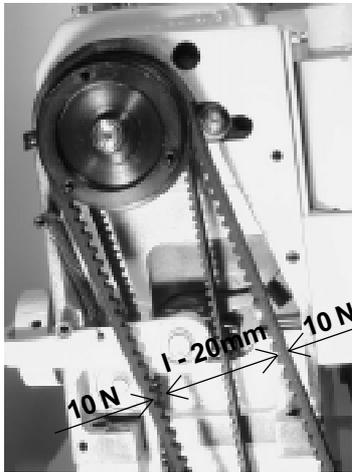


3.11.2 Replacing the V-Belt



Caution! Danger of injury!

Switch off the main switch! before starting the setting operation, wait until the motor stops!

- Loosen the screw (1) of the positioner arrest (2) and tilt the arrest.
- Unscrew the screws (3) of the handwheel.
- Unscrew the screws (4) of the belt guard and tilt the guard.
- Remove the belt guard of the motor and tilt the protections against falling out the belt from the motor pulley.
- Replace the belt.
- Tension the belt (see par. 3.11.1).

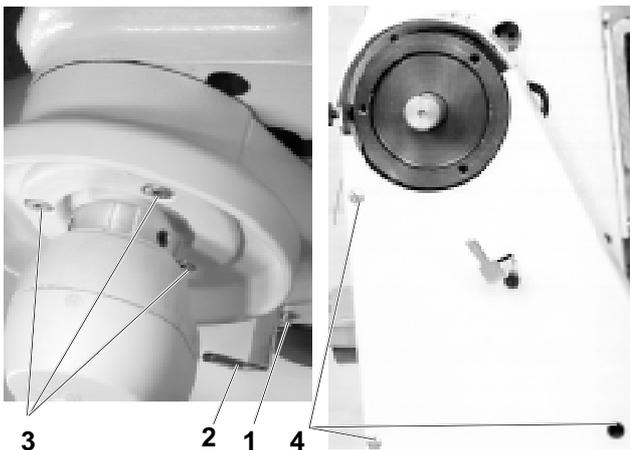

3.12 Driving toothed belt

3.12.1 To exchange the driving toothed belt




Caution! Danger of injury!

Switch off the main switch! before starting the setting operation, wait until the motor stops!

- Remove the machine head from the stand (uncouple the motor cables, the machine head cable and screw off the wood screw and the screw from the hinges).
- Remove the belt guard (1).
- Replace the belt (2).



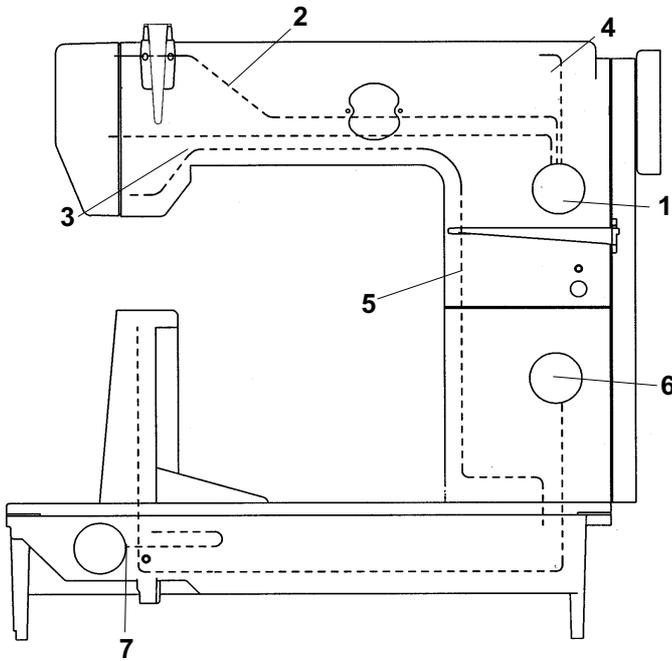


3.13 Lubrication

3.13.1 Description

From the oil tank (1) there issue three suction wicks. The wick (2) lubricates the pin of the thread mechanism, the wick (3) lubricates the needle mechanism and the wick (4) lubricates the stitch length mechanism. The superfluous oil from the needle and thread mechanisms is sucked off by the wick (5) and lubricates the shifting wedge of the feeding clutch.

The hook has its own oil reservoir (6). The driving gear of the hook is lubricated from oil tank (7).

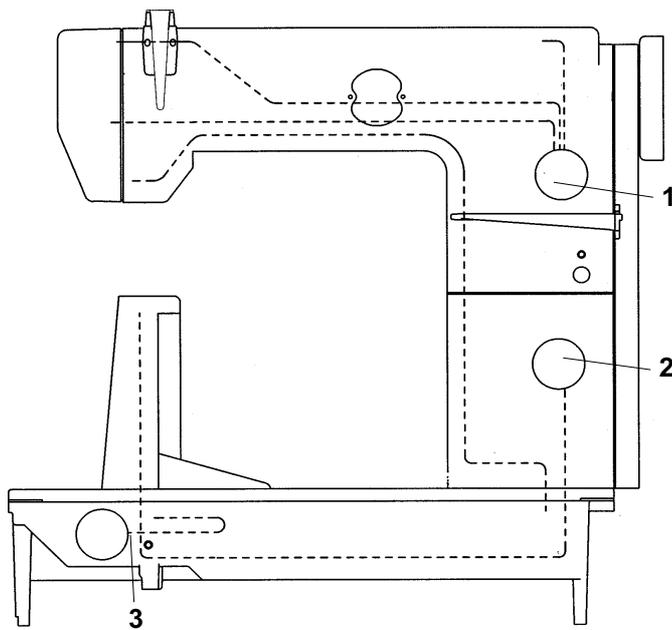

3.13.2 Refilling oil


For lubricating the machine oil Esso SP-NK 10, DA 10 is used or other oil with the same quality. When putting the machine into operation, each mechanism of the machine is to be lubricated with several drops of oil. Oil is only refilled thereafter into the oil reservoirs using an oil can into the holes in the oil level indicators.


The oil tanks (1, 2, 3) of the central distribution is to be filled up to the mark max.

3.13.3 Multiple oil use

Oil which runs into the oil cup is collected in the collector (1) and may be reused for refilling the oil reservoirs in the machine - see par. 3.13.2.

The oil collector (1) with the collected oil is unscrewed and the top part of the oil can (2) which is added in the machine packing is screwed in. Oil is then refilled into the reservoirs on the machine head and everything is put into the original condition.

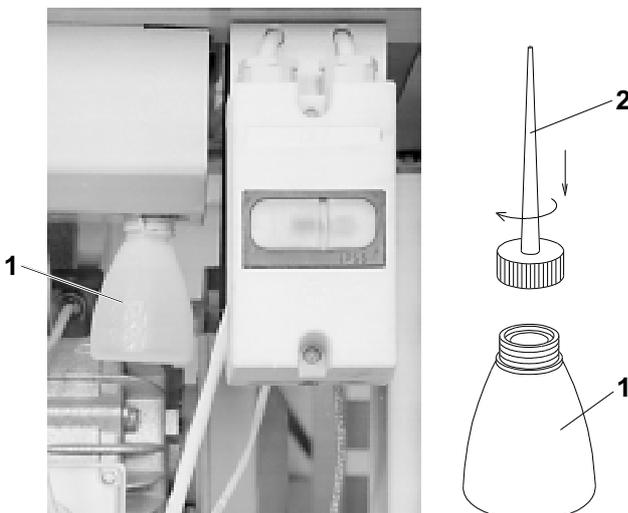

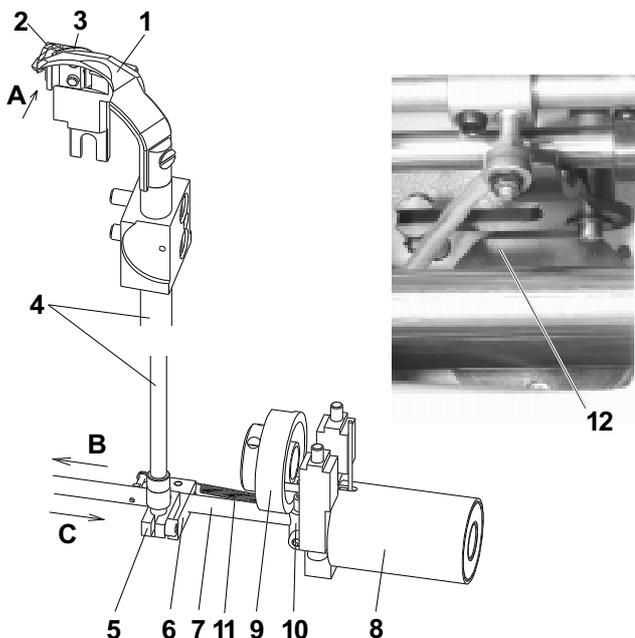

4. Thread trimming

4.1 Description of the trimming mechanism

During the trimming cycle, the moving trimming knife (1), in an opportune moment, hooks up the sewing threads and pulls them in the sense of the arrow (A) against the fixed knife (2) until the threads are trimmed. The spring (3) holds the hook thread after being trimmed off. The moving knife (1) is mounted on the shaft (4) which turns by means of the lever (5) under the effect of the fork (6) fixed on the shaft (7) which is shifted by the electromagnet (8) from its starting position in the sense of the arrow (B). When moving back in the sense of the arrow (C), the shaft (7) is shifted by the cam (9) through the pickup roller (10) into the starting position. The spring (11) maintains the mechanism in its starting position. The electromagnet (12), in an opportune moment, loosens the main tensioner. At the end of the trimming cycle, both electromagnets (8 and 12) are switched off.

4.2 Setting the pickup roller


The holder of the pickup roller (1) is to be fixed in such a way that it is positioned, in its starting position, between the shaft (2) and the shaft (3), the respective gap „A“ = 0.2 to 0.4 mm.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- With the loosened screw (4), put the holder of the pickup roller (1) up to the stop against the bracket (5) and, at the same time, the shaft (2) up to the stop against the shaft (3).
- With the holder (1) held on the stop, shift the shaft (2) in such a way that there appears the gap „A“ = 0.2 to 0.4 mm, and tighten the screw (4).
- Check the gap „A“ in shifting the armature (6).

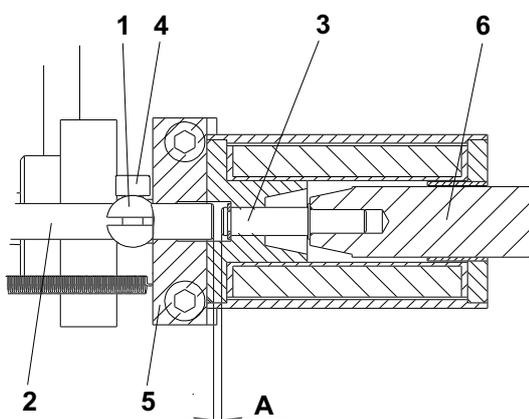

4.3 Setting the cam



The position of the cam (1) against the shaft (2) is to be such, so that when the adjusting pin is in contact with the shaft (4), the protractor scale of the handwheel (6) shows just the angle of 108°. If the pickup roller (5) is in its starting position of rest, the clearance between the roller (5) and the cam (1) should be as small as possible but sufficient to prevent the cam from getting into accidental contact with the roller.




Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the angle of 108° on the handwheel (6) and lock it with the screw (7) which is included in the accessory of the machine (tighten with care).
- Shift the pickup roller (5) in the sense of the arrow up to the stop.
- Insert the adjusting pin (3), which is included in the accessory, into the cam and turn the cam, until the pin (3) gets the contact with the shaft (4).
- Insert a gauge having the thickness of 0.1 mm between the cam (1) and the pickup roller (2) and shift the cam against the gauge up to the stop. Tighten then the screw (8).
- Loosen the blocking of the handwheel, turn a bit the cam and tighten the second fastening screw of the cam too.

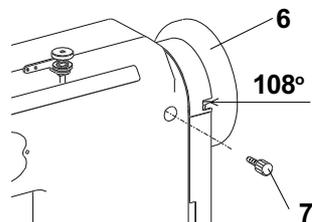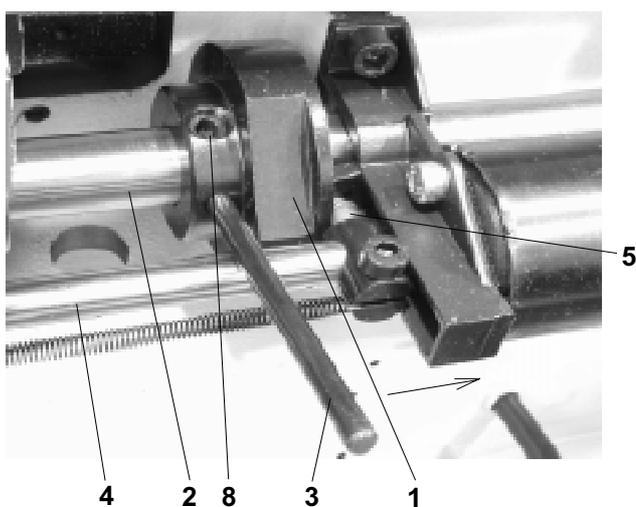

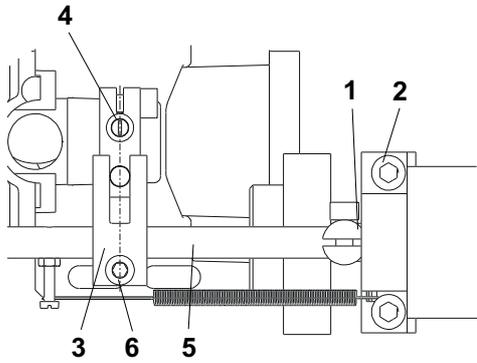

4.4 Setting the fork

In the starting position of rest of the trimming mechanism, when the holder (1) is in contact with the bracket (2), the axis of the fork (3) must intersect the axis of the shaft (4).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Shift the shaft (5), until the holder (1) strikes the bracket (2).
- Loosen the screw (6).
- Shift the fork (3) in such a way that its axis intersects the axis of the shaft (4).
- Tighten the screw (6).

4.5 Setting the moving knife

The moving trimming knife (1) is to be placed in its starting position at rest with its end at the distance of the measure „A“ = 0.1 to 0.5 mm from the edge of the fixed trimming knife (2).


The height setting is to be such that its top surface is 1.8 mm below the top surface of the throat plate.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screws (4 and 5).
- Turn the moving trimming knife (1) in the sense of the arrow and set it in height. Tighten the screw (5).
- Turn the moving trimming knife (1) into its starting position in such a way that the measure „A“ = 0.1 to 0.5 mm is attained. Tighten the screw (4).

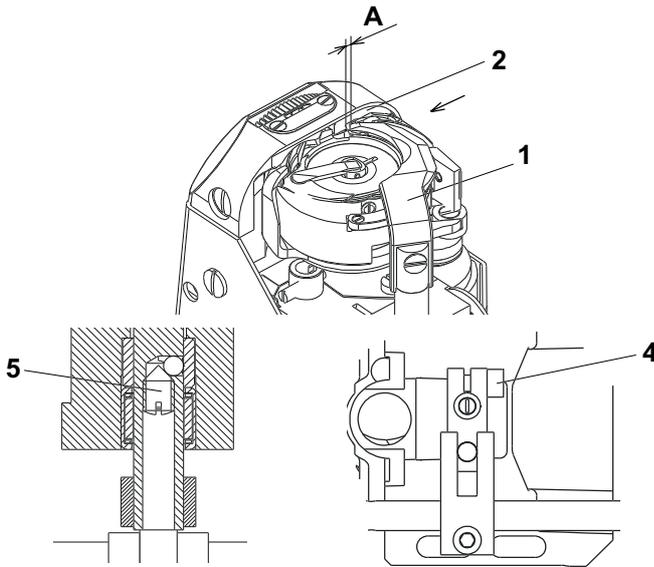

4.6 Setting the height of the fixed knife and of the retaining spring of the lower thread


The fixed knife (1) and the retaining spring (2) are fixed on the holder (3). This holder is fixed with the screw (4) on the post of the hook (5). In its height, the holder (3) is to be set in such a way, so that the top surface of the fixed knife (1) is by 1.8 mm below the top surface of the throat plate.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen the screw (4).
- In shifting the holder (3) in the hook post (5), set necessary position of 1.8 mm.
- Tighten up the screw (4), check the correct setting.

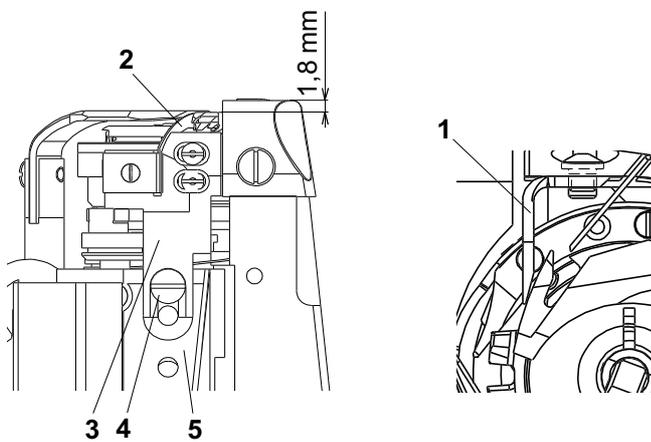

4.7 Setting the fixed knife


The fixed trimming knife (1) is to be tensed up using the screw (2) in such a way, so that it bears against the moving trimming knife in the 1/2 of its length. The knives need not to trim untensioned threads.




Caution! Danger of injury!

Switch off the main switch. Before starting the setting operation, wait until the motor stops!

- Set the angle of 300° on the handwheel (4).
- Shift by hand the moving knife (3) into the marked position.
- Loosen the screw (2) by hand, in shifting the fixed knife (1) set its position, tighten then the screws (2).
- Check the bearing spot of the moving trimming knife (3) on the fixed trimming knife (1) and give it a correction, if needed.

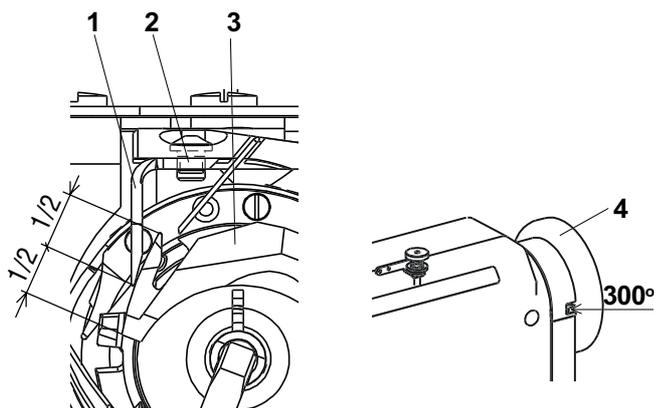

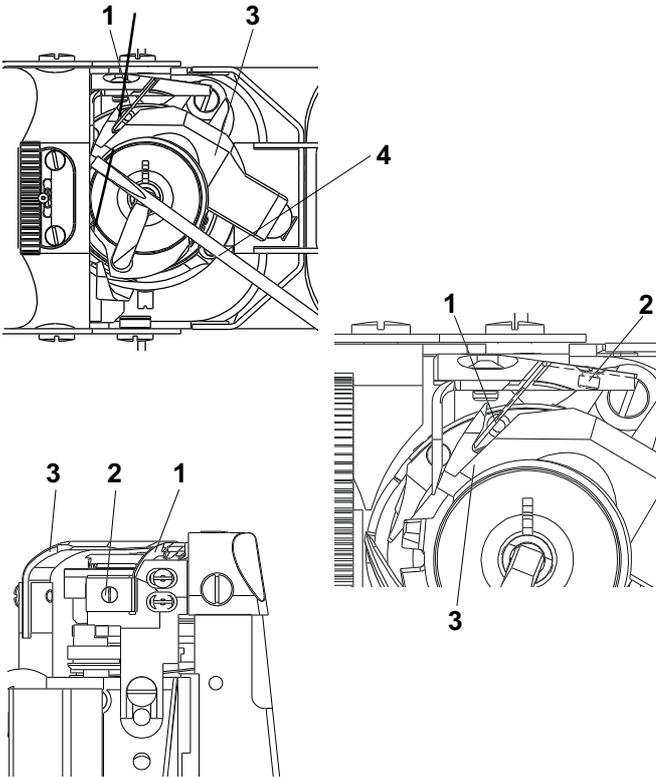

4.8 Setting the retaining spring of the hook thread

The retaining spring (1) holds the hook thread after having performed the trimming. It is to be set in such a way that the force necessary for pulling out the thread from the retaining spring (1) is approximately equal to the force necessary for pulling out the thread from the hook.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!


- Shape the retaining spring (1) in such a way that it fits close with all its surface (without wedge) onto the moving trimming knife (3).
- Shape the retaining spring in such a way that it fits close, with the slightly tightened screw (2), onto the moving trimming knife without any pressure.
- Tighten the screw (2), until the necessary force for pulling the thread from the retaining spring is attained. The pulling force is tested using a screwdriver (4) according to the illustration.



Caution!

The setting of the retaining spring (1) depends on the setting of the hook thread tension and differs then according to the respective sewing category.





The adjusting screw (2) should not be screwed in in such a way that the retaining spring gets over the perimeter of the moving trimming knife.

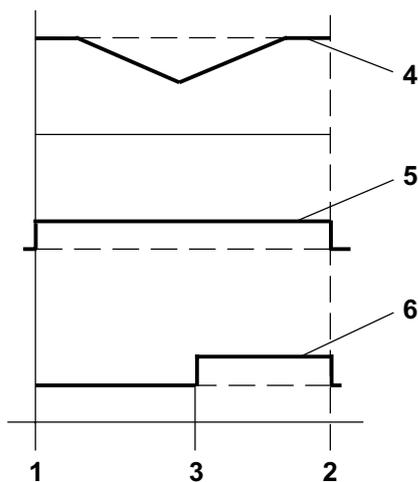

4.9 Setting the switching of electromagnets

The electromagnets of the trimming device and loosening of the tensioner must work in accordance with the diagram. This is ensured by setting the stopmotor (see the instructions for use of the stopmotor).

- 1 - 1. position of the needle (135° on the handwheel);
- 2 - 2. position of the needle (64° on the handwheel)
- 3 - position of stopping the tensioner ($10^\circ \div 25^\circ$ on the hand-wheel)
- 4 - movement of the pickup roller of the trimmer cam
- 5 - current of the trimming device electromagnet
- 6 - current of the tensioner loosening electromagnet

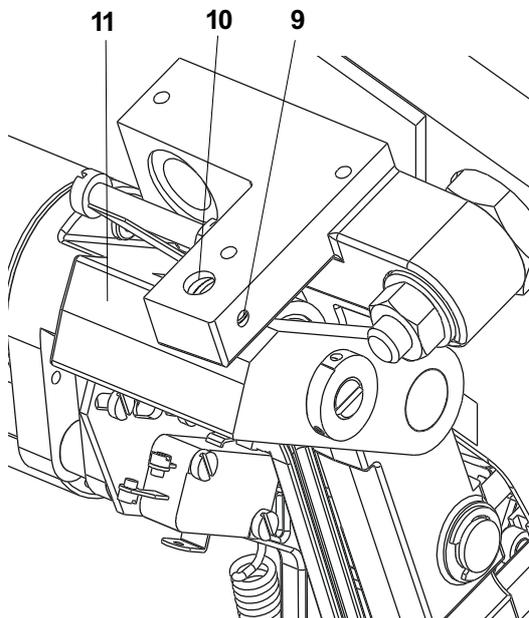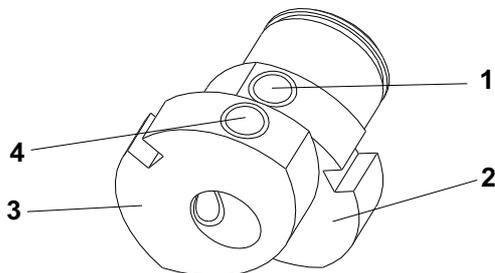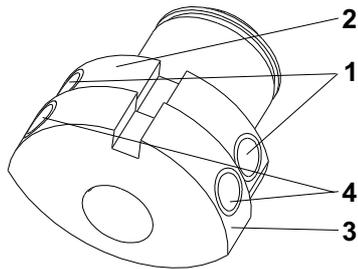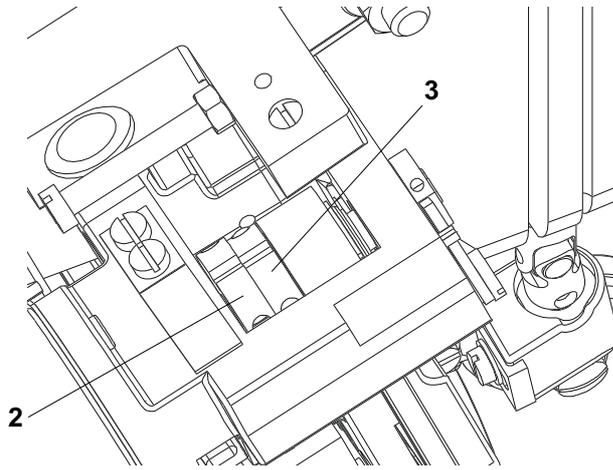

5. Material trimming

5.1 Setting of the eccentrics (basic) for the knives "A" and „C“

For the knives "A" and „C“, the mutual orientation of the eccentrics (2, 3) should be such, so that their counterweights are in alignment (this refers to the largest possible stroke of the knife = 2,4 mm).



Caution Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the trimming device guard.
- Loosen the screws (1).
- Set the eccentrics (2, 3) in such a way, so that both screws (1, 4) are oriented in the same way.
- Tighten the screws (1).
- Attach the trimming device guard.
- Check the setting of the knife (see Instruction manual, par. 6.15).

5.2 Setting of the eccentrics for the knife "B"

For the knife "B", the counterweights of the eccentrics are to be mutually oriented by 120° (this corresponds to the knife stroke of 1.2 mm).



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops.

- Remove the trimming device guard.
- Loosen the screws (1).
- Set the eccentrics (2, 3) in such a way, so that only one screw (1, 4) is oriented in the same way.
- Tighten the screws (1).
- Attach the trimming device guard.
- Check the setting of the knife (see Instruction manual, par. 6.15).

5.3 Setting of the stop screw

The stop screw (10) is to be duly screwed in, but in such a way, so that there occurs no spontaneous trimming device switching off .





Caution! Danger of injury!

Switch off the main switch: Before starting the setting operation, wait until the motor stops!

- Remove the trimming device guard.
- Screw in duly the screw (10) but in such a way, so that the trimming device, when being switched on, could not be switched off when depressing the holder (11) and so that, at the same time, there occurs no clearance between the holder (11) and the screw (10) when being switched on.
- Tighten the screw (9).
- Attach the guard.
- Check the setting of the knife (see Instruction manual, par. 6.15).



The trimming knife, in its bottom dead centre, must not strike with its cutting edge in the throat plate insert. In its top dead centre, it should not leave the throat plate insert.

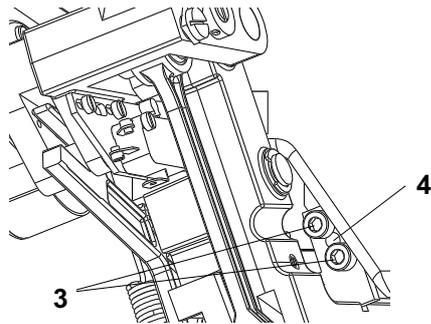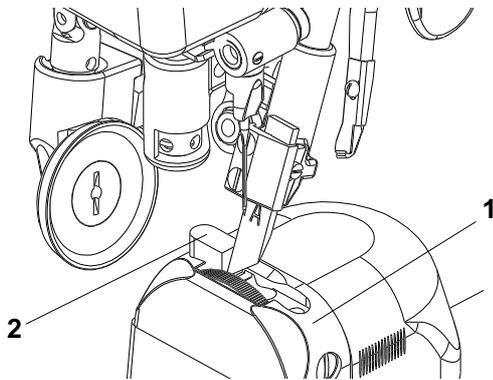

5.4 Setting of the knife position in the direction of sewing

The forcing off screw (4) for setting the position of the trimming device body is to be so screwed in, so that the knife touches the rear edge of the gauge (2) supplied together with the machine.



Caution! Danger of injury!

Switch off the main switch. Before starting the setting operation wait until the motor stops!

- Remove the throat plate insert, see par. 3.3.2.
- Put back the throat plate (1).
- Slide in the gauge (2) into the hole for the throat plate insert and push it up to its rear edge.
- Engage with care the trimming device.
- Using the screws (3,4), set the knife in such a way, so that it slightly touches the gauge with its rear edge.
- Disengage the trimming device.
- Tighten up the screws (3).
- Engage with care the trimming device and check its setting.
- Attach the throat plate insert, see par. 3.3.2.
- Check the knife setting, see Instruction manual, par. 6.15.



The cutting knife must not strike, in its bottom dead centre, with its cutting edge in the throat plate insert. In its top dead centre, the trimming knife must not leave the throat plate insert.

5.5 Setting of the knife side position (against the cutting edge of the throat plate insert)



For a precise setting, a magnifying glass is to be used.

For correct function of the trimming device, for a long service life of the knife and of the insert, it is necessary that the knife and the cutting edge of the insert are parallel and that there is no clearance between them and that the knife is not excessively pushed against the throat plate insert.

5.5.1 Setting of the lateral knife position to the sides



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- When engaging the trimming device, check the parallelism of the knife and of the cutting edge of the throat plate insert. When needed, carry out the necessary setting according to the par. 5.5.2.
- Loosen the screw (1) and, thereafter, tighten it slightly.
- Engage the trimming device.
- Set the knife using the screw (2) with regard to the throat plate insert in such a way, so that they touch slightly one another. (In loosening the screw (2), the knife approaches the throat plate insert and in tightening it, the knife moves away from the throat plate insert).
- Tighten up the screw (1).
- Tighten up the screw (2) by about 1/4 revolution in such a way, so that the thread clearance is taken up.
- Disengage and engage with care the trimming device.
- When the knife approaches slightly the edge of the throat plate insert, go ahead further, when this runs with difficulty, or when the knife bends, repeat anew the previous procedure.
- Disengage the trimming device.
- Switch on the machine.
- Engage with care the trimming device.



Caution! Danger of accident!


With the trimming device engaged, do not put your fingers under the trimming knife.

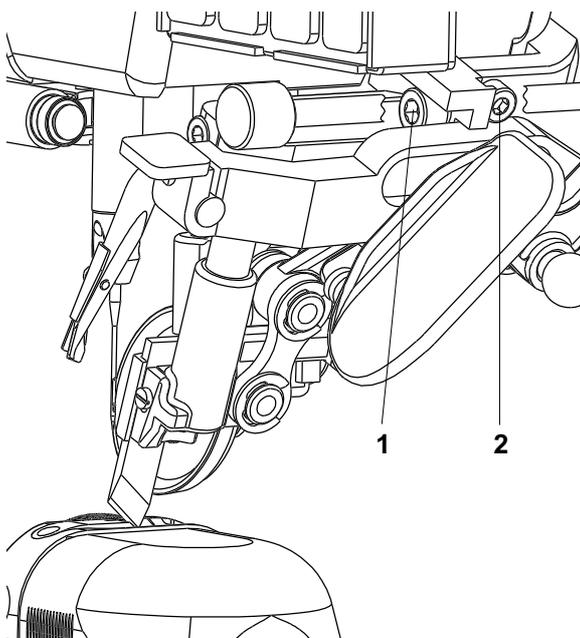

- When during the approach of the knife against the throat plate insert edge there occurs a marked increase of noise, tighten slightly the screw (2) in such a way, so that the knife, when being engaged, approaches slightly in eliminating almost the noise and, at the same time, there occurs no clearance between the knife and the throat plate insert.



With an unsuitable setting or when tightening insufficiently the screw (1), the knife, the throat plate may be damaged or the trimming device may function incorrectly.

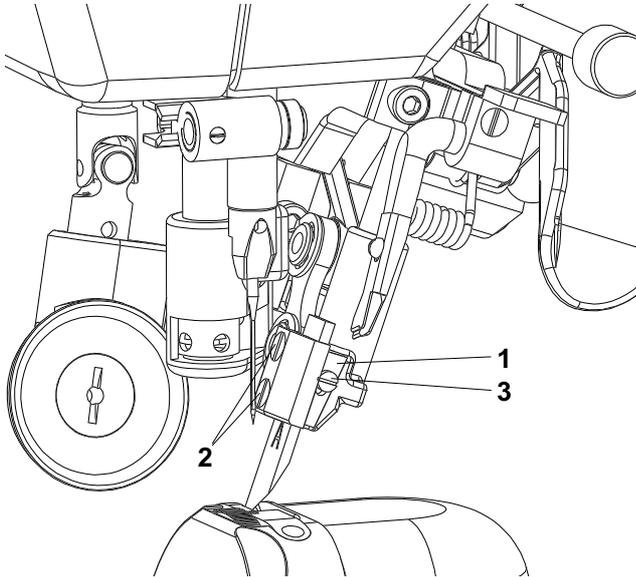

5.5.2 Setting of the knife angle with regard to the throat plate insert (crossing)

For setting the parallelism (crossing) of the knife and the throat plate insert cutting edge there serves the wedge (1).




Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Loosen slightly the screws (2) to loosen the trimming knife.
- Loosen the screw (3).
- Shift the wedge (1) upwards or downwards in such a way, so that when tightening the screws (2), the knife is parallel to the cutting edge of the throat plate insert. Exceptionally, for some specific materials, a slight crossing of the knife may be set, but this causes also an increased wear of the knife and of the throat plate insert).
- Tighten the screw (3).
- Proceed to the setting of the knife, see Instruction manual, par. 6.15.



When incorrectly setting the knife, the knife or the throat plate insert may be damaged or, eventually, a wrong function of the trimming device may occur.

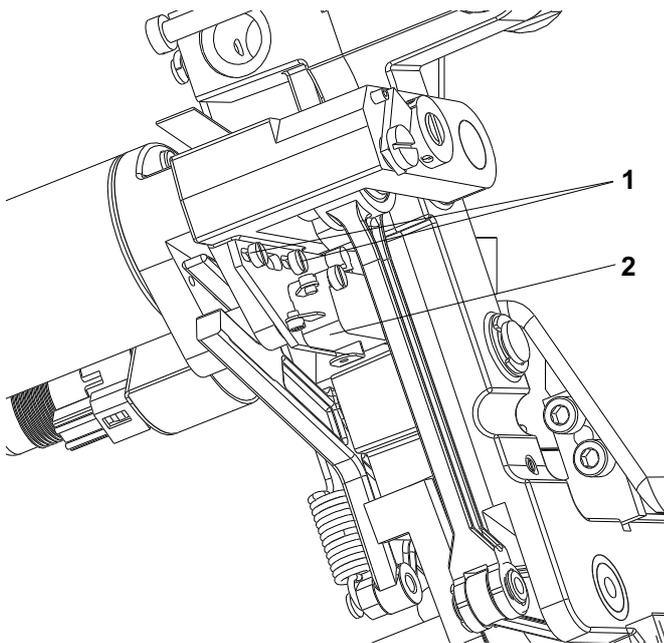

5.6 Setting of the microswitch of trimming device motor switching-on

The microswitch of the trimming device motor switching-on is to be switched on prior to its contact with the trimmed material of the maximum thickness of 5 mm, when the knife is in the bottom dead center of its oscillating movement.



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the trimming device guard.
- Loosen the screws (1).
- Shift the microswitch (2) in such a way, so that the trimming device is engaged with the knife positioned 5 mm above the throat plate insert in the bottom dead centre of the knife.
- Tighten the screws (1).
- Attach the trimming device guard.

5.7 Sharpening of knives

Together with the machine, knives of various shapes of sintered carbides or of tool steel in accordance with the respective table 3b, Instruction manual, par. 5 are supplied.

Knives of sintered carbides may be sharpened only in the manufacturing factory.

Knives of steel can be sharpened using a jig, which is to be ordered under the ordering number M 269.

5.7.1 Hand sharpening (stoning) of the knives

Only knives without any crumbled cutting edge may be hand stoned.



Caution!

Danger of injury by the knife cutting edge when handling or stoning it.

- Clamp the knife into the jig (1) in such a way, so that the cutting edge (2) is aligned with the side surface of the jig (3), tighten the screw (4), then the screw (5).
- Place the jig (A) on the grinding stone (B) in such a way, so that the cutting edge and both wheels lie thereon. Thereafter, in moving forward and rearward, under a slight pressure, stone the cutting edge of the knife.

5.7.2 Machine sharpening of the knives

For the machine sharpening, the same jig is to be used as for the hand sharpening. Sharpening is to be done on any grinding machine in parallel with the bottom side of the jig. Hereinafter, sharpening on a flat horizontal grinding machine with magnetic clamping is described. Such grinding machine is a normal outfit of many engineering plants or grinding shops.



Caution!

Danger of injury by the knife cutting edge when handling or sharpening it.

- Clamp the knife into the jig (1) in such a way, so that the cutting edge (2) is aligned with the side surface of the jig (3), tighten the screw (4), then the screw (5).
- Clamp the jig (A) on the magnetic table of the grinding machine (B) and sharpen the cutting edge,
- Sharpen the bevel of 1.2 mm; 45° according to the illustration.



When sharpening the knife, a sufficient cooling is to be used, otherwise, excessive heating of the sharpening edge and so the destruction of the whole knife would occur.

6. Lifting the top roller by electromagnet

6.1 Description

The core of the electromagnet, respectively its pin must be set in such a way that the presser foot lifting is enabled.



6.2 Setting the electromagnet pin



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Unscrew the cap of the core (1) of the electromagnet.
- Shift the core (2) with the pin (3) and unscrew the locking screw (4).
- Unscrew the pin (3) in the core (2) in the "A" direction up to the stop.
- Push the core (2) into the magnet (5) in the "B" direction up to the stop.
- In this position, set the maximum top roller lifting in the "B" direction.
- Screw on and tighten the arresting screw (4).
- Screw on the cap (1).

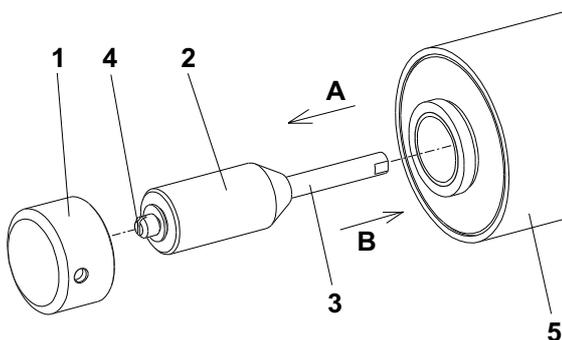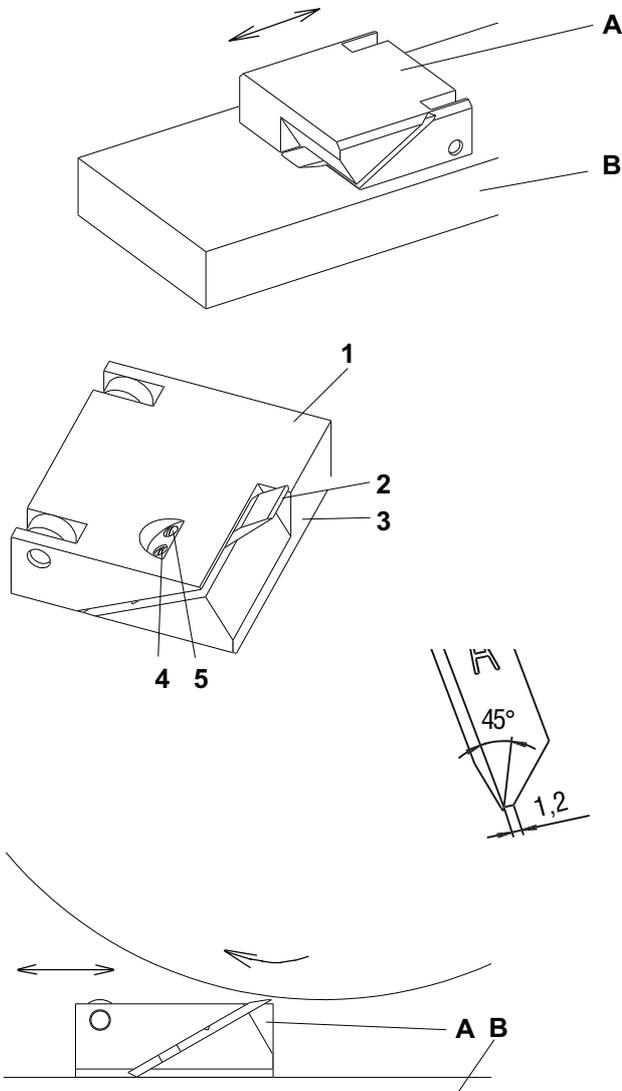


6.3 Setting the electromagnet current

The time response of the current of electromag. has 2 phases:

- initial switching on (0,2 ÷ 0,5 s) - the maximum force
- maintaining (when keying)



It is necessary to set max. 40 % of keying (see instructions for use of the stopmotor). With a higher value thereof and with a long period of the presser foot in its lifted position there is a danger of electromagnet overheating.

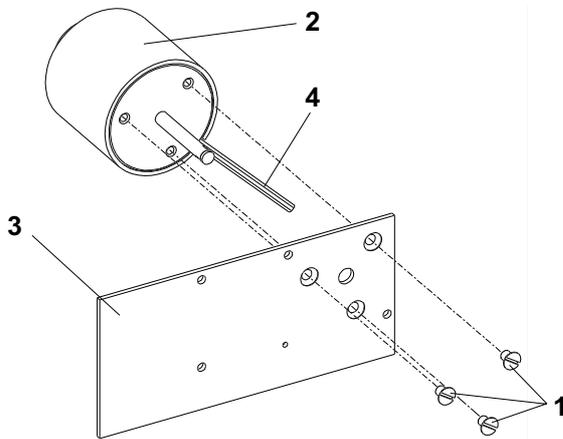

6.4 Assembly of the top roller lifting electromagnet



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Remove the rear guard (3).
- Using the screws (1), fasten the electromagnet(2) on the rear guard(3) with the given orientation of the outlet cable(4).
- Mount the rear guard (3).
- Connect the outlet cable (see par. 8).
- Set the pin of the electromagnet (see par. 6.2).
- Set the current of the electromagnet (see par. 6.3).

7. Backtacking using electromagnet

7.1 Description

The position of the electromagnet with regard to the backtacking lever must be set in such a way that it enables the maximum stitch length when sewing in forward and in rearward sense. If this position is not correct, the length of the stitch will be shortened in one or the other feed direction.

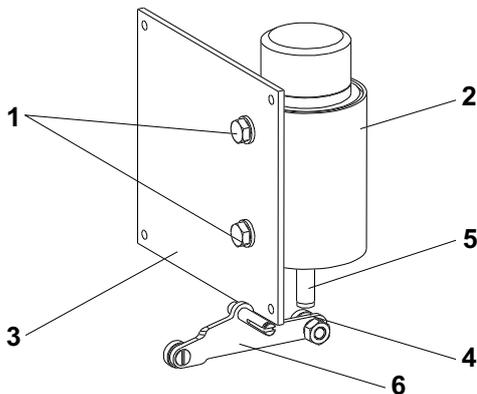

7.2 Electromagnet height setting



Caution! Danger of injury!

Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- Set the position of the electromagnet (2) in the upper position of the grooves of the guard (3).
- Proceed to the mounting of the guard (3) with the magnet on the machine head.
- Set the maximum stitch length and push the reverse stitching lever into its bottom position (as with the reverse stitching operation).
- In this position, the bar (5) must be in contact with the roller (4) of the lever (6). Otherwise shift the electric magnet (2) in the grooves of the guard (3).


7.3 Setting the position of push-buttons



Caution! Danger of injury!


Switch off the main switch! Before starting the setting operation, wait until the motor stops!

- By loosening the screws (1), it is possible to set the position of the holder of the push-buttons (2) in the sense of sewing.

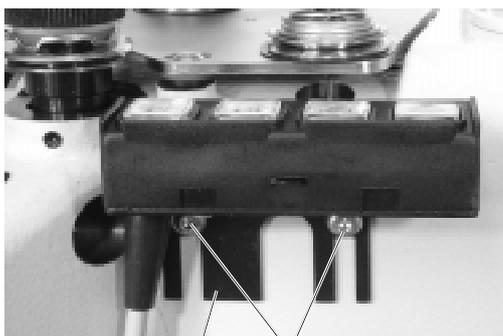

7.4 Change of the function of push-buttons

The Function of the push-buttons can be changed in accordance with the possibilities given by the stopmotor (see instruction for use of stopmotor).

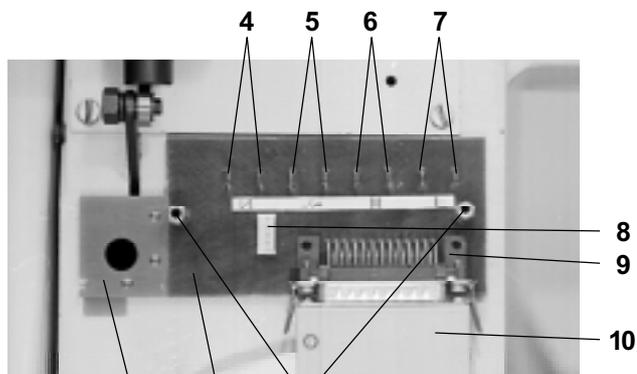


8. Connecting the electric elements on the machine head

The connection of the electric elements (electromagnets, backtacking, presser foot lifting, thread trimming, loosening of the tensioner and push-buttons) is made by means of a switchboard (1) fixed with its supporting plate (2) on the rear side of the head by means of two distance screws (3) (In the Fig., these electric elements are disconnected).

Connecting spots :

- 4 - backtacking electromagnet
- 5 - trimming electromagnet
- 6 - tensioner loosening electromagnet
- 7 - presser foot lifting electromagnet
- 8 - connector of push-button connecting
- 9 - connector of coupling the head with the stopmotor
- 10 - connecting cable of the head and stopmotor

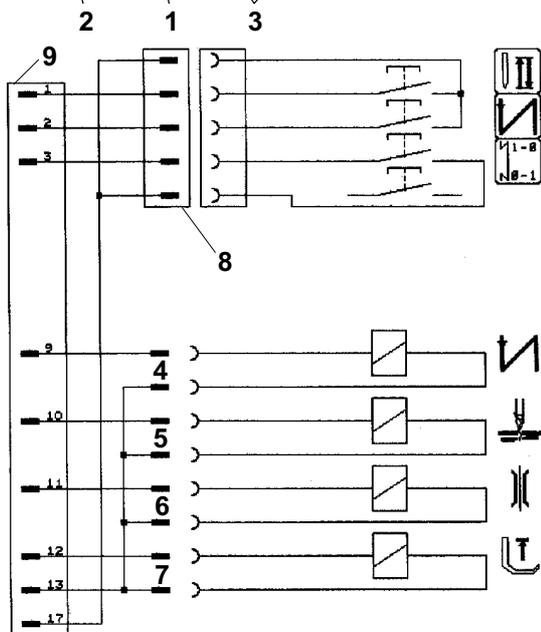

Wiring diagram of connecting the electric elements of the machine head.

9. Drive, control panel, position sensor

For machines provided with an oblique trimming device and with the EFKA stop motor DA82GA, 6F82FA and DA320, the connector outlet A28 (used for needle cooling as a standard) for controlling the trimming device motor is being used, which is being switched on only when sewing. After having ended the sewing operation, it is switched off with an adjustable delay of 0-5 s (parameter 183).

The detailed information concerning the drive, the control panel and the setting of the position sensor is given in the manual of the drive and of the control panel.

10. Maintenance



Caution! Danger of injury!

The maintenance operations should be performed only with the machine switched off and with the motor stopped!

In the following table there are given the operations which should be performed and the respective time intervals between the individual operations.

| Operation | Time interval |
|--|---------------|
| Removal of the throat plate and its cleaning out. Cleaning out of the wheel feeder, hook and their surrounding space. Removal of the residues of material and threads from the top roller. | 1 day |
| Checking the oil level in oil reservoirs. | 1 month |
| Checking the hook wear. Checking the function of the safety clutch against the hook overload. | 6 months |
| Checking the V-belt and the indented belts. | 1 year |

11. Setting the machine according to the sewing category

11.1 Introduction

The sewing machine enables sewing within the extent from the light to medium heavy-duty sewing. The setting of the machine must be adapted to the sewing parameters including also replacement of some components, such as e.g. needle, the throat plate insert. For this reason, the setting of the machine is divided into 3 categories:

- 1 ... light sewing
- 2 ... medium sewing
- 3 ... medium heavy-duty sewing

In the factory, where this machine has been manufactured, the machine has been set with respect to the standard parameters of the required sewing category which is designed by the number included in the commercial designation of the machine. If the user desires changing the given setting to another sewing category, this operation should be performed by a specialized mechanician.

The standard parameters of sewing are described in the following paragraph. The actual parameters of sewing inside the given sewing category may be different, which means that the machine operative must adapt respectively the setting of the machine, e.g. the tension of the upper thread.

11.2 Table of setting the machine according to the sewing category

Commercial designation of the machine 4182i - 1XX - X

| Sewing category | Standard sewing parameters | | | | | Standard machine setting ¹⁾ | | | | | | | | |
|-----------------|---|---|---|---|---|---|---|---|---|---|--|---|------------------------------|-------------------|
| | Thickness of one material layer 2) | Number of material layers | Stitch length | Label number of thread PES | Distance between the needle axis and the work | Needle size 5) | Sewing speed | Position of feeding lever pin | Width of needle plate insert | Feeder - pitch of teeth hole 6) | Presser top roller diameter | Presser top roller position | Thread tension ³⁾ | |
| | | | | | | | | | | | | | needle thread | hook thread 4) |
| |  |  |  |  | |  |  |  |  |  |  |  | | |
| | mm | | mm | | mm | 0,01mm | SPM | | mm | mm | mm | mm | N | N |
| -100 | 0,8 | 2 | 1,7 | 70 | 0,8 | 80 | 2500 | 1 | 1,2 | 0,4 | 35 | 10,5 | 3 | 1 |
| -200 | 1 | 2 | 2,2 2,5 | 40 | 1,2 | 100 | 2500 | 1 | 1,5 | 0,4 | 35 | 10,5 | 4,5 | 1,5 |
| -300 | 1,5 | 1-2 | 3,5 | 20 | 1,5 | 130 | 1600 | 1 | 2 | 0,6 | 35 | 10,5 | 5 - 8 | 2 |

| Setting as per chapter | Instructions for service | | | | 3.5.3.1.2 | 3.3.2 | 3.5.3.2.2 | 3.6.6.1 | 3.6.6.2 | | |
|-----------------------------|--------------------------|-----|-----|-----|-----------|-------|-----------|---------|---------|-----|-----|
| Instructions manual | 3.2 | 6.5 | | | | | | | | 6.4 | 6.4 |
| Instructions for assembling | | | 2.4 | 4.5 | | | | | | | |

- 1) The standard setting of the machine for the category 3 concerns a decorative stitching, when it is difficult to match a good stitch interlocking with a faultless function of the thread trimming device. Otherwise, when sewing material of considerable overall thickness, it will be necessary to increase the overtopping of the teeth above the needle plate and to increase also the needle thread tension.
- 2) The thickness of a layer is measured using an engineer slide calliper with the pressure of jaws of about 10 N.
- 3) The values of tension are only orientative ones and it is necessary to adapt especially the tension of the hook thread according to the stiffness of the material. An excessive tension of the threads when sewing soft materials causes material wrinkling.
- 4) When changing markedly the sewing category together with changing the tension of the hook thread, it is necessary to modify the tension of the retaining spring of the trimming device according to the paragraph 4.8.
- 5) When changing markedly the sewing category together with a marked change of the needle number, it is necessary to correct the setting of the distance of the hook from the needle, according to the paragraph 3.1.3.
- 6) There are in use various types of feeders with the purpose of avoiding imprinting the teeth in the lining leather. Otherwise, it is possible to use any feeder.